

ACU-CABTM

ULTIMATE OVERLAND PRODUCTS

FITMENT INSTRUCTIONS

SILENUS - SHOWER CUBE

DISCLAIMER

Preliminary information

All rights reserved. No part of this document may be reproduced, translated, stored in a retrieval system. Or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instruction information carefully before installation.

Any damages, direct or indirect to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer.

Due to the various application and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip. If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

This fitment instruction is applicable to all variations of Front Filler Kits, take note of which steps are applicable to a specific model.



Service Enquiries email
queries@alu-cab.com

Installation Instructions

The tables below show the equipment, i.e. tools and fasteners required to install the **SILENUS - SHOWER CUBE**

Tools & Items Required
13mm Ratchet Spanner
13mm Socket and Socket Wrench



Fasteners Supplied	Qty
M8x20 HEX BOLT S/S	8
M8x16mm FLAT WASHER S/S	8
M8 NYLOC NUT S/S	8
NUT CAP - 8mm	8


Please be sure to lay out all parts provided on a table or flat surface in order to check that all required parts are accounted for and prevent potential frustration at a later stage.

Installation Instructions

STEP
0

Shower Cube brackets utilize the double-nut-slot mounting points. It is advised to install the Shower Cube towards the rear of the vehicle.

Lay out the Alu-Cab Shower Cube, brackets and fasteners to ensure that all the parts are accounted for:

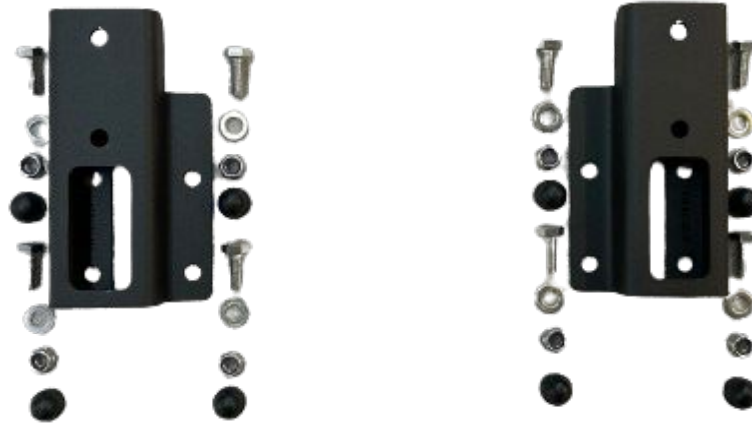

Installation Instructions

STEP
1

Identify the M8x20 Hex bolts in the fastener pack. Insert 4 x M8x20 bolts in the Shower Cube bracket as shown below.

Fit the M8 Washer and M8 Nyloc Nut from the inside of the bracket.

- Hand tighten the M8 Nylock Nut only, do not torque.



Installation Instructions

STEP
2

Identify the M8 Bolts on the Shower Cube.

Remove the M8 Nut-Cap, M8 Nyloc Nut and M8 Washer. Set the fasteners aside for later re-use.



Installation Instructions

STEP
3

Install the pre-assembled Shower Cube bracket and fasteners onto the Shower Cube M8 Bolts that were exposed in Step 2.

Re-use the M8 Washer, M8 Nyloc Nut and M8 Nut-Cap, from Step 2 to secure the Bracket to the Shower Cube.

- Ensure that the bracket flange is facing inward, towards each other.



Installation Instructions

STEP
4

The Shower Cube and bracket assembly is now ready for fitment to Silenus.

Slide the M8 Hex Bolts into the corresponding double-nut-slot mounting point on the base of Silenus and centre the Shower Cube.

- Take precaution to align the M8 Hex Bolt head with the double-nut-slot to ensure smooth installation.

Tighten the M8 Nyloc Nut to a max. 16 N.m. torque setting. Install M8 Nut Cap on all M8 Nyloc Nuts after torque specification is reached.



Installation Instructions

STEP
5

Inspect the installation to ensure that all the fasteners are tightened and a nut-cap has been installed.

Open the Shower Cube to ensure that there is no interference with the vehicle of any kind.

- Once operation of the Shower Cube has been tested and validated, it can be stowed away and closed.

This installation is complete and is ready for use.



DISCLAIMER



All rights reserved. No part of this website may be reproduced, translated, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of the owner.

Review all instructions information carefully before installation.

Any damages, direct or incidental to the installer and/or property due to incorrect installation of any parts are the responsibility of the installer. Due to the various applications and fitment options available, the responsibility lies with the user to ensure all mounting points are secure and tight before every trip.

If unsure, consult with your Distributor regarding the operations of our products.

Users are advised to be mindful of the load they are carrying and drive in accordance with road conditions.

WARNING

Always wear appropriate PPE (Personal protection equipment) when fitting our products. Although the mounting kit is designed to be DIY, if you have any doubts or concerns, contact an accredited fitment centre to carry out the work. Alu-Cab will not be liable for any injury to persons, and/or damage to products and/or vehicles.

While Alu-Cab Holdings takes reasonable measures to ensure that the contents of this Website are accurate and complete, Alu-Cab Holdings makes no representations or warranties, whether express or implied, as to the quality, timeliness, operation, integrity, availability or functionality of this Website or as to the accuracy, completeness or reliability of any information on this Website. Alu-Cab Holdings reserves the right to make changes, corrections and/or improvements to the information and to the products and programs described in such information, at any time without notice.

Alu-Cab Holdings will use reasonable endeavours to maintain the availability of the Website, except during scheduled maintenance periods, and reserves the right to discontinue providing the Website or the service or any part thereof with or without notice to you. Any person who accesses this Website or relies on this Website or on the information contained in this Website does so at his or her own risk.

Occasionally, at our discretion, we may include or offer third-party products or services on our website. These third-party sites have separate and independent privacy policies. We therefore have no responsibility or liability for the content and activities of these linked sites. Nonetheless, we seek to protect the integrity of our site and welcome any feedback about these sites.