

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

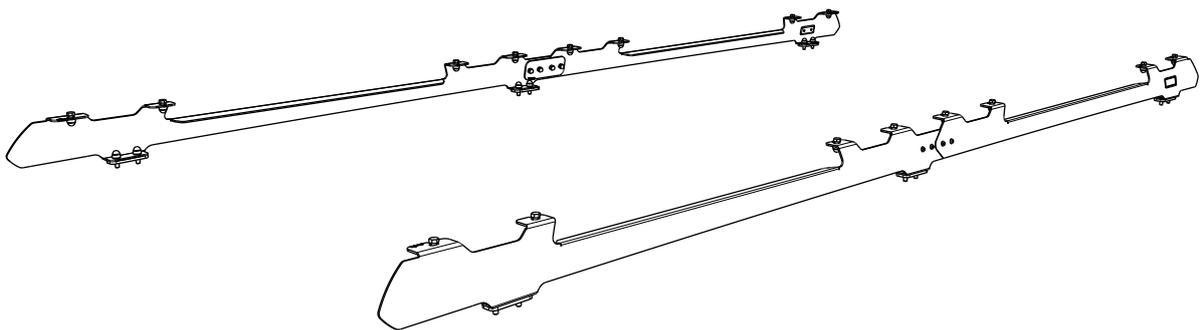

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	2 X	Foot Rail Rear 1LH & 1RH
2	2 X	Foot Rail Front 1LH & 1RH
3	2 X	Joiner Plate
4	6 X	Spacer 6mm
5	12 X	M8 x 30 Hex Bolt
6	12 X	M8 x 19 x 2 Flat Washer
7	16 X	M8 x 20 Hex Bolt
8	16 X	M8 x 16 x 1.6 Flat Washer
9	16 X	M8 Nyloc Nut
10	28 X	M8 Nut Cap
11	8 X	M6 x 16 Button Head Bolt
12	8 X	M6 Nyloc Nut
13	8 X	M6 Nut Cap

TOOLS NEEDED




FIGURE 1.1

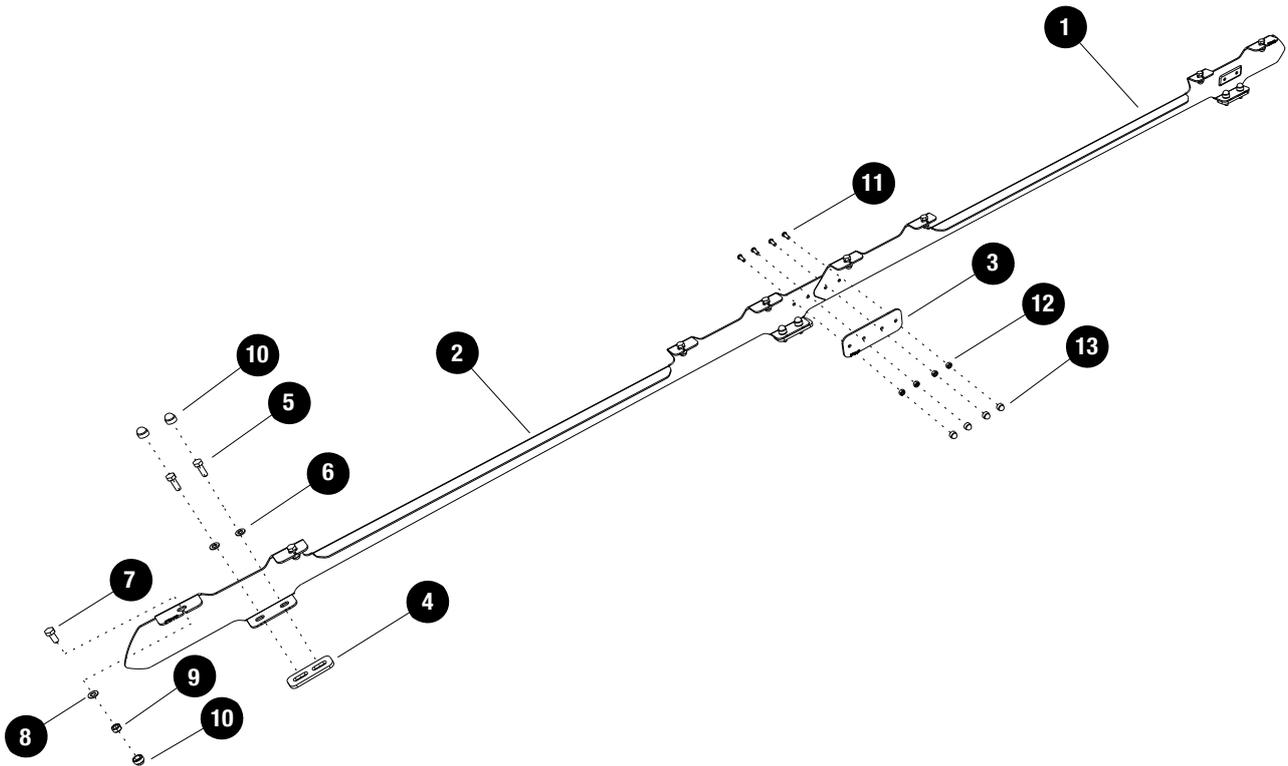

2**FIT AND SECURE**

2.1

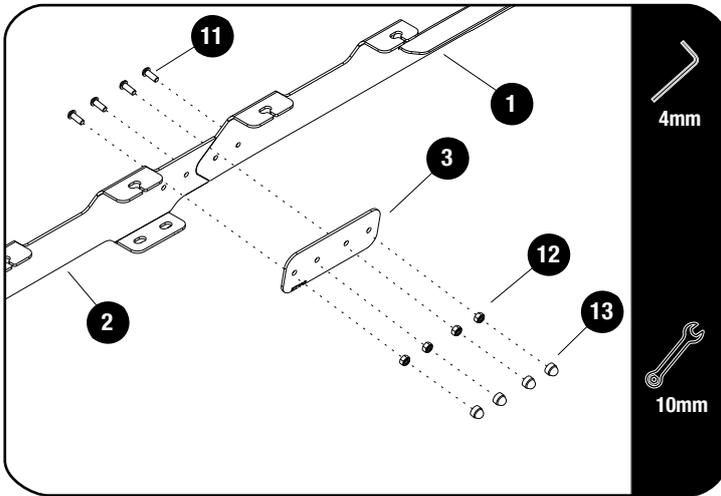
**Tightening Torque:****M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb**

Assemble the Front and Rear Foot Rails (Items 1 & 2) using the Joiner Plate (Item 3), M6 x 16 Button Head Bolt and M6 Nyloc Nuts (Items 10 & 11)

Do this on both left and right foot rails.

Fully tighten before placing M6 Nut Caps (Item 13) over all Nyloc Nuts.

2.2

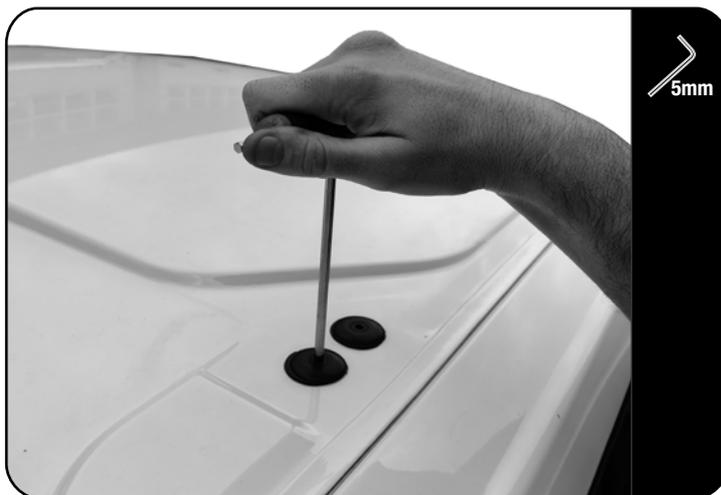


Remove the factory fitted screw caps & rubber washers.



Store plastic screw caps & rubber washers in a safe place for future use.

2.3

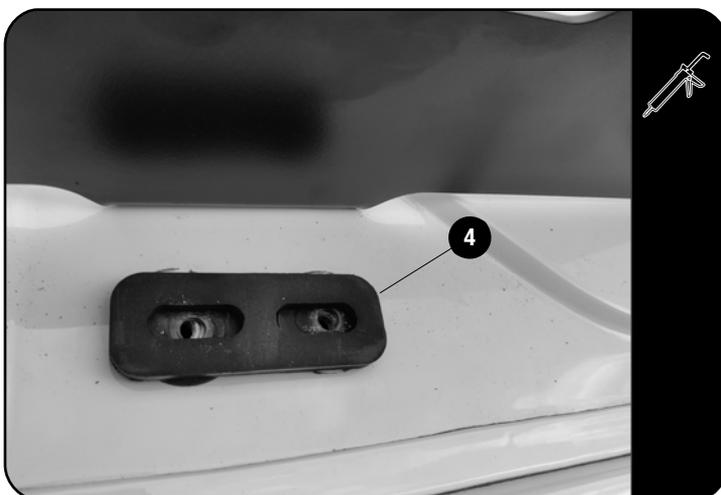

Apply a bead of silicon in and around each mounting hole.


Place the Spacers (Items 4) as shown into the roof where the screw caps was removed in 2.2.

Do this on all six mounting points.

2

FIT AND SECURE

2.4

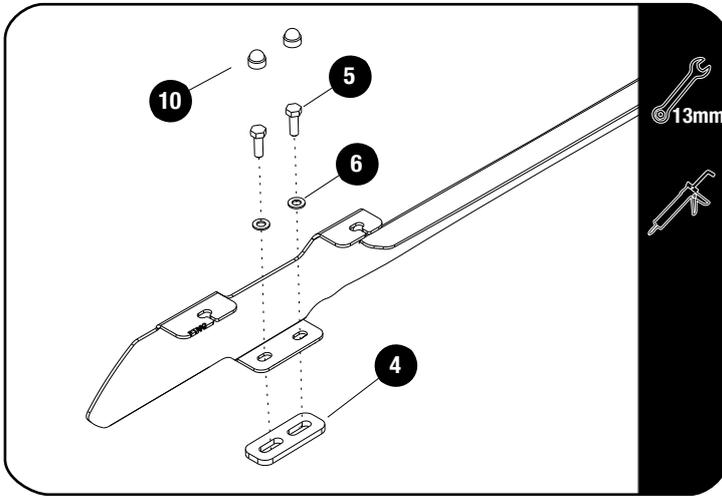

Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb



Secure both Foot Rail assemblies from 2.1 to the vehicle using M8 x 30 Hex Bolts and M8 x 19 x 2 Flat Washers (Items 5 & 6) as shown.

Fully tighten before placing M8 Nut Caps (Item 10) over all Nyloc Nuts.

3


FIT AND SECURE

3.1

Refer to RRSUNI when assembling your Slimline II Tray.




3.2

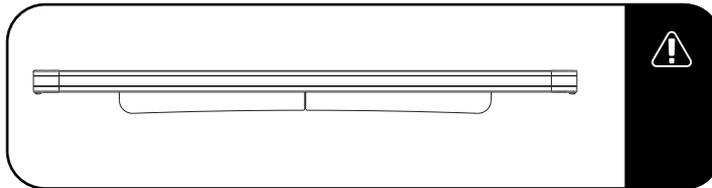

Make sure that the wind deflector is installed before you proceed to the next step.

3.3

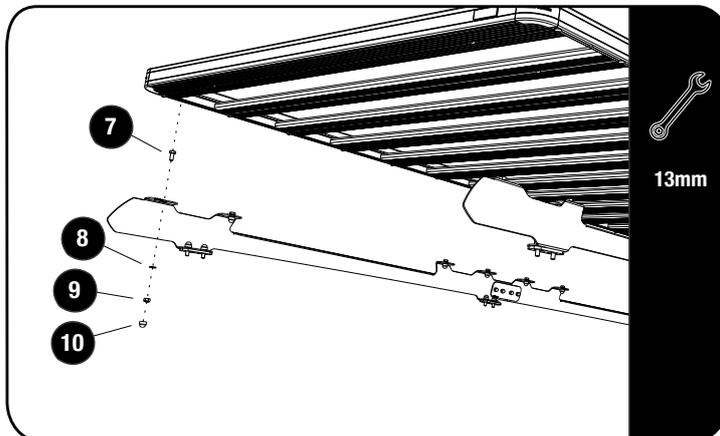

Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb



Fit your roof rack to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6 Flat Washers and M8 Nyloc Nuts (Items 7, 8 & 9) as shown.



Center the rack and fully tighten. Place M8 Nut Caps (Item 10) over all Nyloc Nuts.

4

COMPLETION

4.1

Congratulations! You did it. Take a step back and admire your work!



5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:    