



**FRONT RUNNER**  
VEHICLE OUTFITTERS

**FOOT RAIL**  
**NISSAN PATROL Y62 (2016-CURRENT)**

ENG

FANP001

# START HERE!

## READ ME FIRST

Don't be a hero and muscle through this without first reading these fitting instructions! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

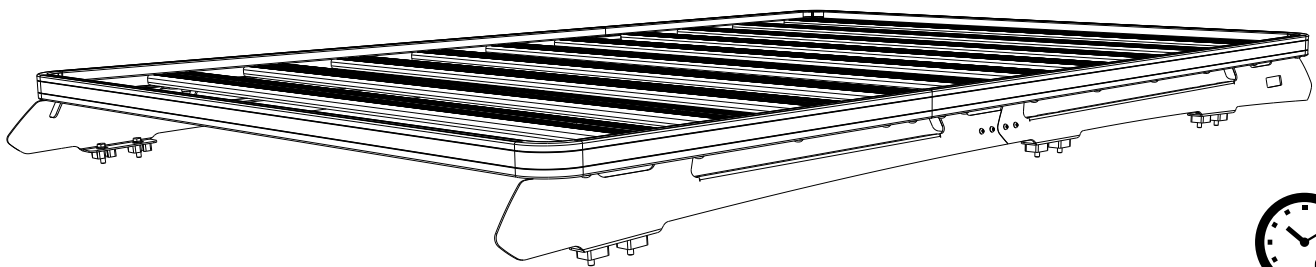

### IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

# 1

## GET ORGANIZED

### IN THE BOX

|    |      |                             |
|----|------|-----------------------------|
| 1  | 2 X  | Front Foot Rail; 1LH + 1RH  |
| 2  | 2 X  | Rear Foot Rail; 1LH + 1RH   |
| 3  | 2 X  | Joiner Plate                |
| 4  | 8 X  | M6 x 16 Button Head Bolt    |
| 5  | 8 X  | M6 x 12 x 1SS Flat Washer   |
| 6  | 8 X  | M6 Nyloc Nut                |
| 7  | 8 X  | M6 Nut Cap                  |
| 8  | 12 X | M8 x 40 Hex Bolt            |
| 9  | 12 X | M8 SS Spring Washer         |
| 10 | 12 X | M8 x 16 x 1.6SS Flat Washer |
| 11 | 24 X | Spacer                      |
| 12 | 12 X | M8 x 20 Hex Bolt            |
| 13 | 12 X | M8 Nyloc Nut                |
| 14 | 24 X | M8 Nut Cap                  |
| 15 | 12 X | M8 x 19 x 2SS Flat Washer   |

### TOOLS NEEDED


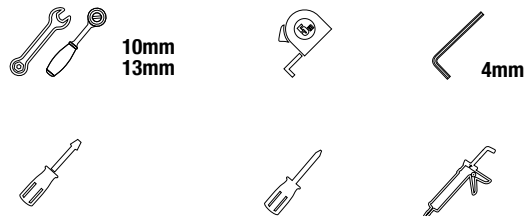


FIGURE 1.1



2.1

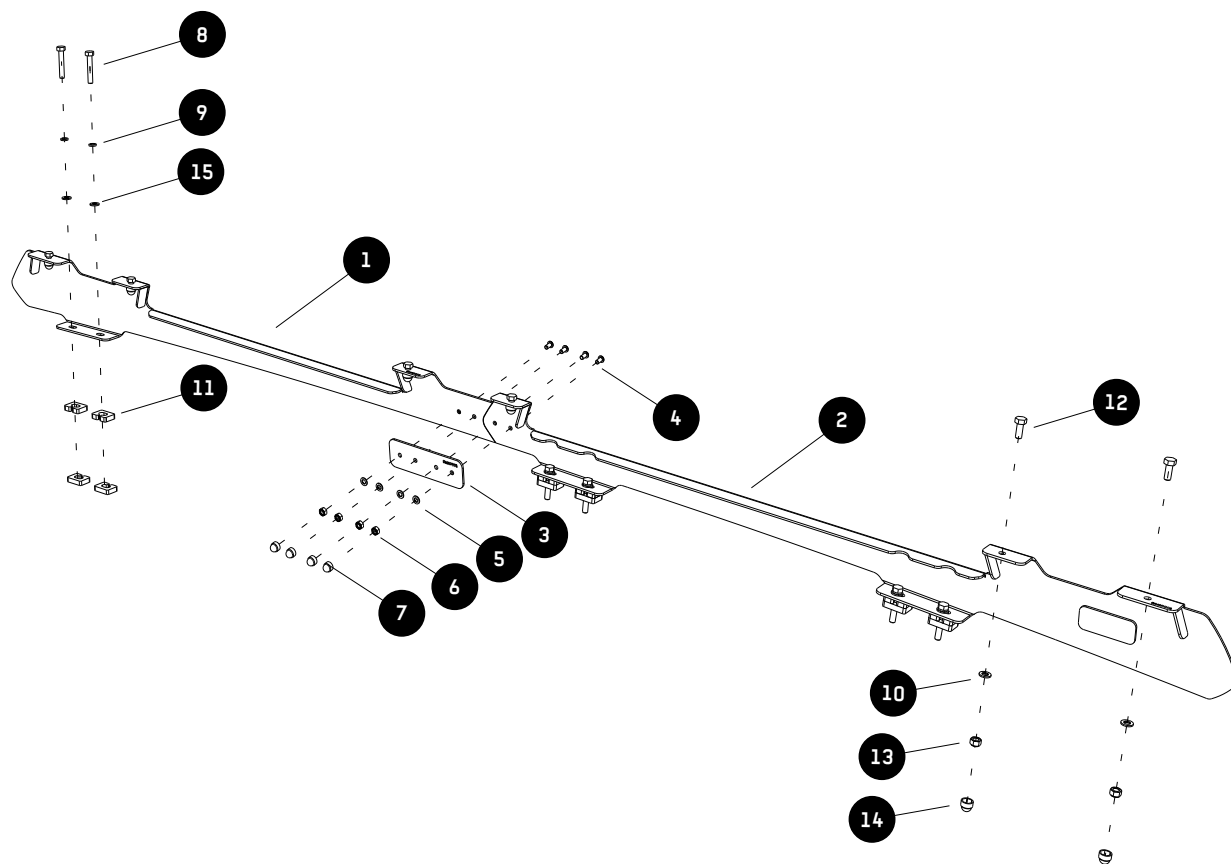

Before starting the fitment you need to remove the front, middle and rear Ditch Covers from the vehicle's roof using a suitable flat screw driver.

Do this on both sides of the vehicle.

2.2




Remove the plastic two inserts with a Philips screw driver.

2.3



Place 2 Spacers (Item 11) over each of the holes where you have removed the plastic inserts.

2.4

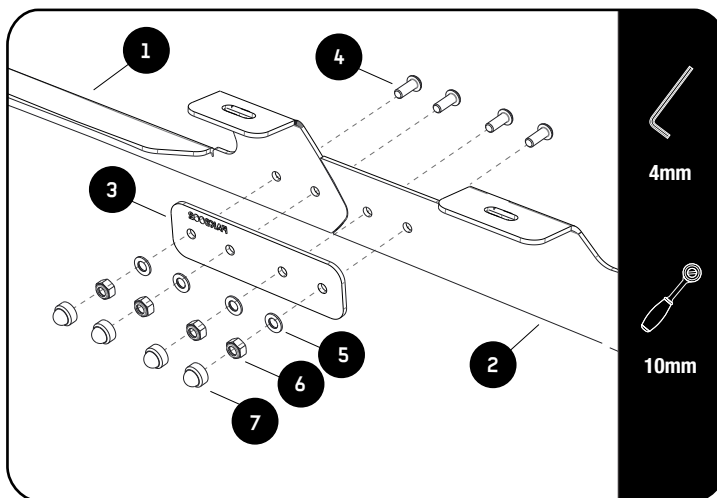

Join the Front LH and Rear LH Foot Rail (Items 1 & 2) with the Joiner Plate (Item 3) using M6 x 16 Bottom Head Bolts, M6 x 12 x 1SS Flat Washers and M6 Nyloc Nuts (Items 4, 5 & 6). Place M6 Nut Caps (Item 7) over all the Nyloc Nuts.


Repeat this for the Front RH and Rear RH Foot Rail.

2.5



Place a bead of silicone around each M8 x 40 Hex Bolt (Item 8).

2.6

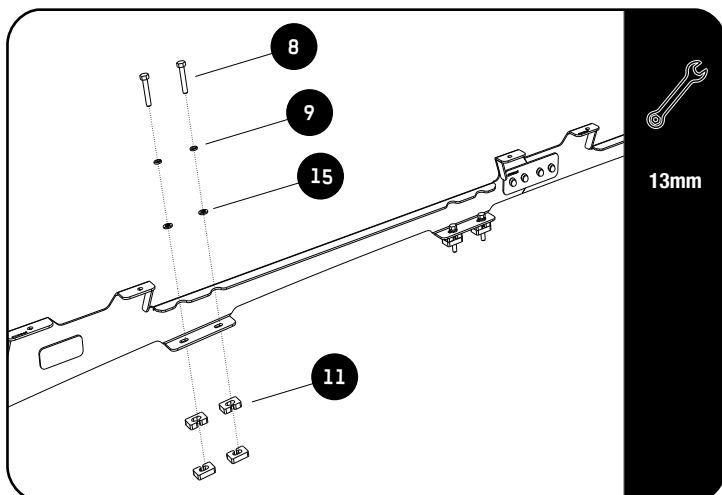

Secure the Foot Rail using M8 x 40 Siliconed Hex Bolts, M8 SS Spring Washers M8 x 19 x 2SS Flat Washers (Item 8, 9 & 15) as shown.

Take care not to move the spacers palced step 2.3.

### 3

## FIT AND SECURE

3.1

Refer to RRSUNI fitting instruction when assembling your Slimline II Tray.




3.2



Make sure that the wind deflector is installed before you proceed to the next step.

3.3

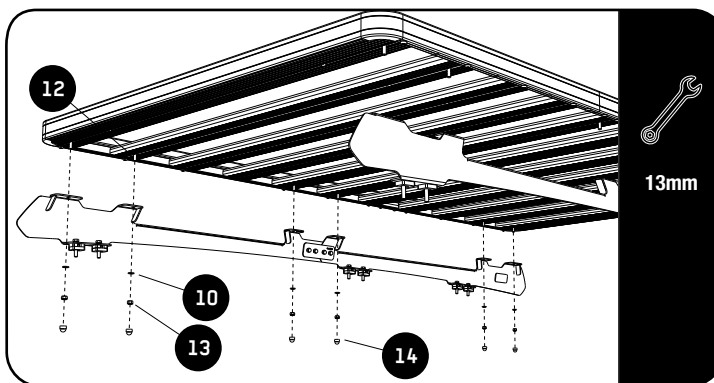

Fit your roof rack to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6SS Flat Washers and M8 Nyloc Nuts (Items 12, 10 & 13).

3.4

Center the rack and tighten fully. Use M8 nut caps (Items 14) to finish off the nuts.

**4**

## COMPLETION

**4.1**

**Congratulations! You did it. Take a step back and admire your work!**

**5**

**Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.**

**6**

## INSTALL OTHER VEHICLE AND RACK ACCESSORIES

**Now's the time to visit your favorite Front Runner Dealer in person or online.**

**Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam**

**Share your adventures on:**    