

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

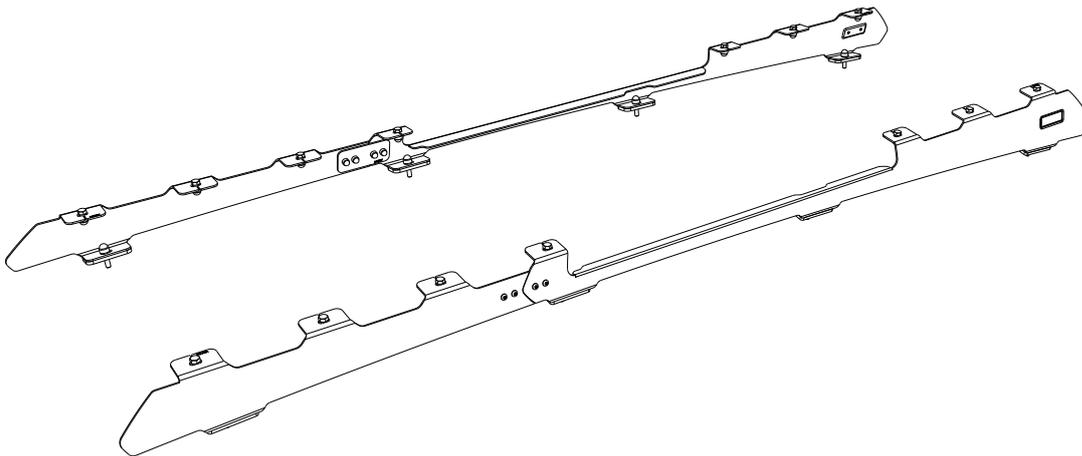

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX

1	2 X	Foot Rail Front LH & RH
2	2 X	Foot Rail Rear LH & RH
3	2 X	Joiner Plate
4	8 X	M6 x 16 Button Head Screw
5	8 X	M6 Nyloc Nut
6	8 X	M6 Nut Cap
7	14 X	M8 x 20 Hex Bolt
8	22 X	M8 x 19 x 1.6 Flat Washer
9	14 X	M8 Nyloc Nut
10	8 X	M8 x 30 Hex Bolt
11	22 X	M8 Nut Cap
12	8 X	6mm HDPE Spacer


TOOLS NEEDED



10mm
13mm




4mm

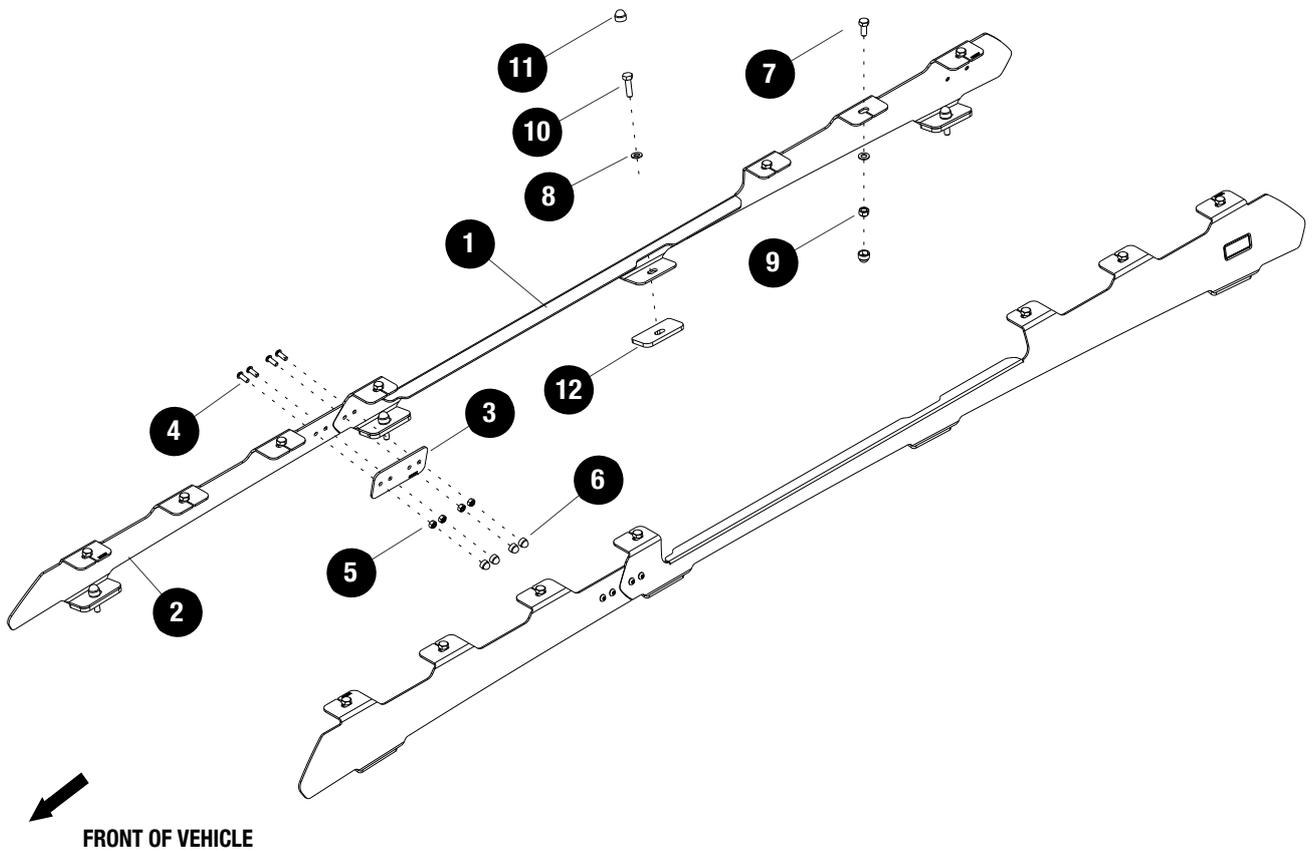

2


FIT AND SECURE

2.1

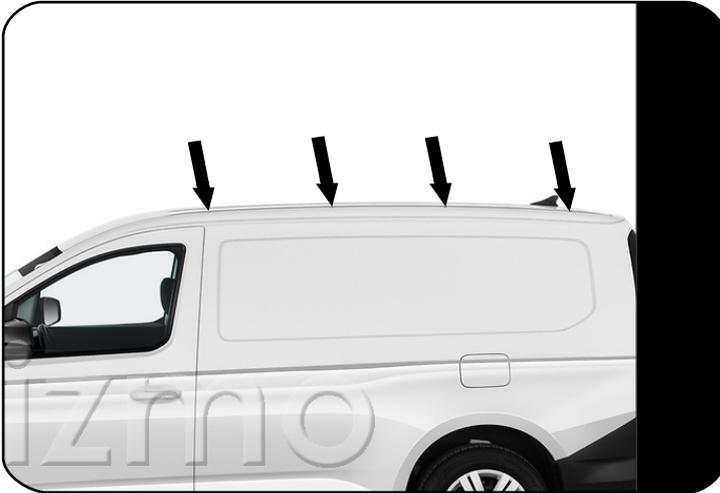

🔄 Starting by removing the 8 OEM screws from the vehicles roof.

2.2

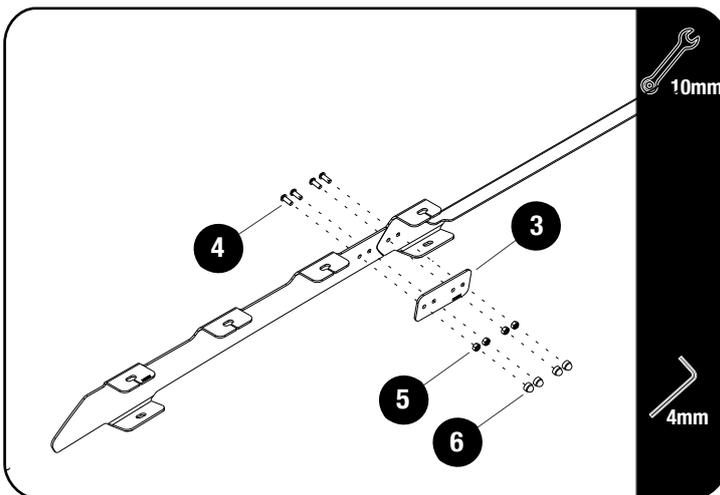

🔄 Assemble the Front and Rear Foot Rails (Items 1 & 2) using the Joiner Plates (Item 3), M6 x 16 Button Head Bolts and M6 Nyloc Nuts (Item 4 & 5)


Fully tighten the fasteners before placing M6 Nut Caps (Item 6) over the Nyloc Nut.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.3

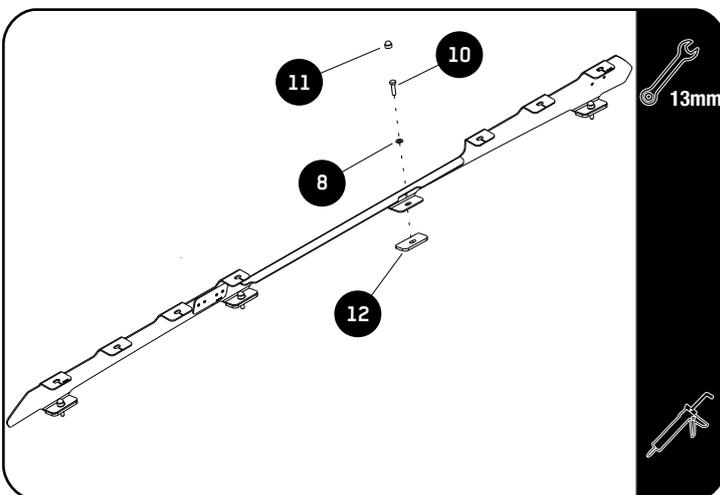

🔄 Apply a bead of silicon in and around each of the OEM mounting hole.

Do this on all 8 mounting points.

Place a Spacer (Item 12) over each of the mounting points, followed by the Foot Rail assemblies and secure using M8 x 30 Hex Bolts and M8 x 16 x 1.6 Flat washers (Item 10 & 8).

Fully tighten before placing M8 Nut Caps (Item 11) over all the M8 Bolt heads.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb


2 FIT AND SECURE

2.5

Refer to RRSUNI when assembling your Slimline II Tray.




2.6

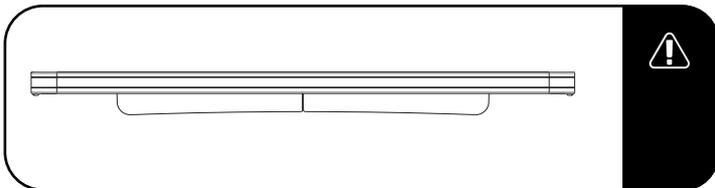

Make sure that the wind deflector is installed before you proceed to the next step.

2.7

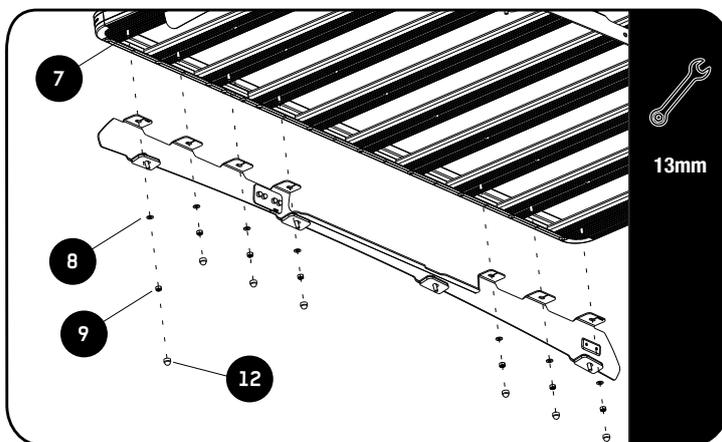

Fit your roof rack to the Foot Rails using M8 x 20 Hex Bolts, M8 x 16 x 1.6SS Flat Washers and M8 Nyloc Nuts (Items 7, 8 & 9) as shown.

2.8

Center the rack and tighten fully. Use M8 Nut Caps (Items 12) to finish off the nuts.



15

14

12

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    