











**FRONT
RUNNER**
↗ DOMETIC



Slimline II Tray

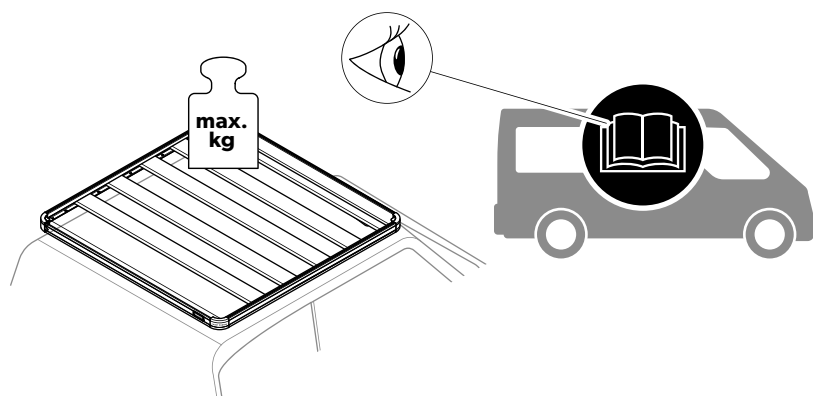







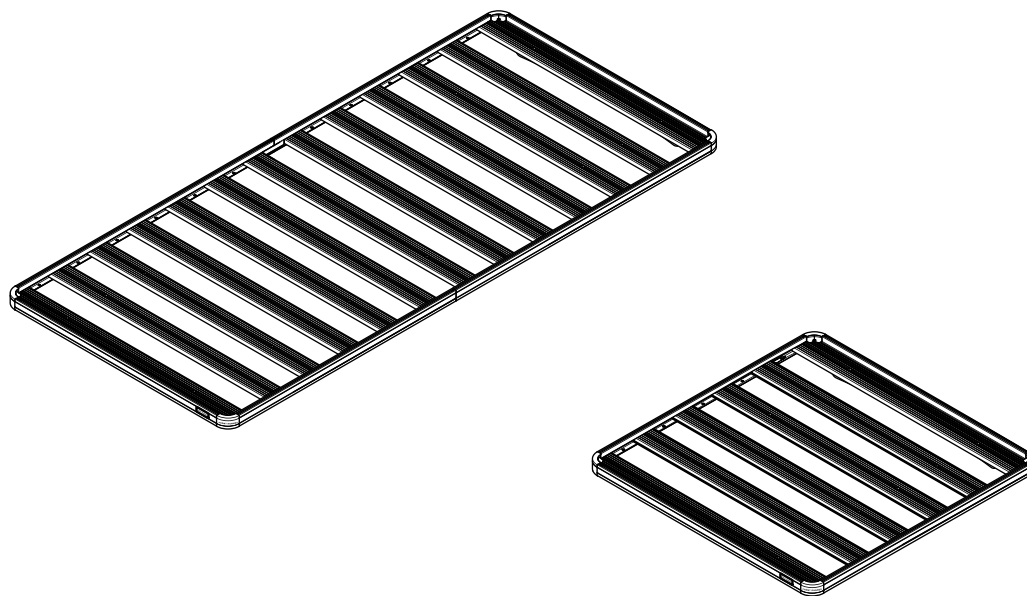


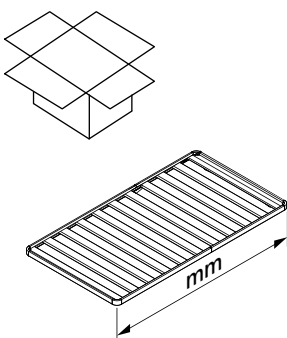		1	2	3	4	5	6	7	8	9	10	11	
									 M8 x 45	 M8	 M8 x 25	 M6 x 10	
3 Slat	550	2x	-	2x	1	4x	-	-	-	-	6	4x	
4 Slat	752				2						8		
5 Slat	954	-	2x		3						10		
6 Slat	1156				4						12		
7 Slat	1358				5						14		
8 Slat	1560				6						16		
9 Slat	1762	2x			7		2x	2x	4x	4x	18		
10 Slat	1964				8						20		
11 Slat	2166	-	4x		9		2x	2x	4x	4x	22		
12 Slat	2366				10						24		
13 Slat	2570				11						26		
14 Slat	2772				12						28		

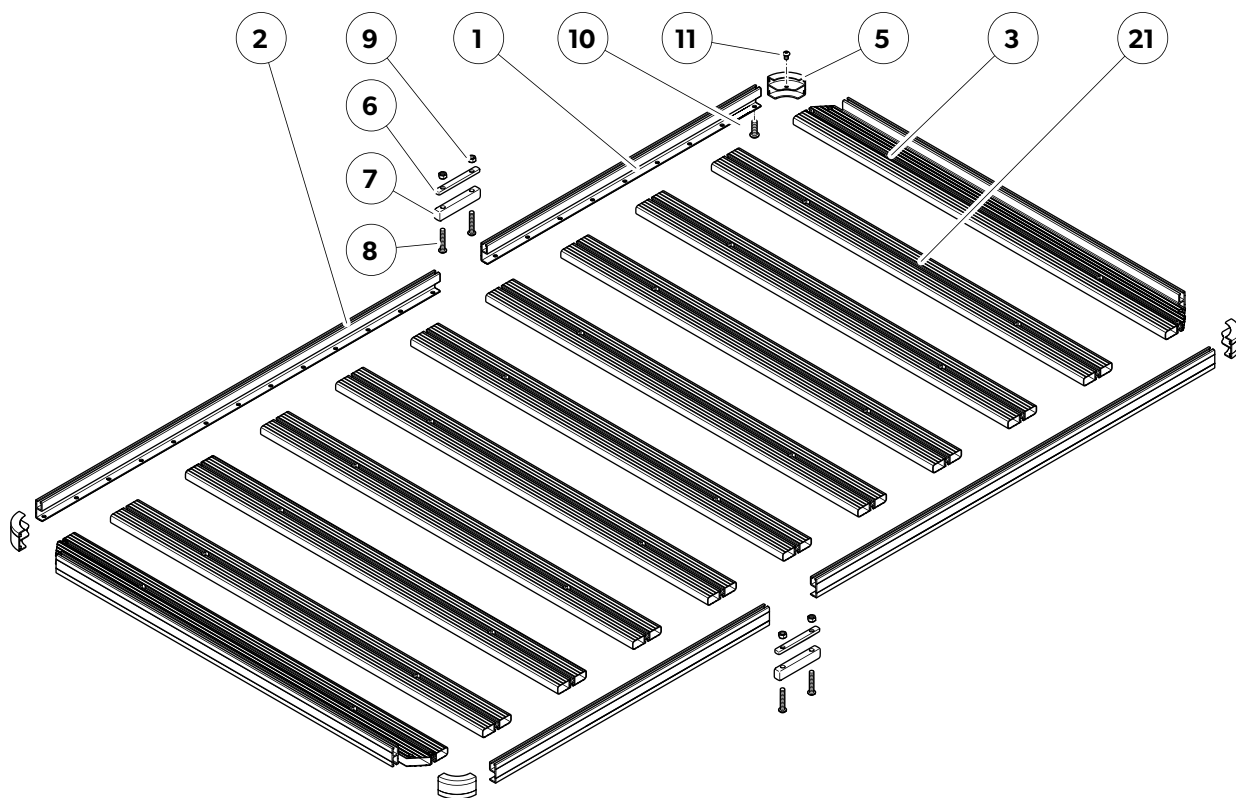


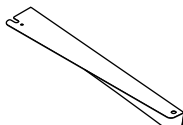12	13	14	15	16
4x	4x	4x		
M8 x 12	M8	M8		
				

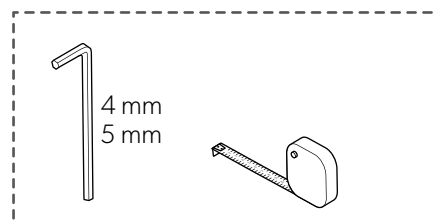


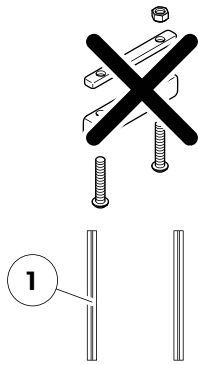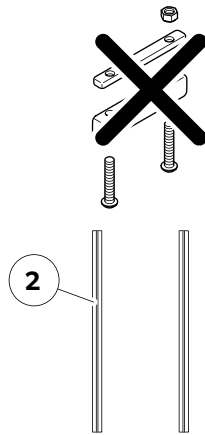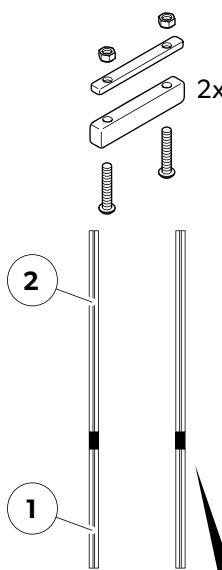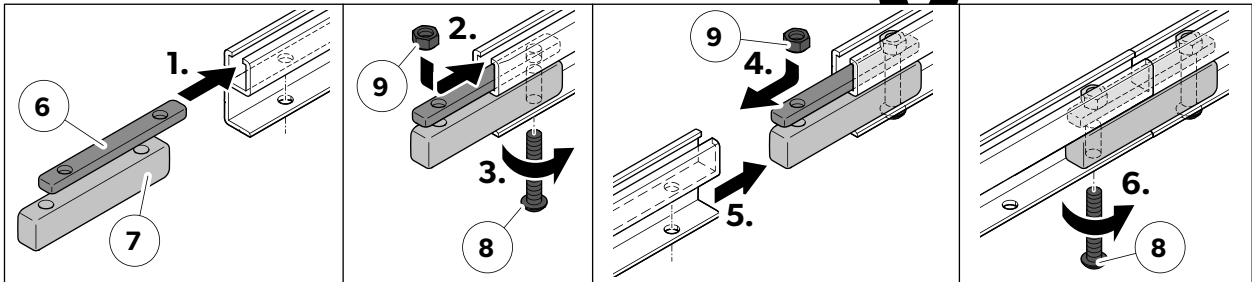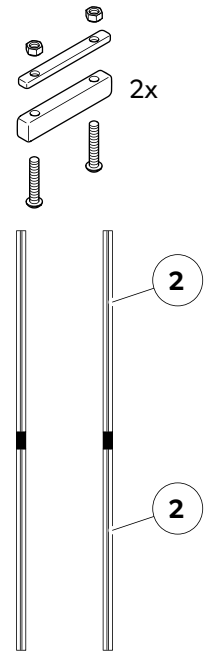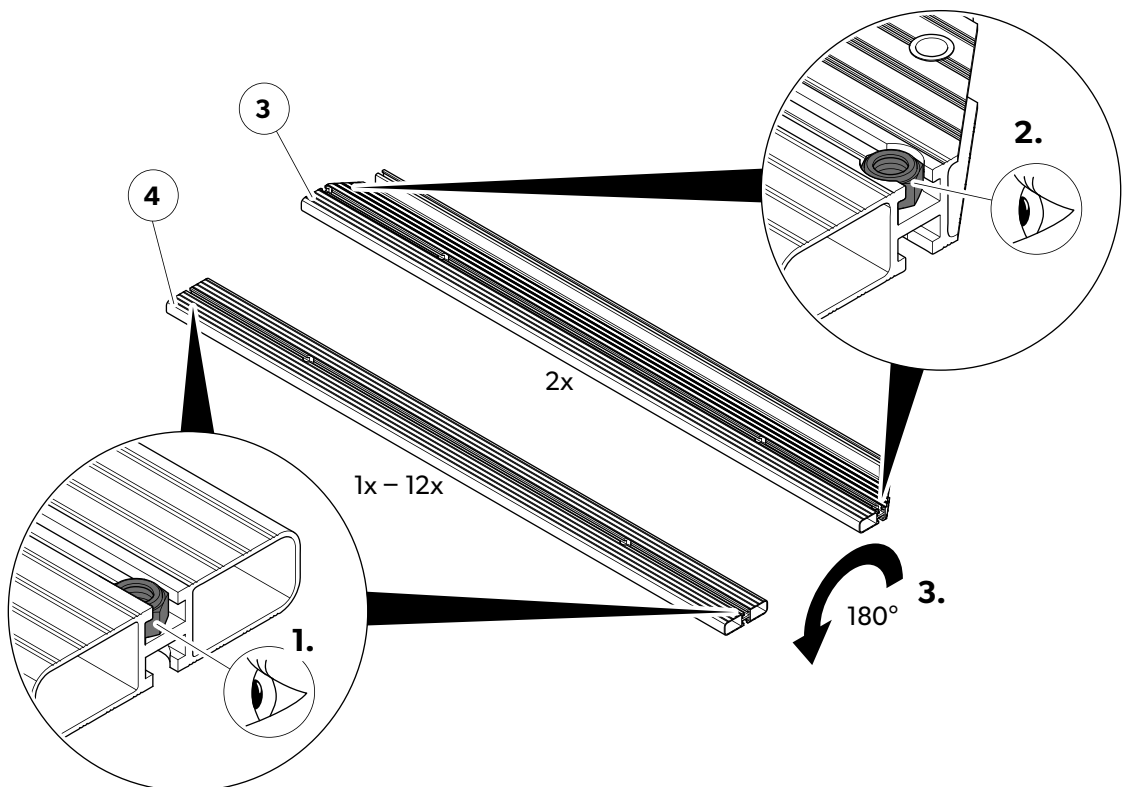1**3 Slat / 4 Slat****5 Slat / 6 Slat
7 Slat / 8 Slat****9 Slat / 10 Slat
11 Slat****12 Slat / 13 Slat
14 Slat****2**


3

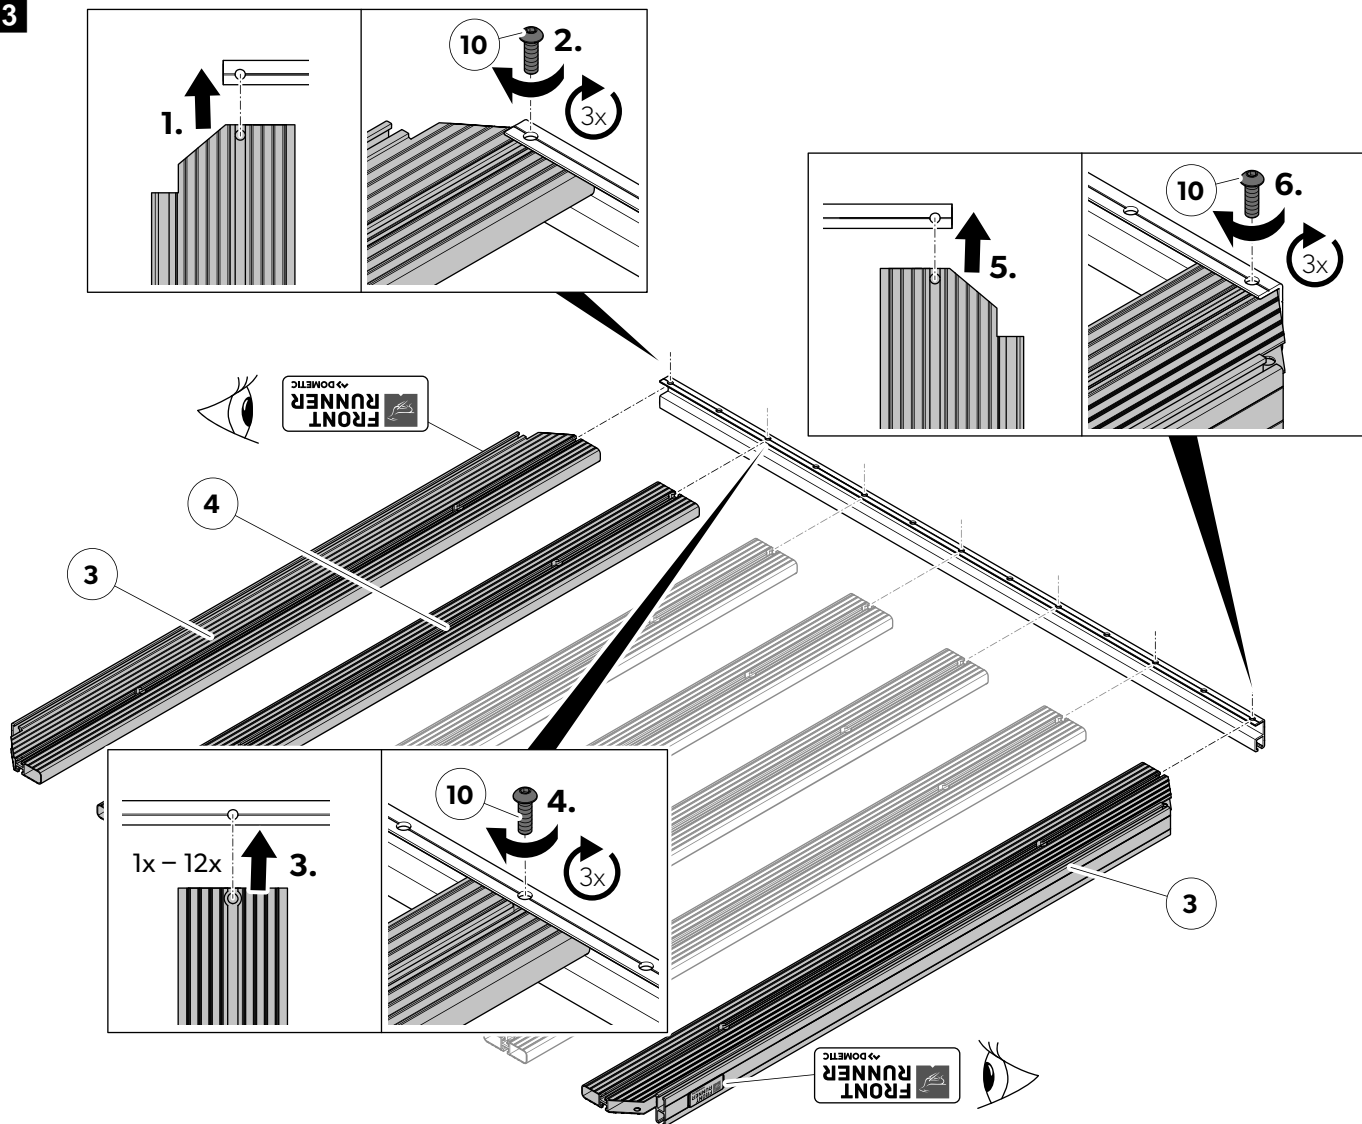


4

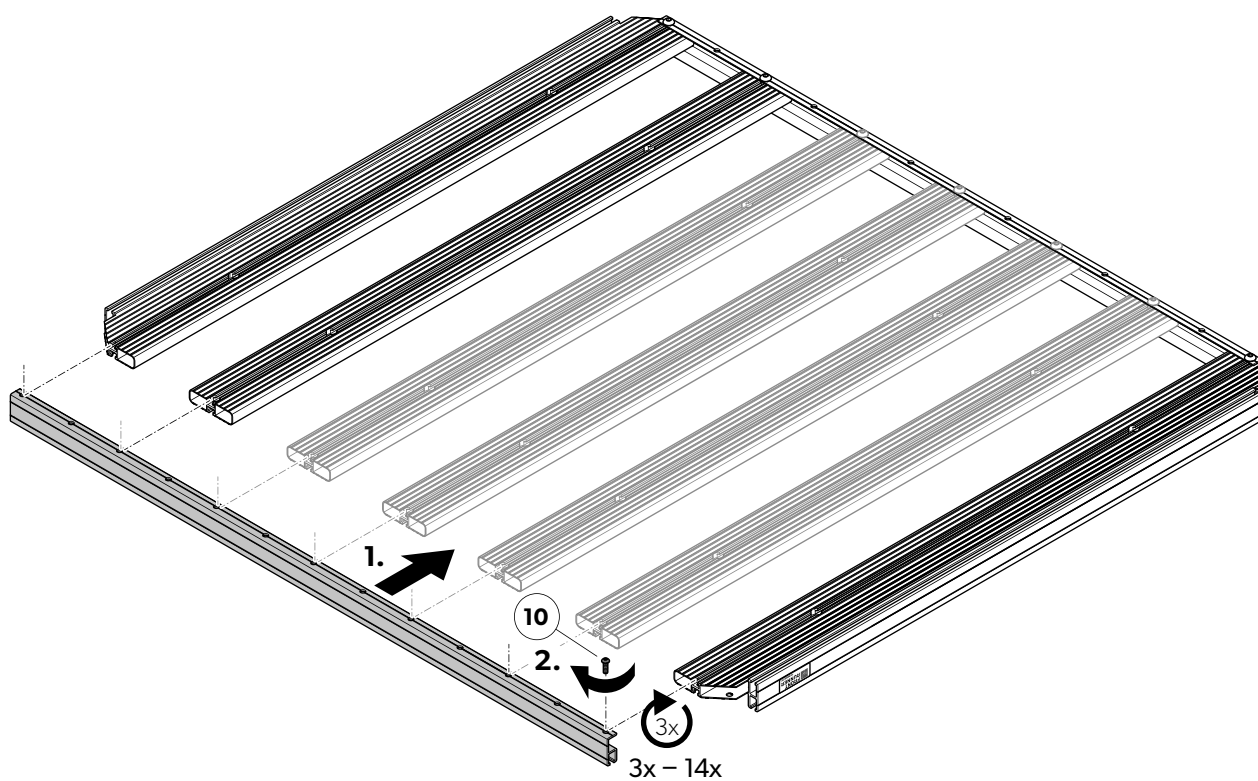

5


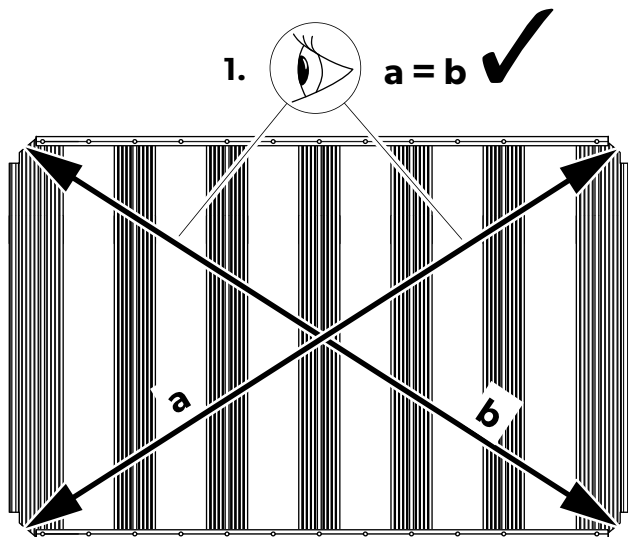


2.

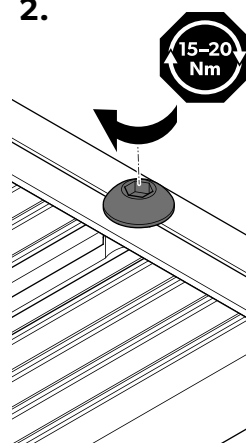

3 Slat	6x
4 Slat	8x
5 Slat	10x
6 Slat	12x
7 Slat	14x
8 Slat	16x
9 Slat	18x
10 Slat	20x
11 Slat	22x
12 Slat	24x
13 Slat	26x
14 Slat	28x

6

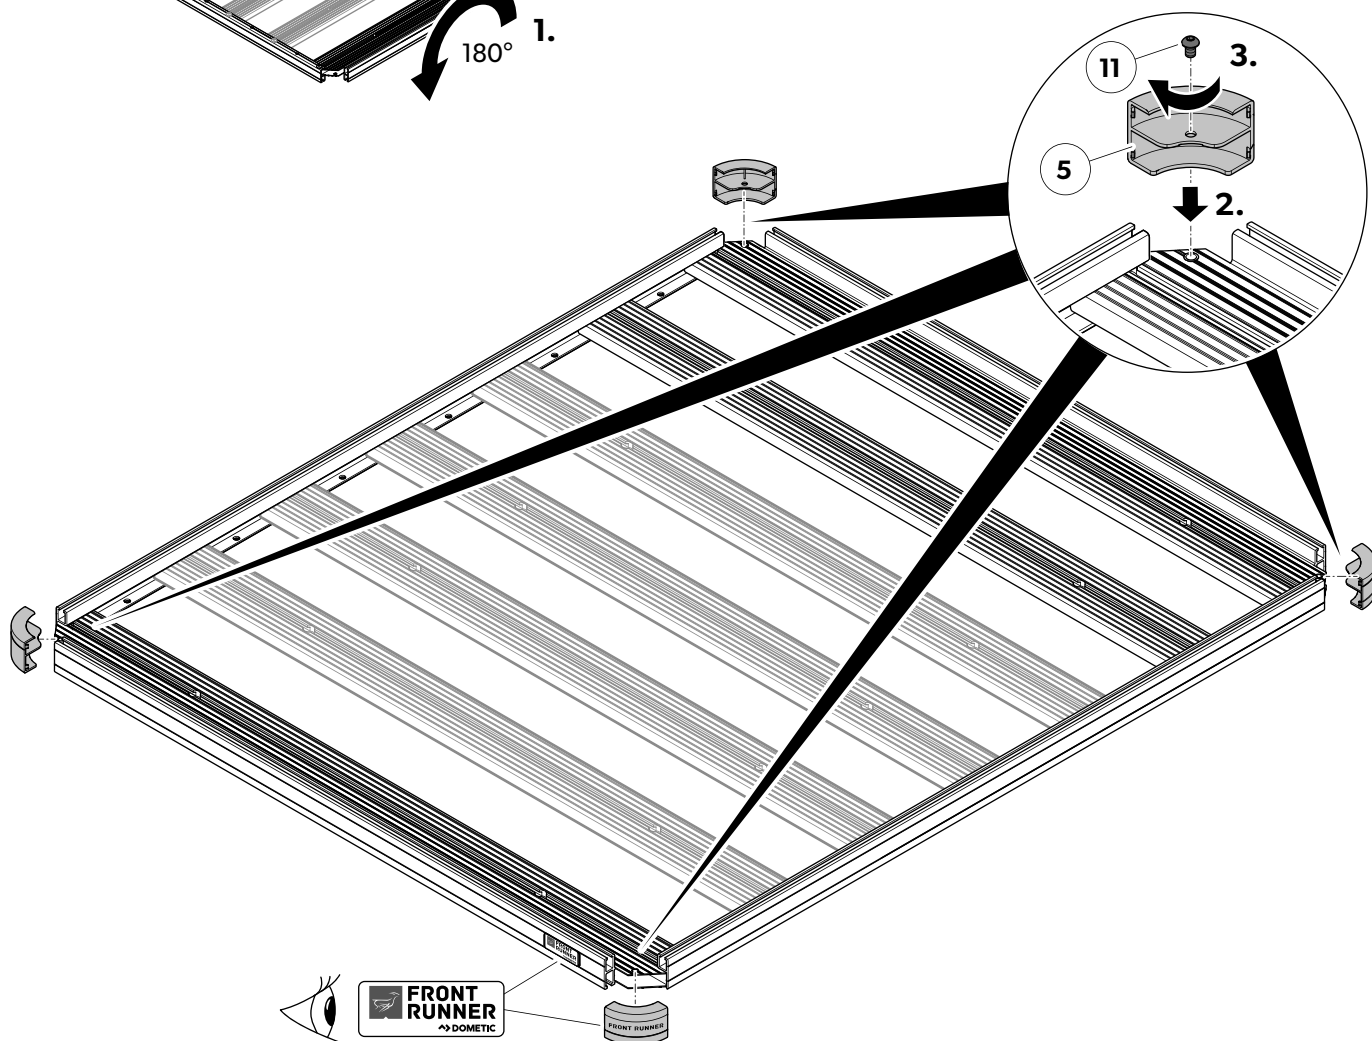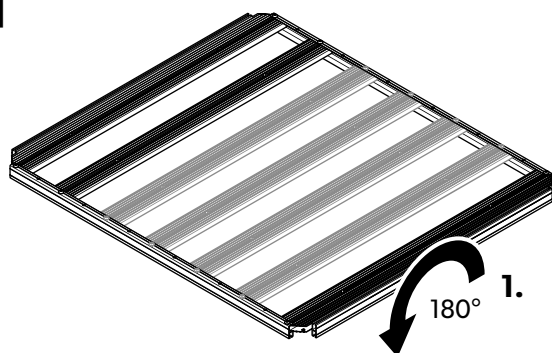

7

1. 180°

5.

2.

3.

3x

12

14

13


4.

FRONT RUNNER


8





Diagram 8 illustrates the process of attaching the side rail (16) to the bed frame. The main view shows the side rail (16) being aligned with the bed frame (15). Arrows indicate the direction of movement: arrow 3 points towards the frame, and arrow 4 points away from the frame. A circular inset provides a detailed view of the attachment mechanism. In the inset, a screw (12) is shown being inserted into a hole in the side rail (16). A washer (14) and a nut (13) are also shown. The steps are numbered: 1. Insert the screw (12) into the hole. 2. Tighten the nut (13) by turning it clockwise. 3. Repeat step 2 three times (3x) for each side rail. A checkmark indicates that the side rail is correctly attached.

9

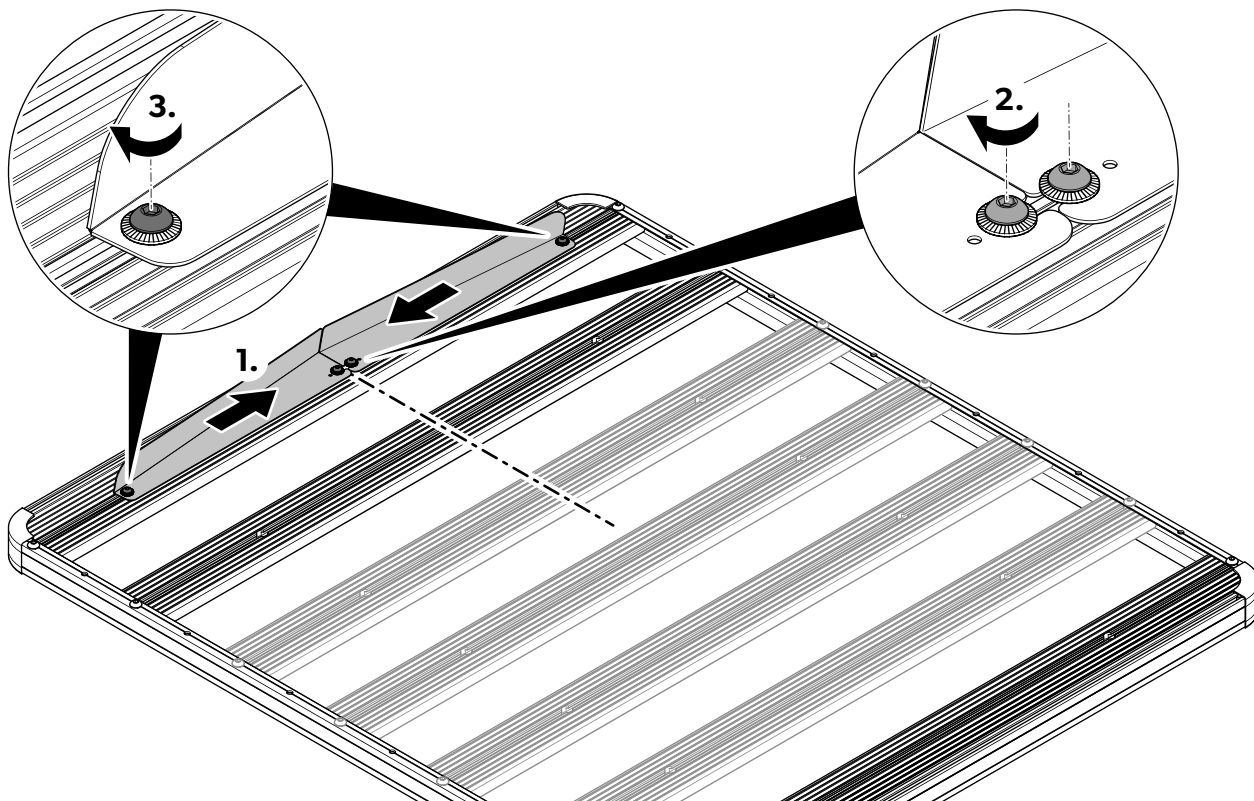

10

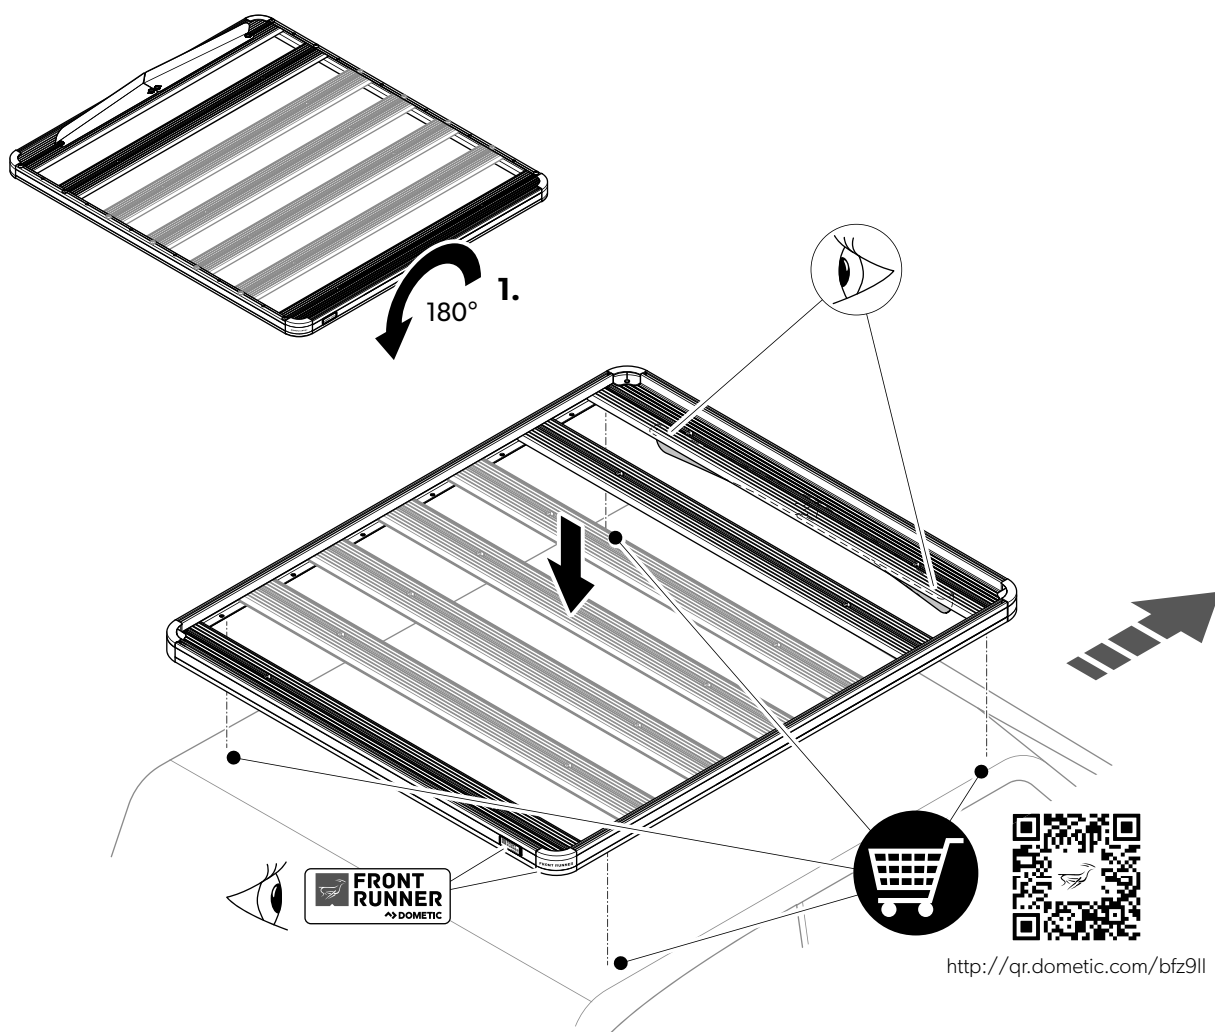

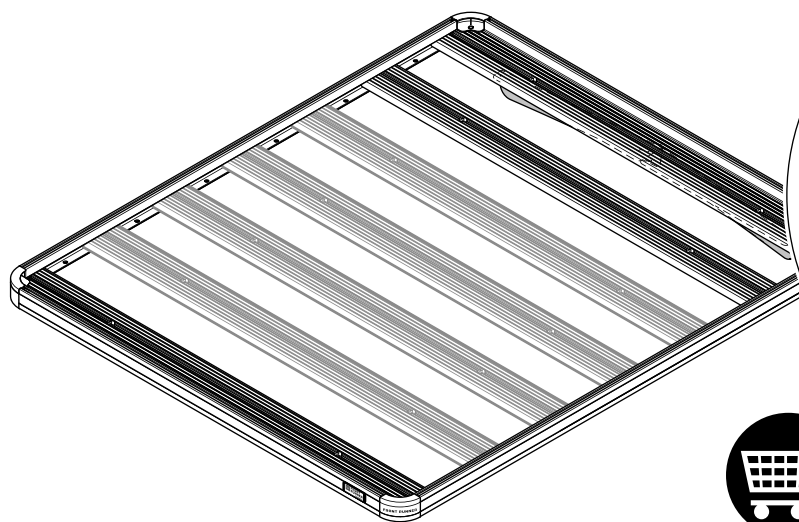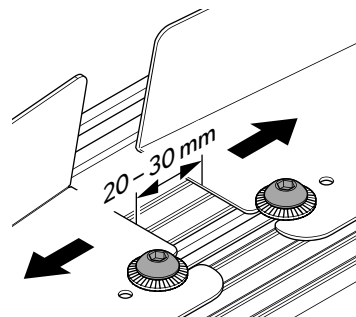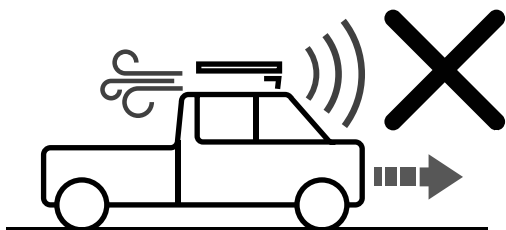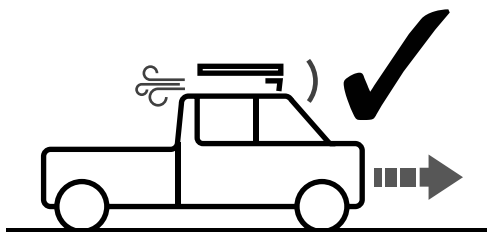

SKU: RRAC012



<http://qr.dometic.com/bfz9ll>



dometic.com

YOUR LOCAL DEALER

dometic.com/dealer

YOUR LOCAL SUPPORT

dometic.com/contact

YOUR LOCAL SALES OFFICE

dometic.com/sales-offices