






**FRONT
RUNNER**
↗ DOMETIC

Slimline II Tray

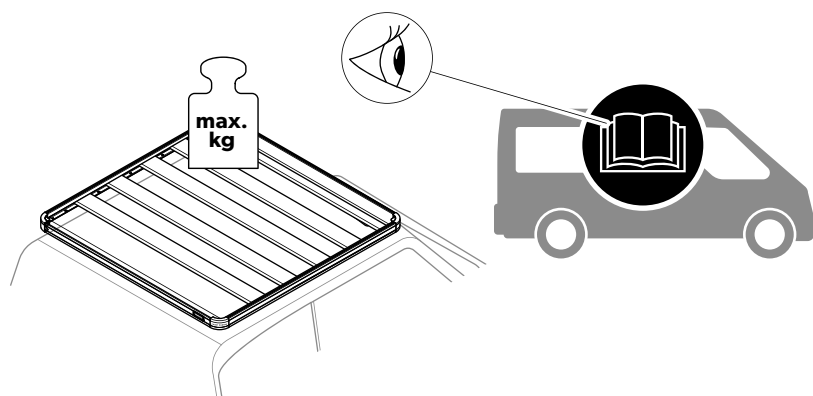







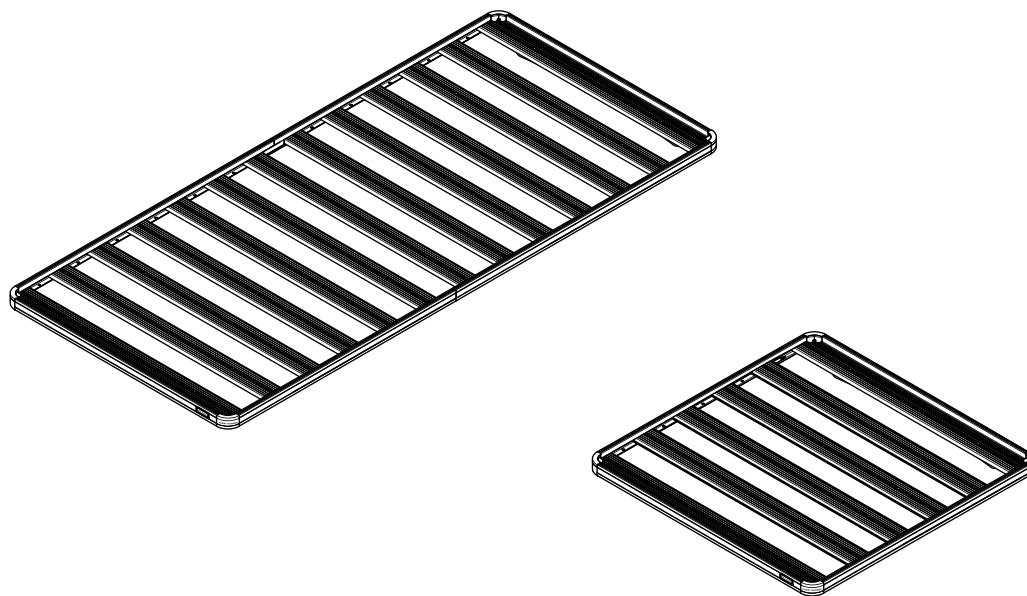


		1	2	3	4	5	6	7	8	9	10	11
3 Slat	550	2x	-		1						6	
4 Slat	752				2						8	
5 Slat	954	-			3		-	-	-	-	10	
6 Slat	1156				4						12	
7 Slat	1358		2x	2x	5	4x					14	4x
8 Slat	1560				6						16	
9 Slat	1762	2x			7						18	
10 Slat	1964				8						20	
11 Slat	2166		4x		9		2x	2x	4x	4x	22	
12 Slat	2366				10						24	
13 Slat	2570	-			11						26	
14 Slat	2772				12						28	

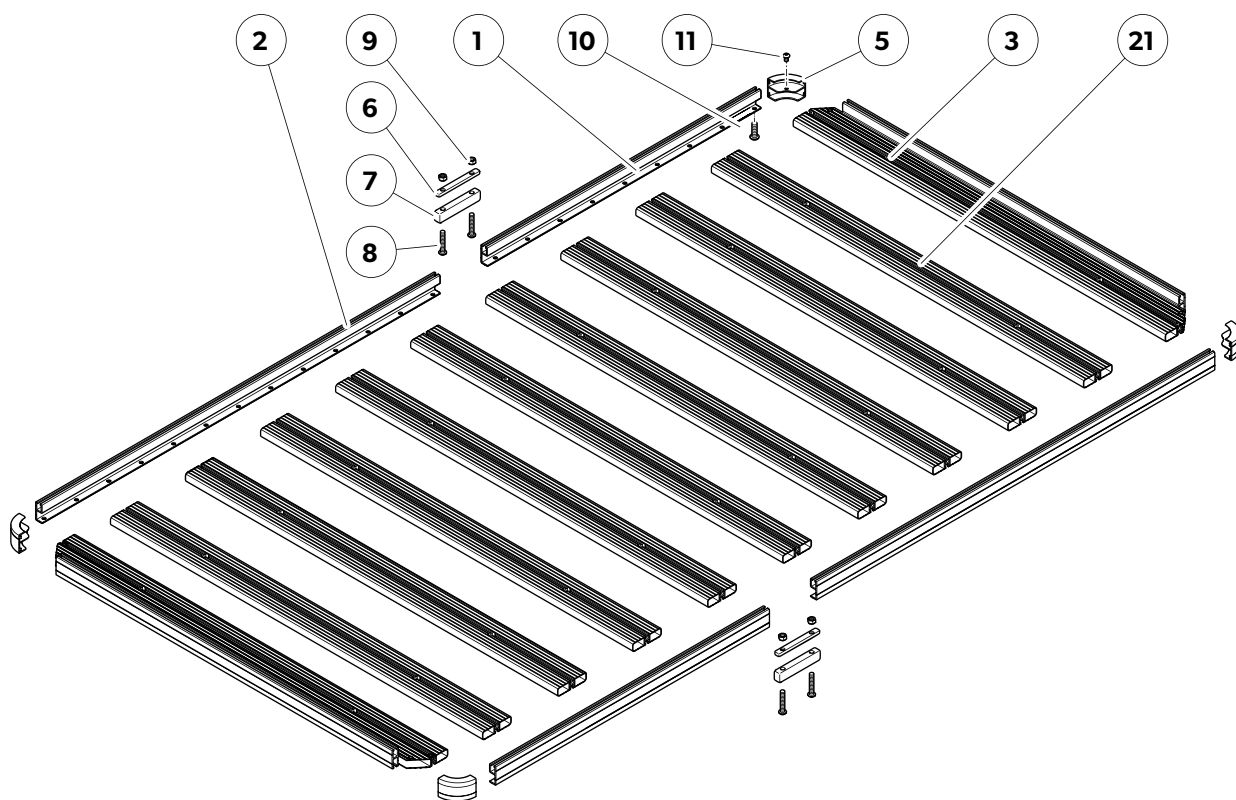


12	13	14	15	16
4x	4x	4x		
M8 x 12	M8	M8		

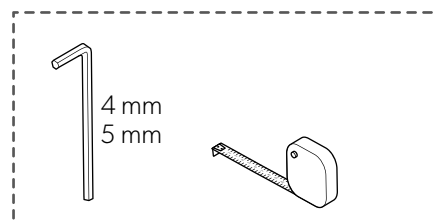


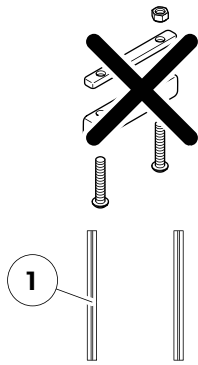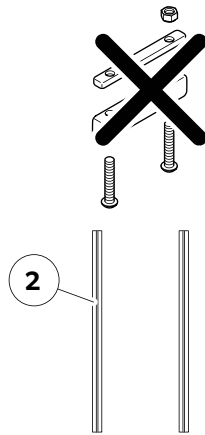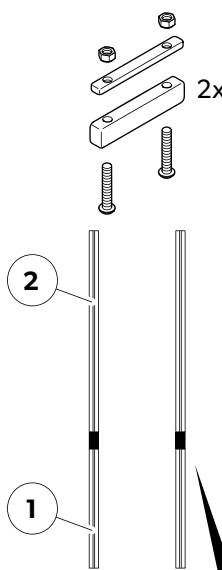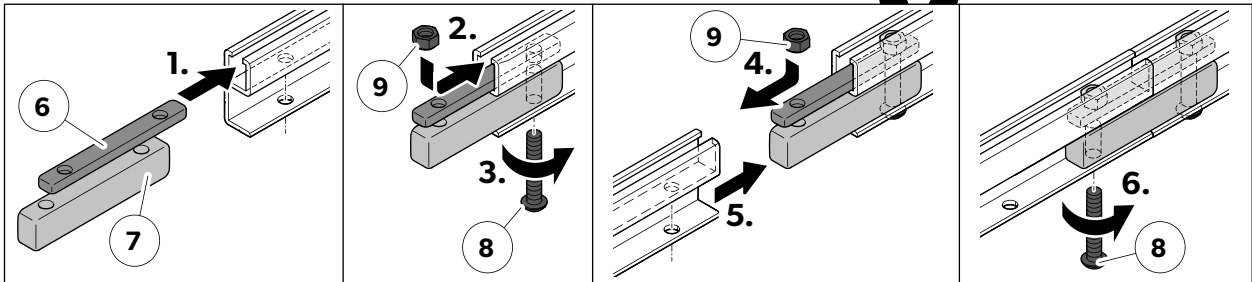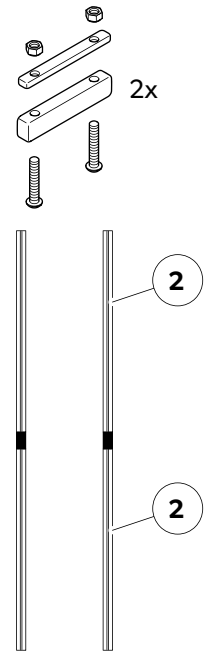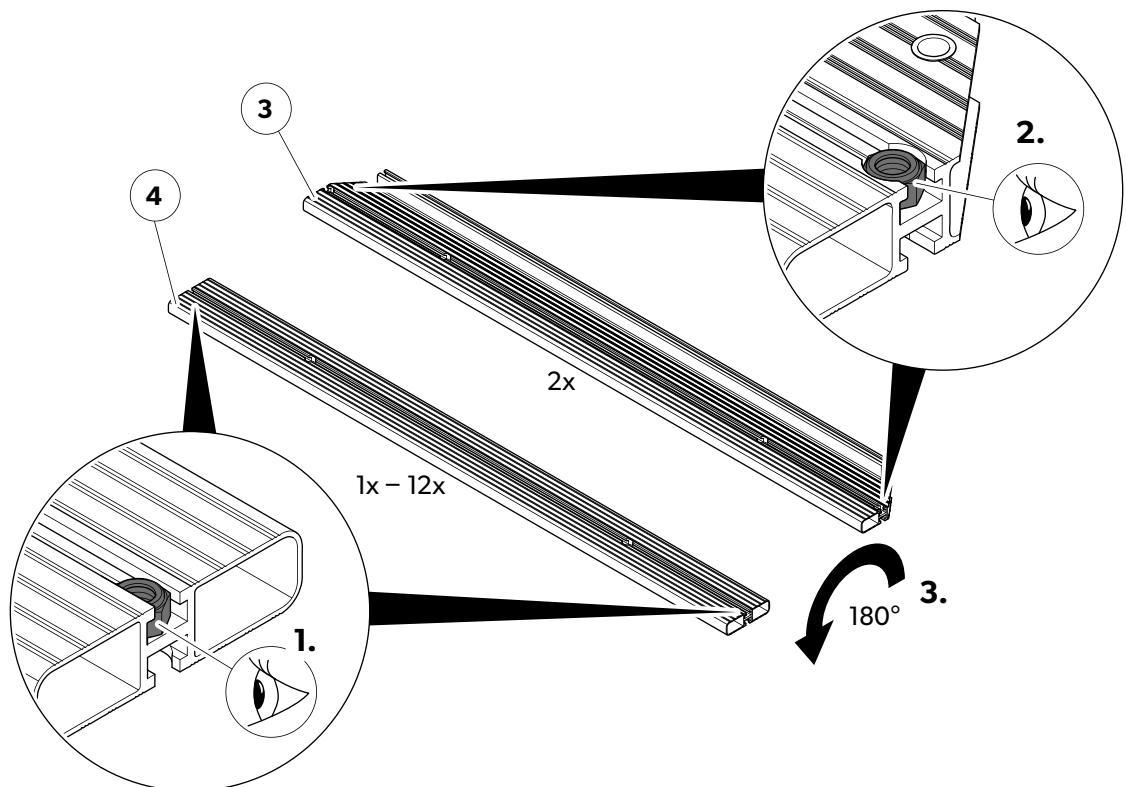1**3 Slat / 4 Slat****5 Slat / 6 Slat
7 Slat / 8 Slat****9 Slat / 10 Slat
11 Slat****12 Slat / 13 Slat
14 Slat****2**


3

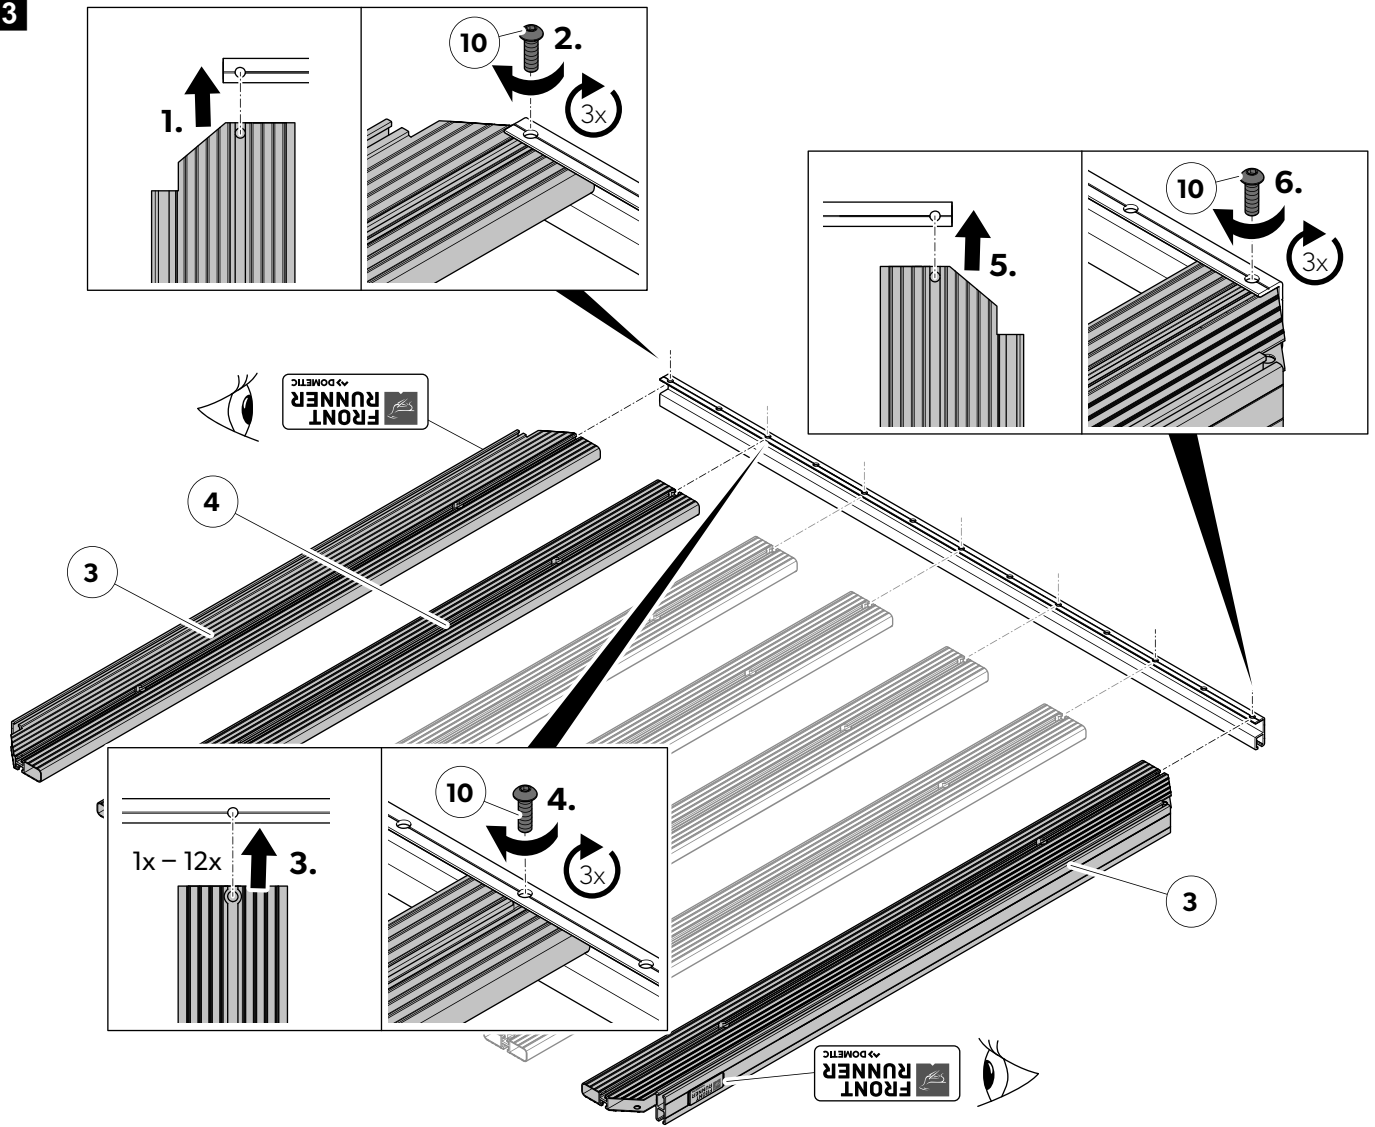


4

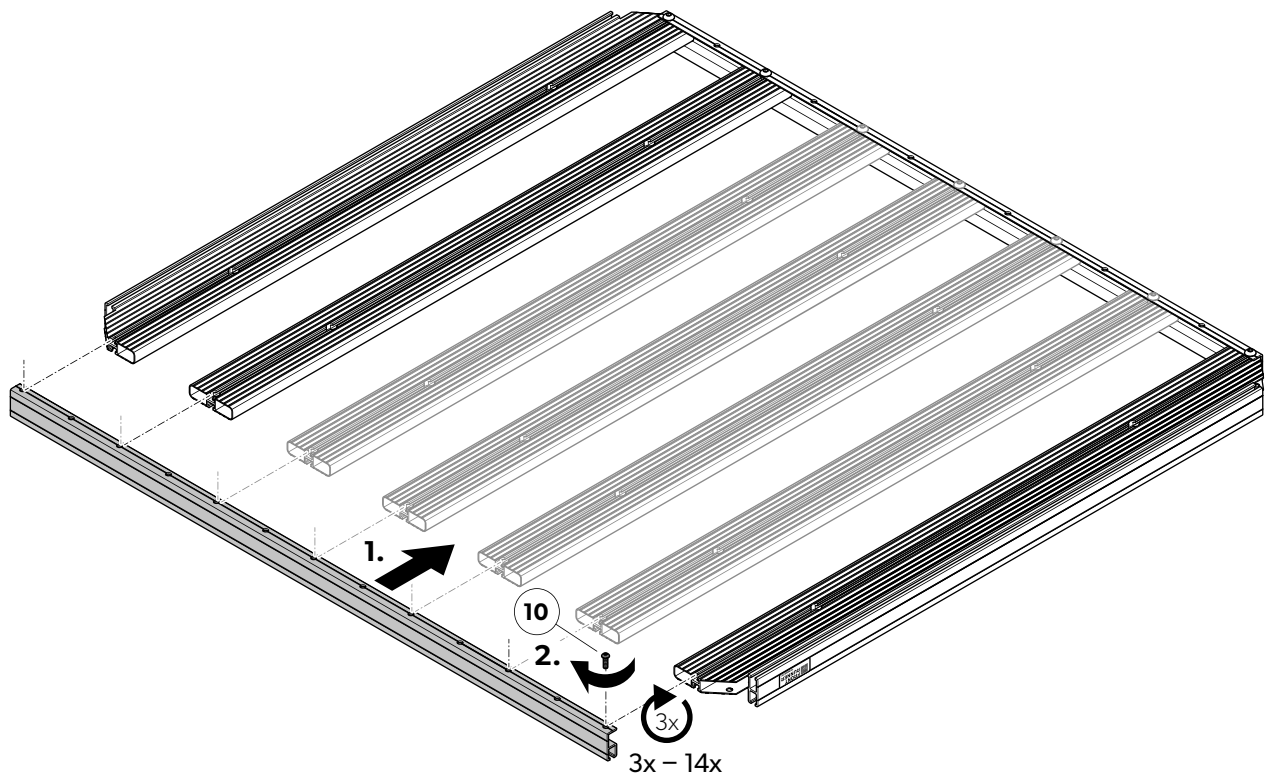

5


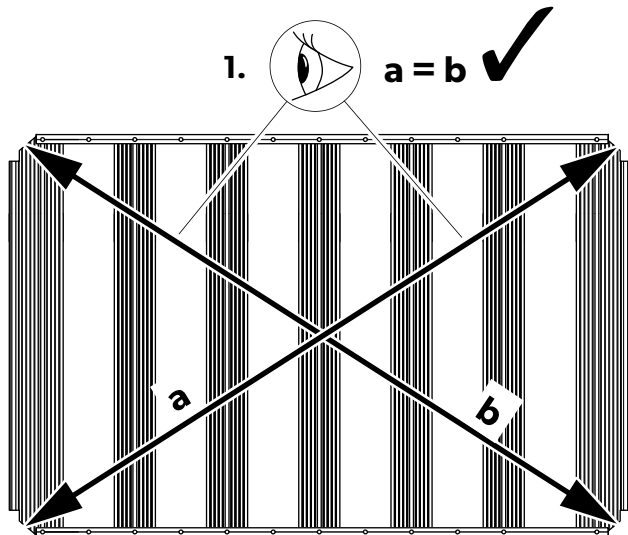


2.

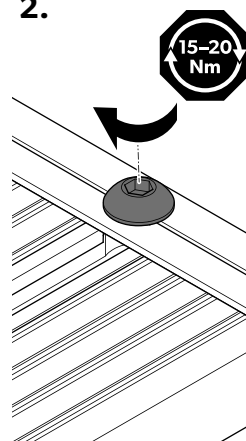


3 Slat	6x
4 Slat	8x
5 Slat	10x
6 Slat	12x
7 Slat	14x
8 Slat	16x
9 Slat	18x
10 Slat	20x
11 Slat	22x
12 Slat	24x
13 Slat	26x
14 Slat	28x


6

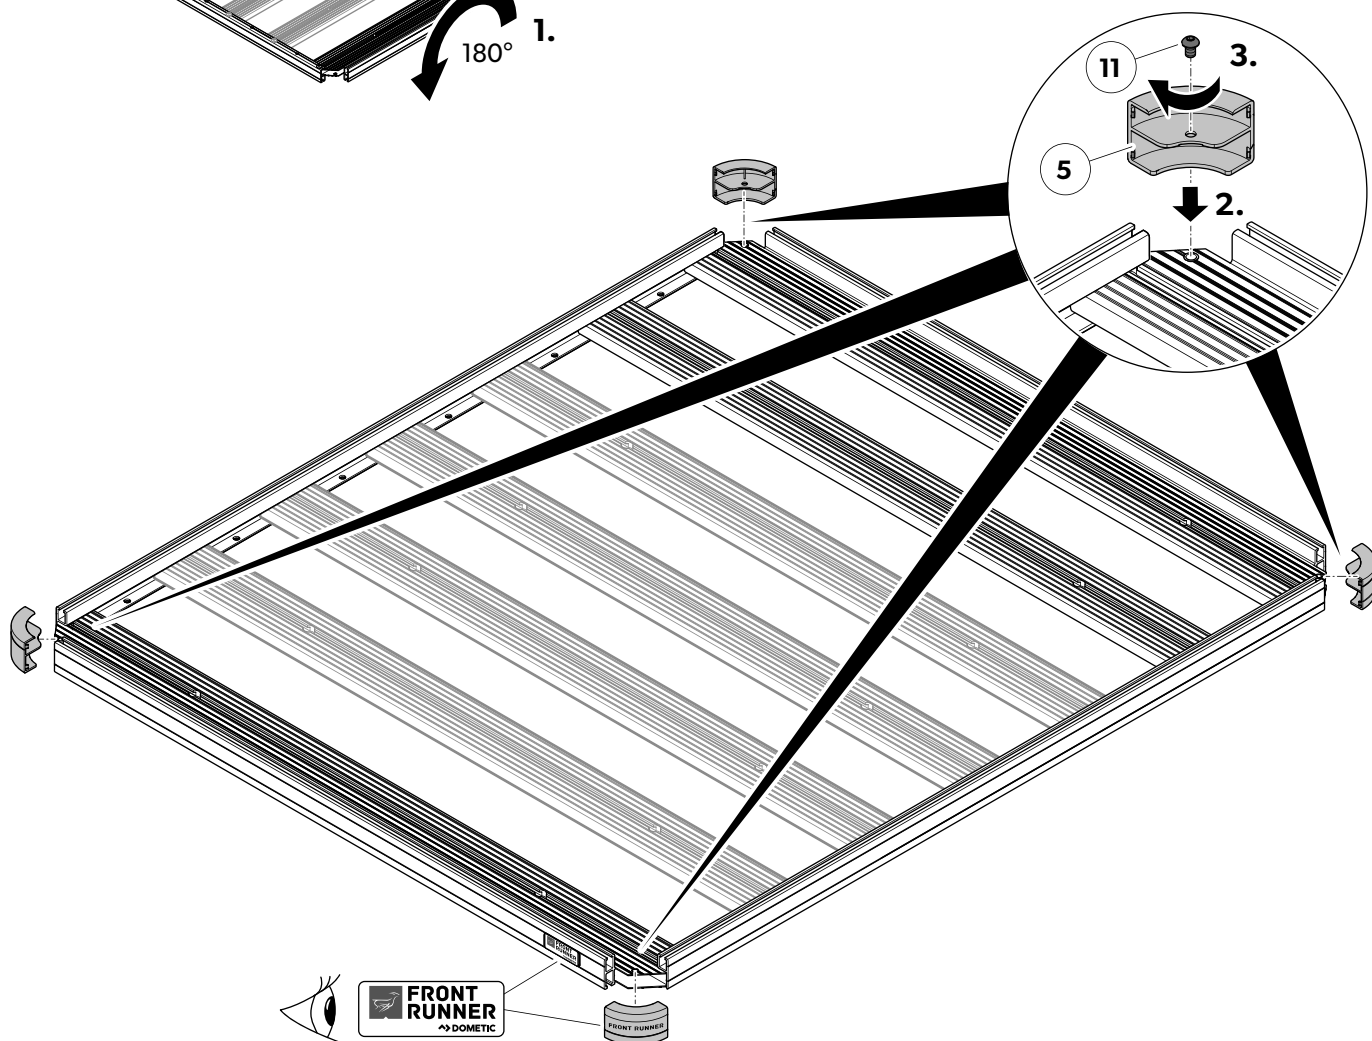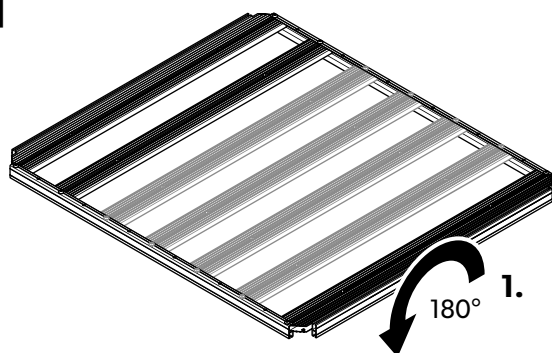

7





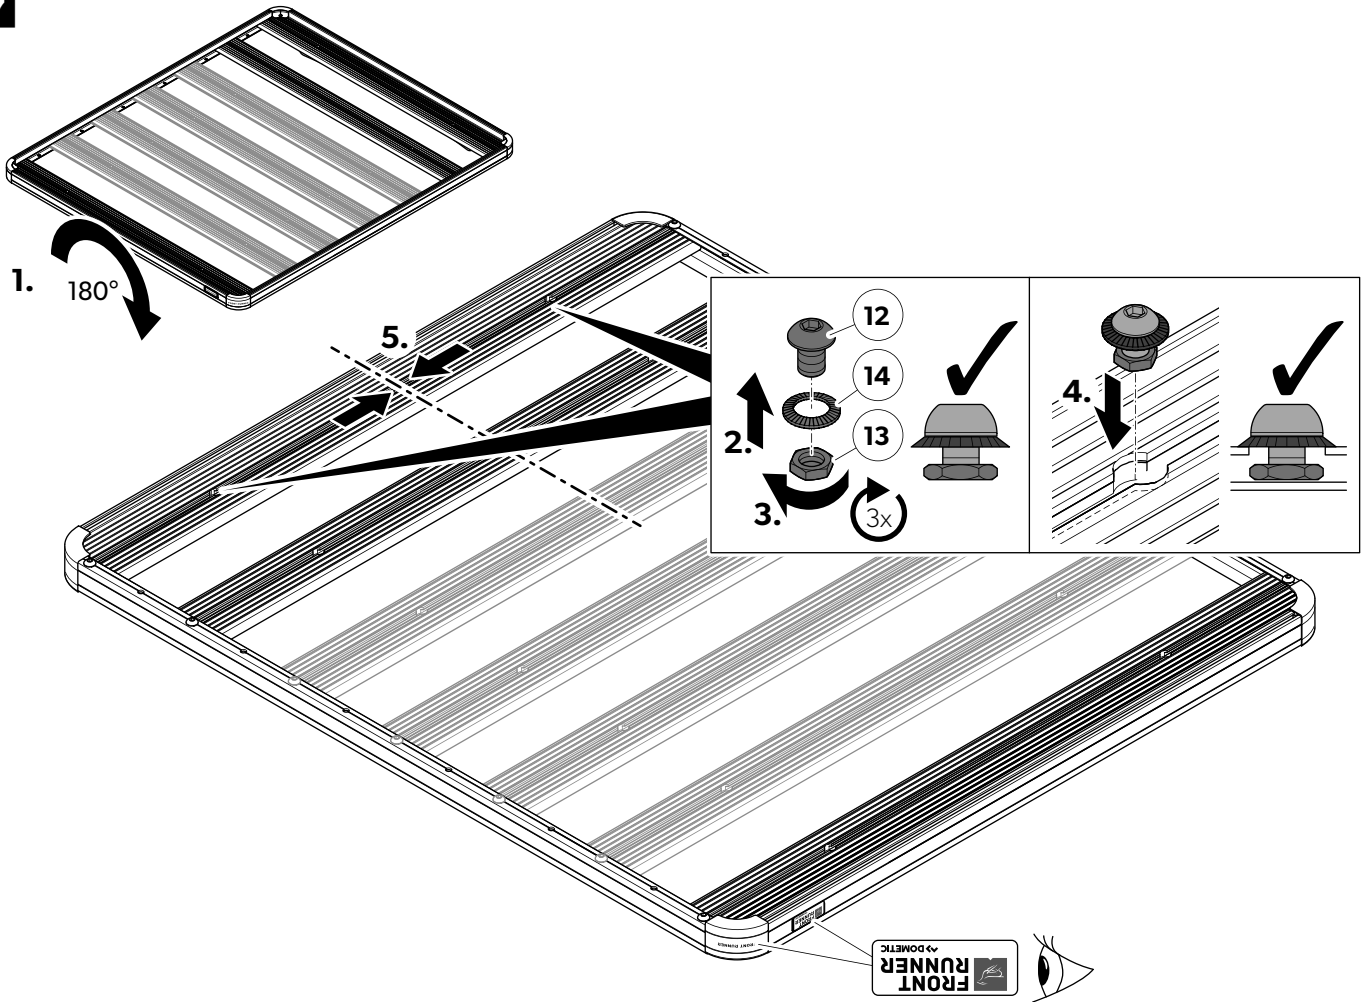


8

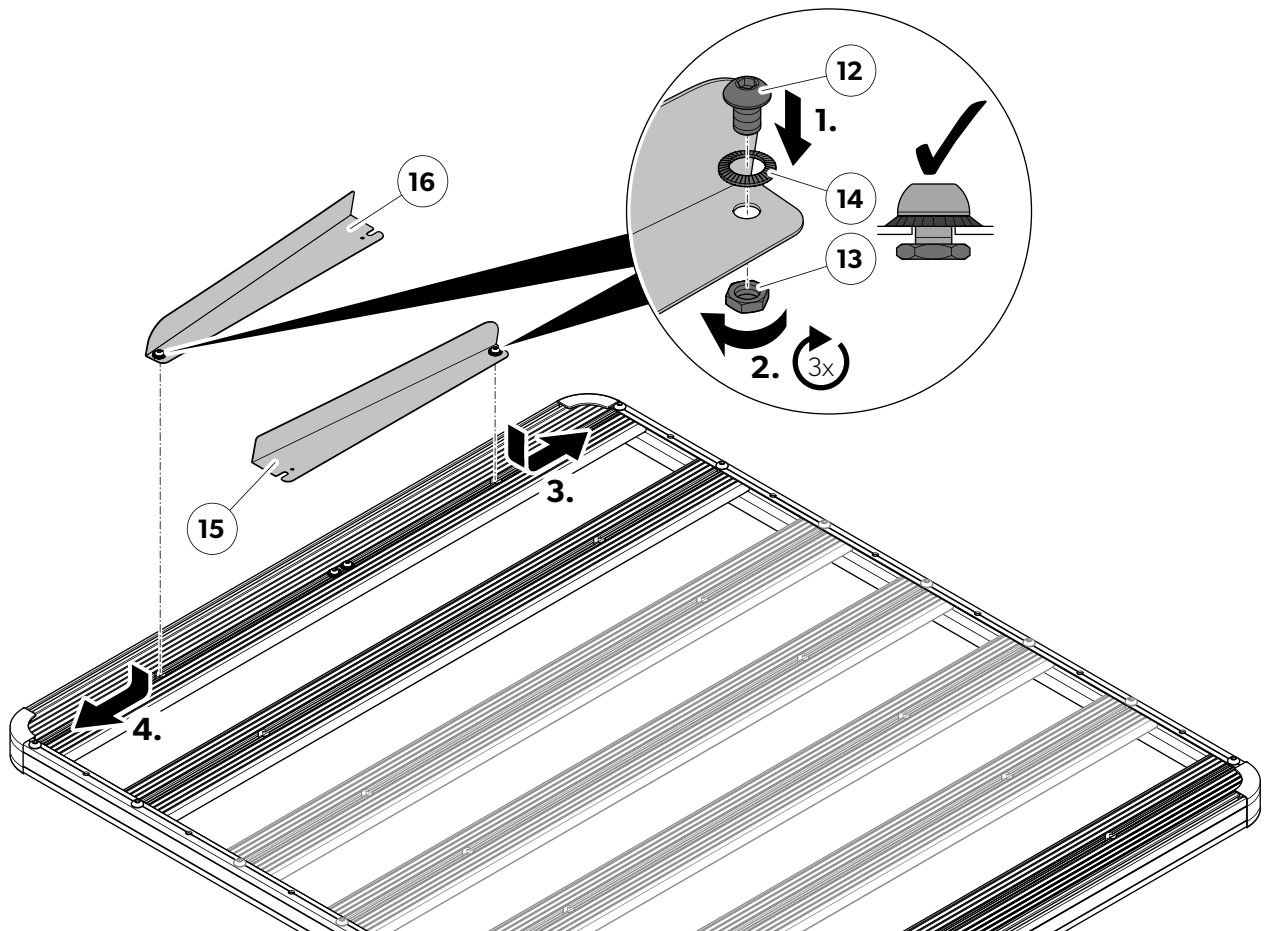

The diagram illustrates the three-step process of attaching the floorboard to the frame:

- 1.** Insert the floorboard into the frame.
- 2.** Tighten the screws.
- 3.** Tighten the screws.

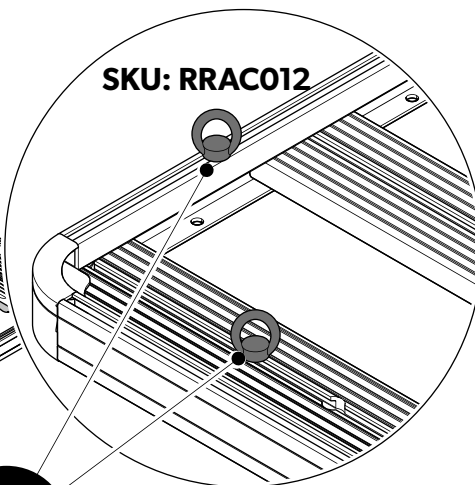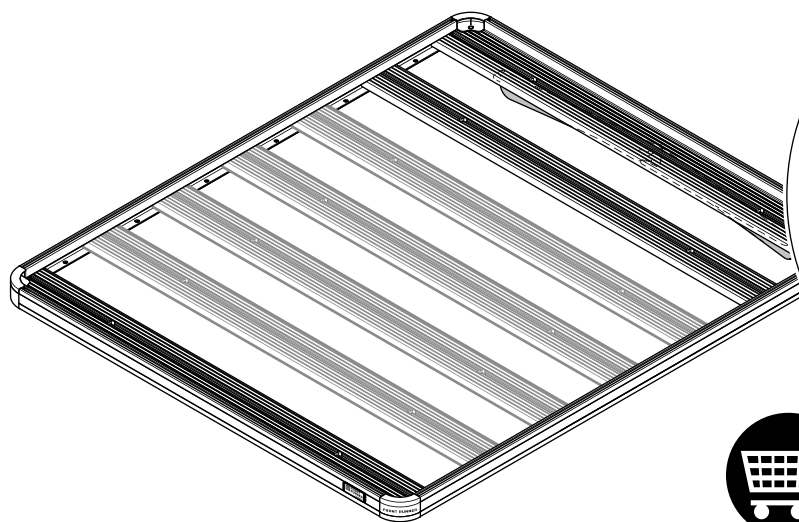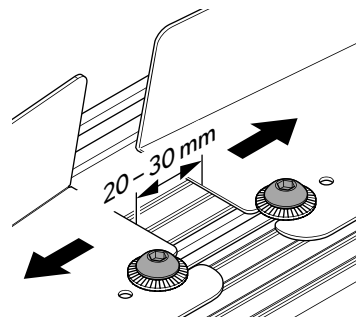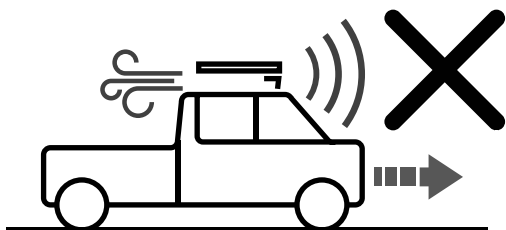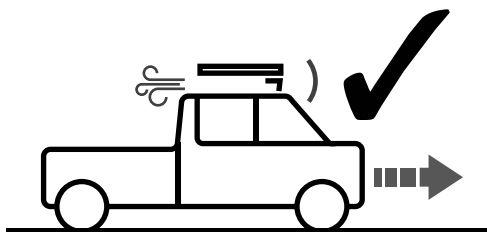

<http://qr.dometic.com/bfz9ll>



dometic.com

YOUR LOCAL DEALER

dometic.com/dealer

YOUR LOCAL SUPPORT

dometic.com/contact

YOUR LOCAL SALES OFFICE

dometic.com/sales-offices