




### READ ME!

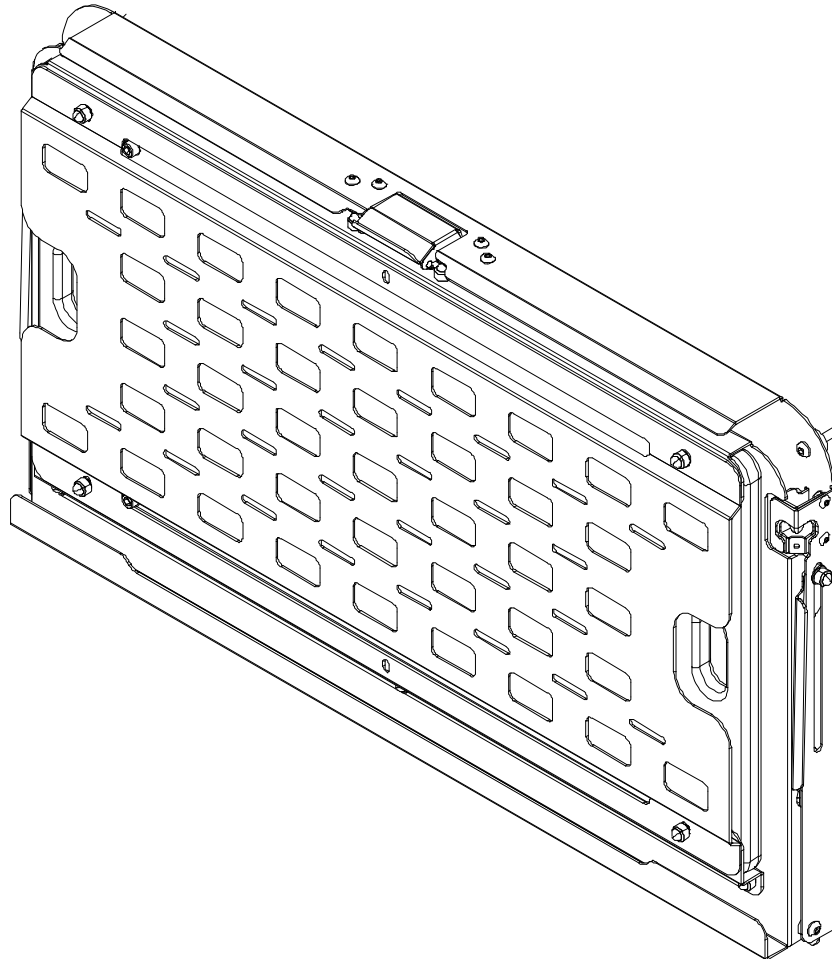

Thank you for purchasing a Ineos Grenadier Drop Down Table.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

### IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

**NOTE:** Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.



## 1 GET ORGANIZED


### IN THE BOX

|   |     |                          |
|---|-----|--------------------------|
| 1 | 1 X | Shelf Tray RH            |
| 2 | 2 X | Spacer 6.3 x 15 x 5      |
| 3 | 4 X | Spacer 8.2 x 18 x 10     |
| 4 | 4 X | M6 x 30 Button Head Bolt |

### TOOLS NEEDED



FIGURE 1.1

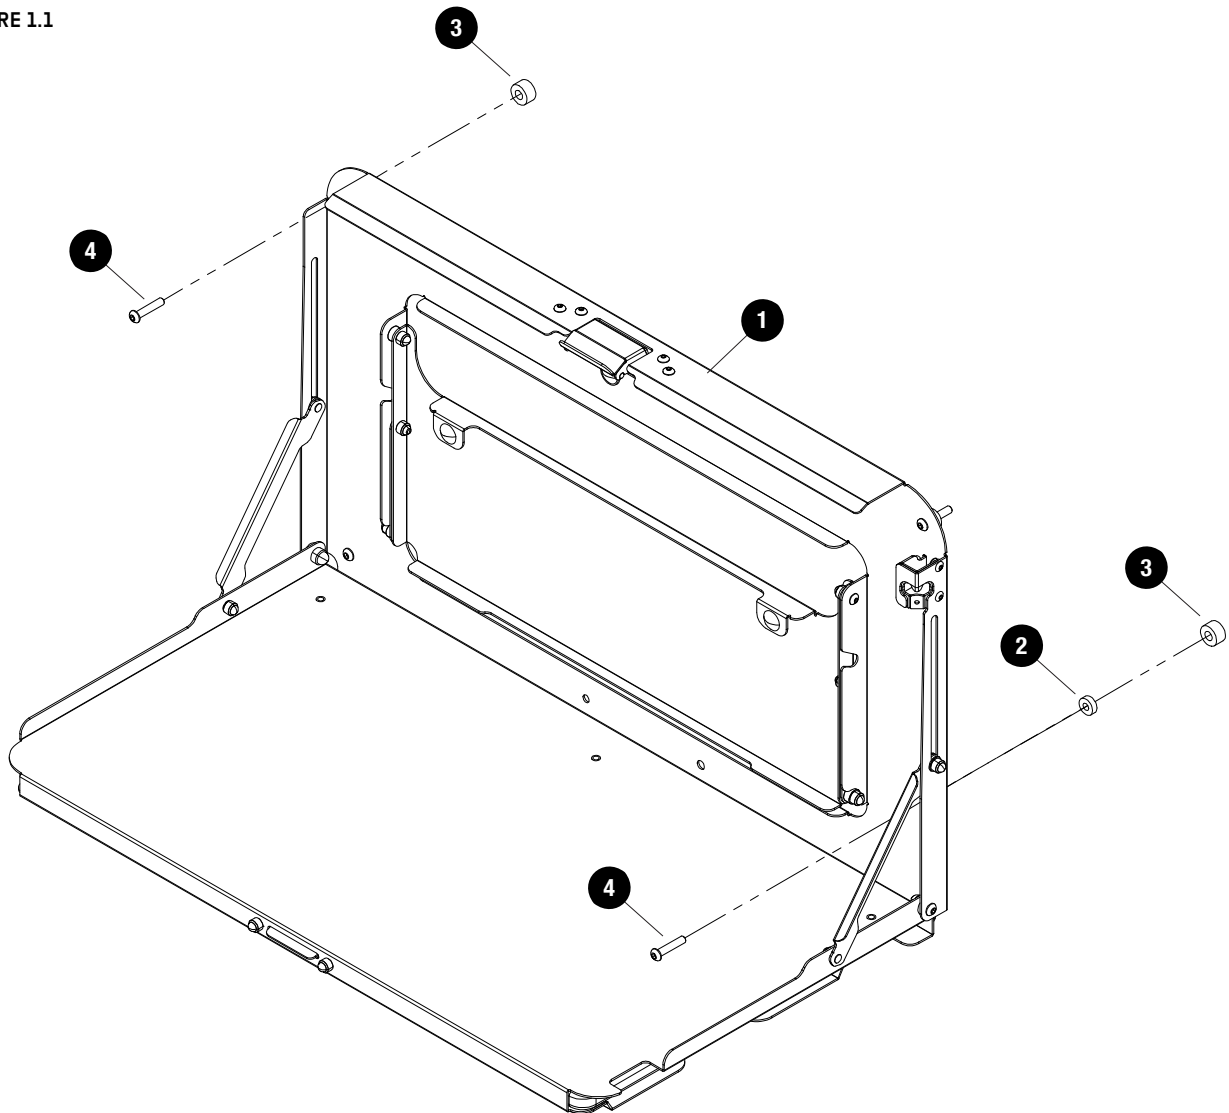

## 2


## FIT AND SECURE

2.1


  
Torx  
T25

Remove the fasteners shows from the rear door card. The Drop Down Table will be secured to these locations.

2.2

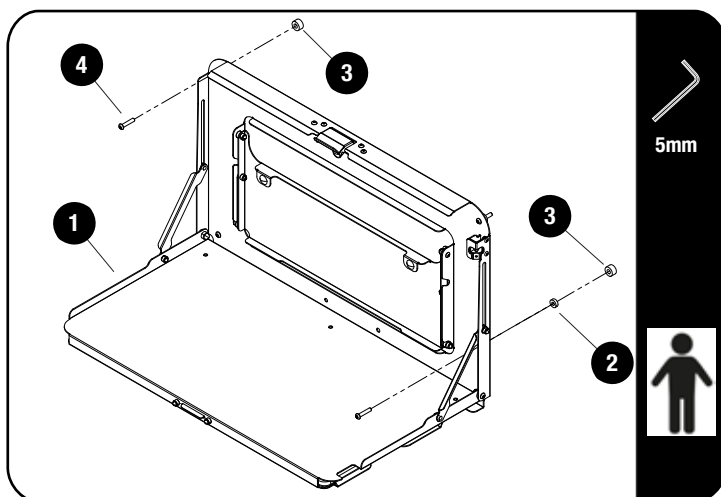

5mm


Open the table by releasing to latch on top. With the help of a friend, secure the Drop Down Table (Item 1) to the vehicle's rear door using M6 x 30 Button head bolts with one 10mm Spacer (Items 3 & 4) into the two top holes.

Use M6 x 30 Button Head Bolts together with one 10mm and one 6mm Spacer (Items 2, 3 & 4) in the two bottom holes.

**Tightening Torque:**

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

2.3

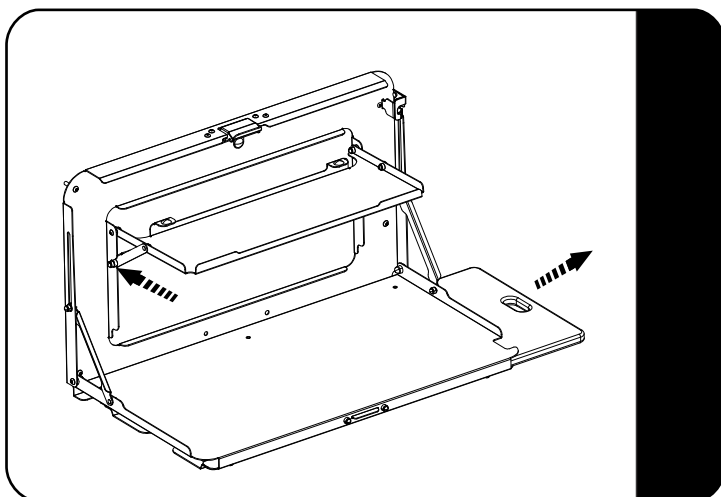

With the Drop Down Table open you can lift the upper work surface and secure in place. You can also slide out the lower work surface.

4

## CARE

Thoroughly clean the board with mild detergent and warm water. Avoid using harsh chemicals, as these can dry out the bamboo. Apply food grade mineral oil/beeswax to the table surface and edges, at regular intervals to extend the life of your bamboo board.

5

## FINISH

Congratulations! You did it. Take a step back and admire your work!

6

## INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    