**READ ME !** ⚠

Thank you for purchasing Mitsubishi Pajero SWB Tracks / 1620mm (L).

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX


1	10 X	M6 x 25 Countersunk Bolt
2	10 X	M6 Clinch Nut
3	2 X	Rubber Strip - 1620mm Long
4	2 X	Double Sided Tape
5	2 X	Track - 1620mm Long - 1 LH & 1 RH

TOOLS NEEDED



Anti
Rust

FIGURE 1.1

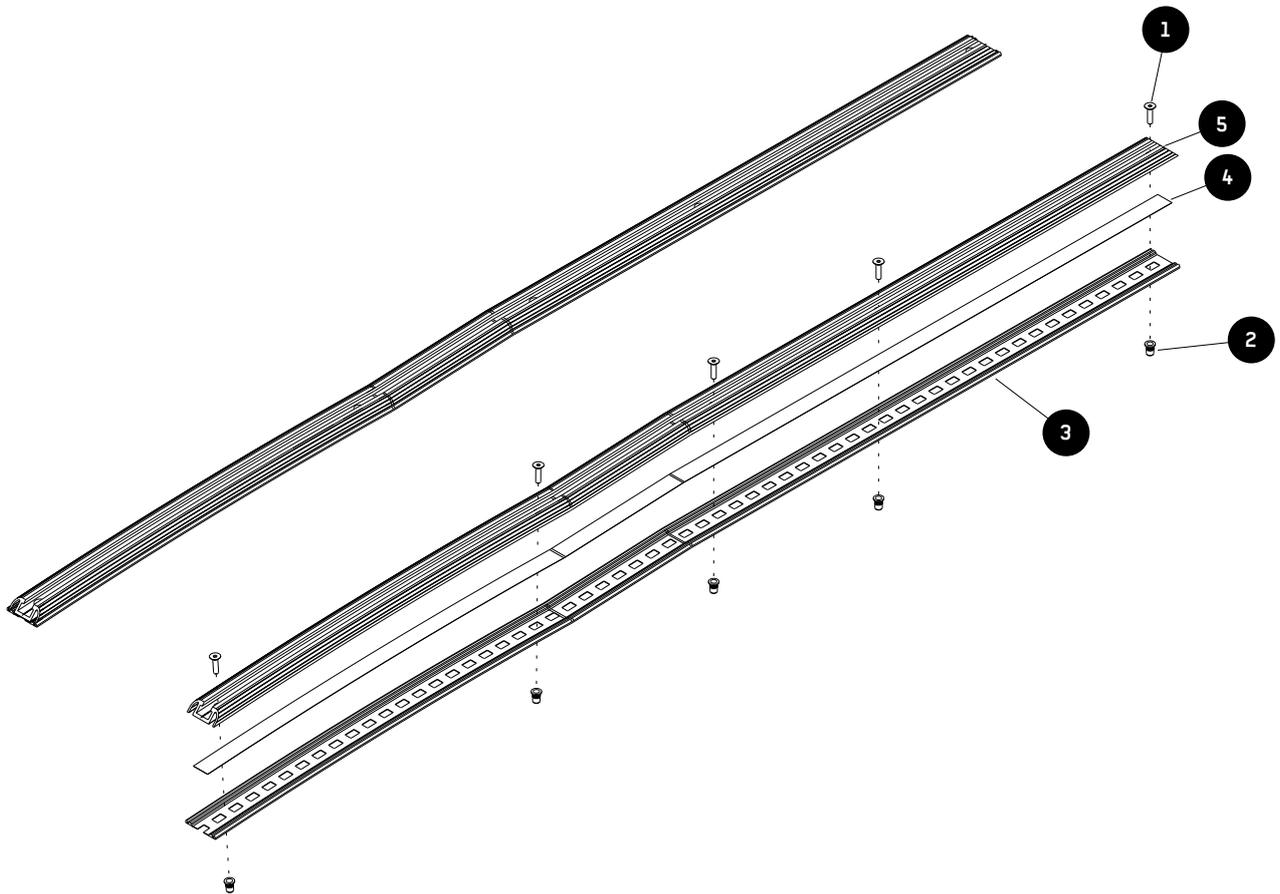

2.1



 Carefully remove the plastic trim panel from the inside of the vehicle and remove the lights, safety belts and plastic clips, so that the roof lining can be dropped.

2.2



 Place the track on top of the roof 120mm from the back door and next to the rain gutter.

2.3



 At the front of the vehicle, the rack is 30mm from the rain gutter.

2

FIT AND SECURE

2.4



🔄 Mark the holes, and drill a pilot hole of 3.5mm and open the holes up to 9mm.

Place some Anti-Rust on all the holes and insert all Clinch Nuts. Install the Clinch Nut using a rivnut tool or VACC016 (sold separately).

Place a bead of silicone in and around all Clinch Nuts and fasten the track using the Double sided tape and M6 x 25 Countersunk Bolts.

2.5



🔄 Carefully replace roof lining.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:    