










**FRONT
RUNNER**
↗ DOMETIC



Slimline II Tray

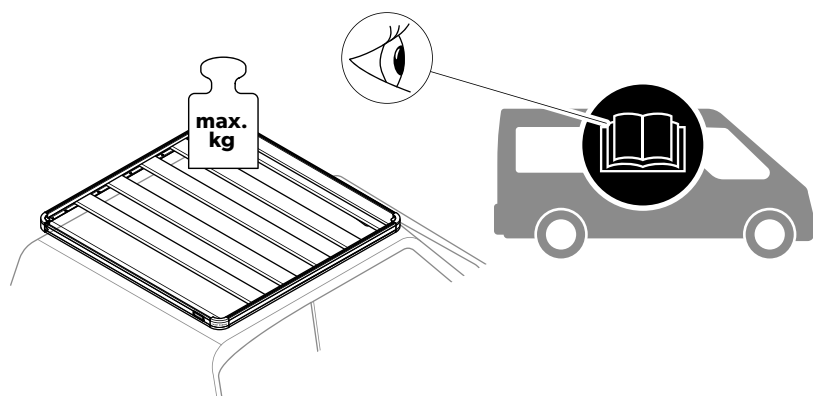










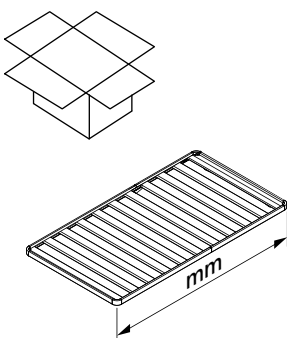		1	2	3	4	5	6	7	8	9	10	11	
									 M8 x 45	 M8	 M8 x 25	 M6 x 10	
3 Slat	550	2x	-	2x	1	4x	-	-	-	-	6	4x	
4 Slat	752				2						8		
5 Slat	954	-	2x		3						10		
6 Slat	1156				4						12		
7 Slat	1358				5						14		
8 Slat	1560				6						16		
9 Slat	1762	2x	-		7						18		
10 Slat	1964				8						20		
11 Slat	2166	-	4x		9		2x	2x	4x	4x	22		
12 Slat	2366				10						24		
13 Slat	2570				11						26		
14 Slat	2772				12						28		

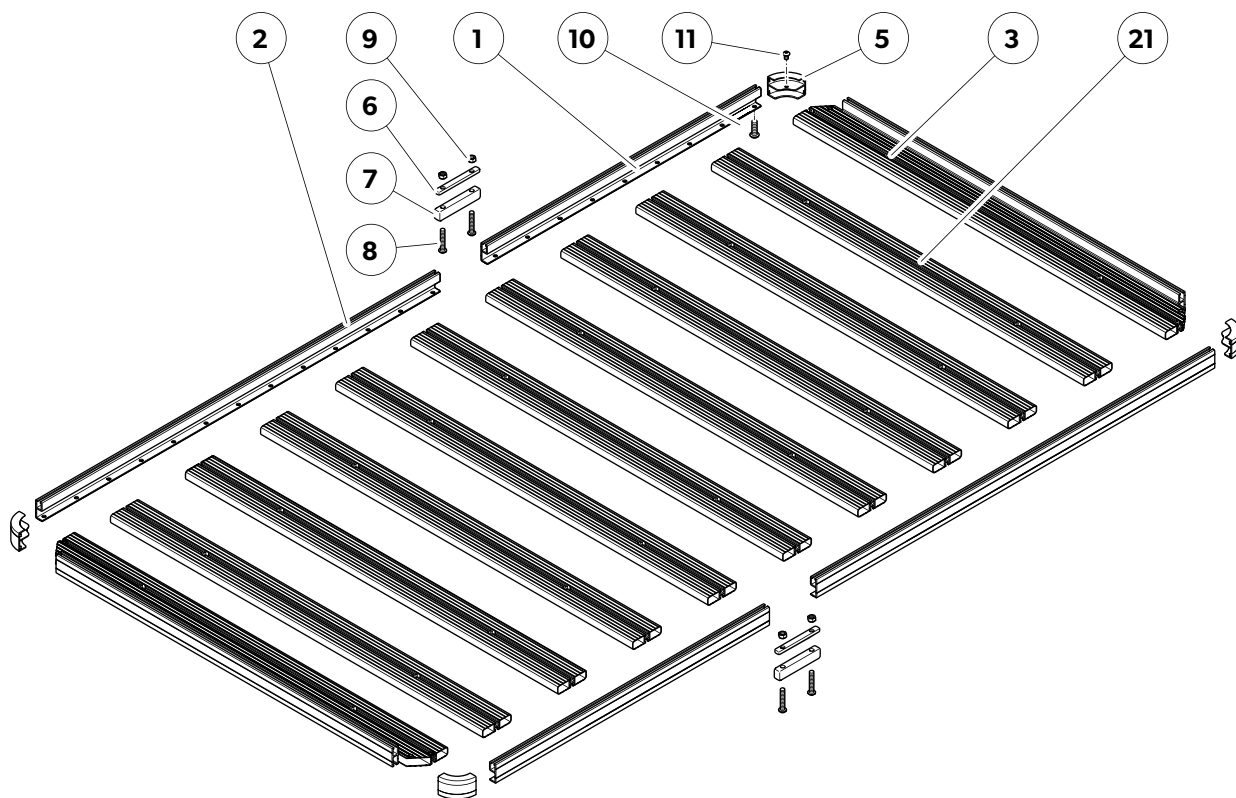


12	13	14	15	16
4x	4x	4x		
M8 x 12	M8	M8		
				

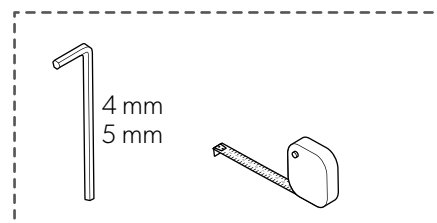


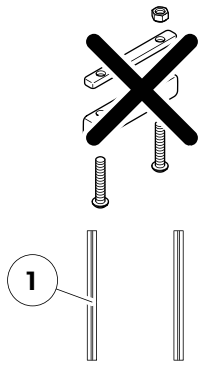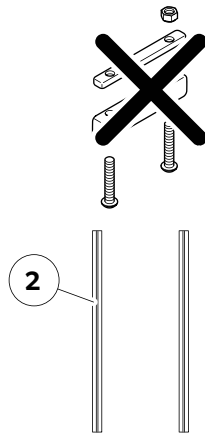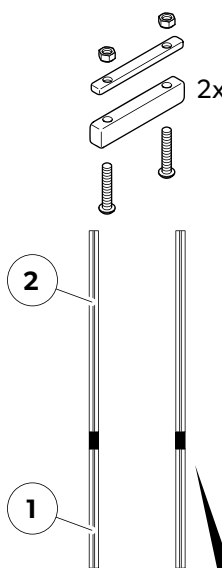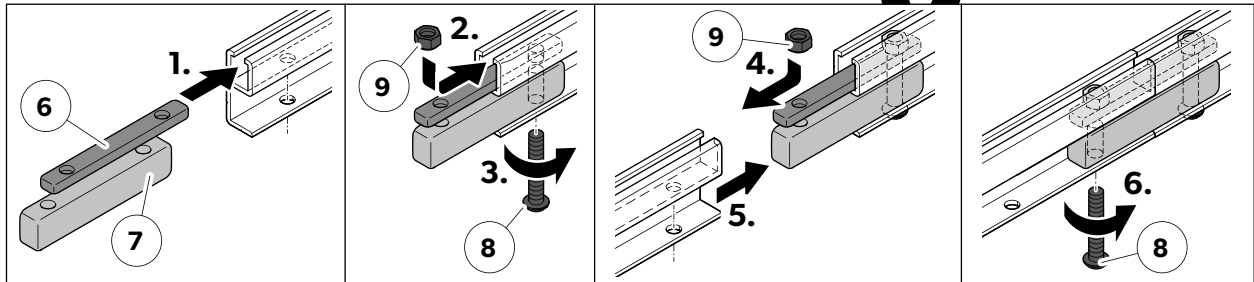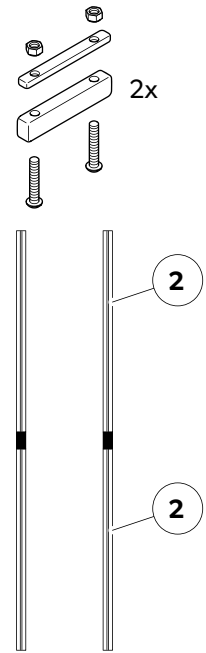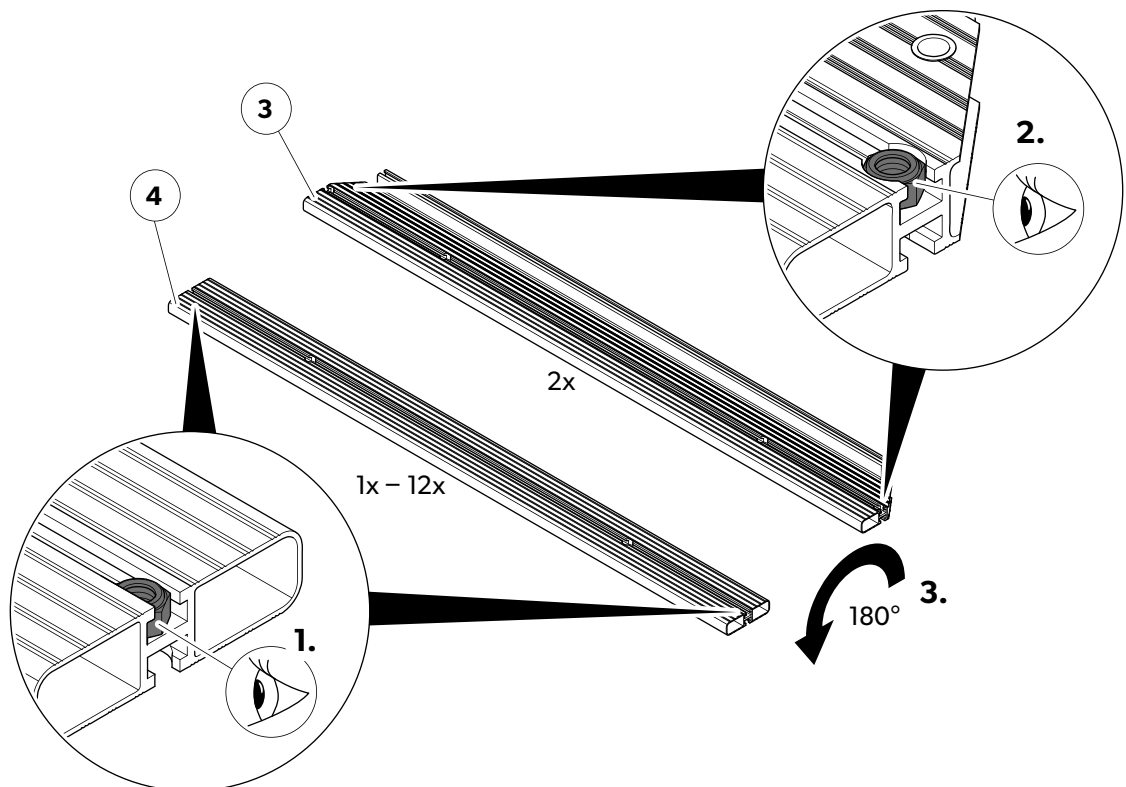1**3 Slat / 4 Slat****5 Slat / 6 Slat
7 Slat / 8 Slat****9 Slat / 10 Slat
11 Slat****12 Slat / 13 Slat
14 Slat****2**


3

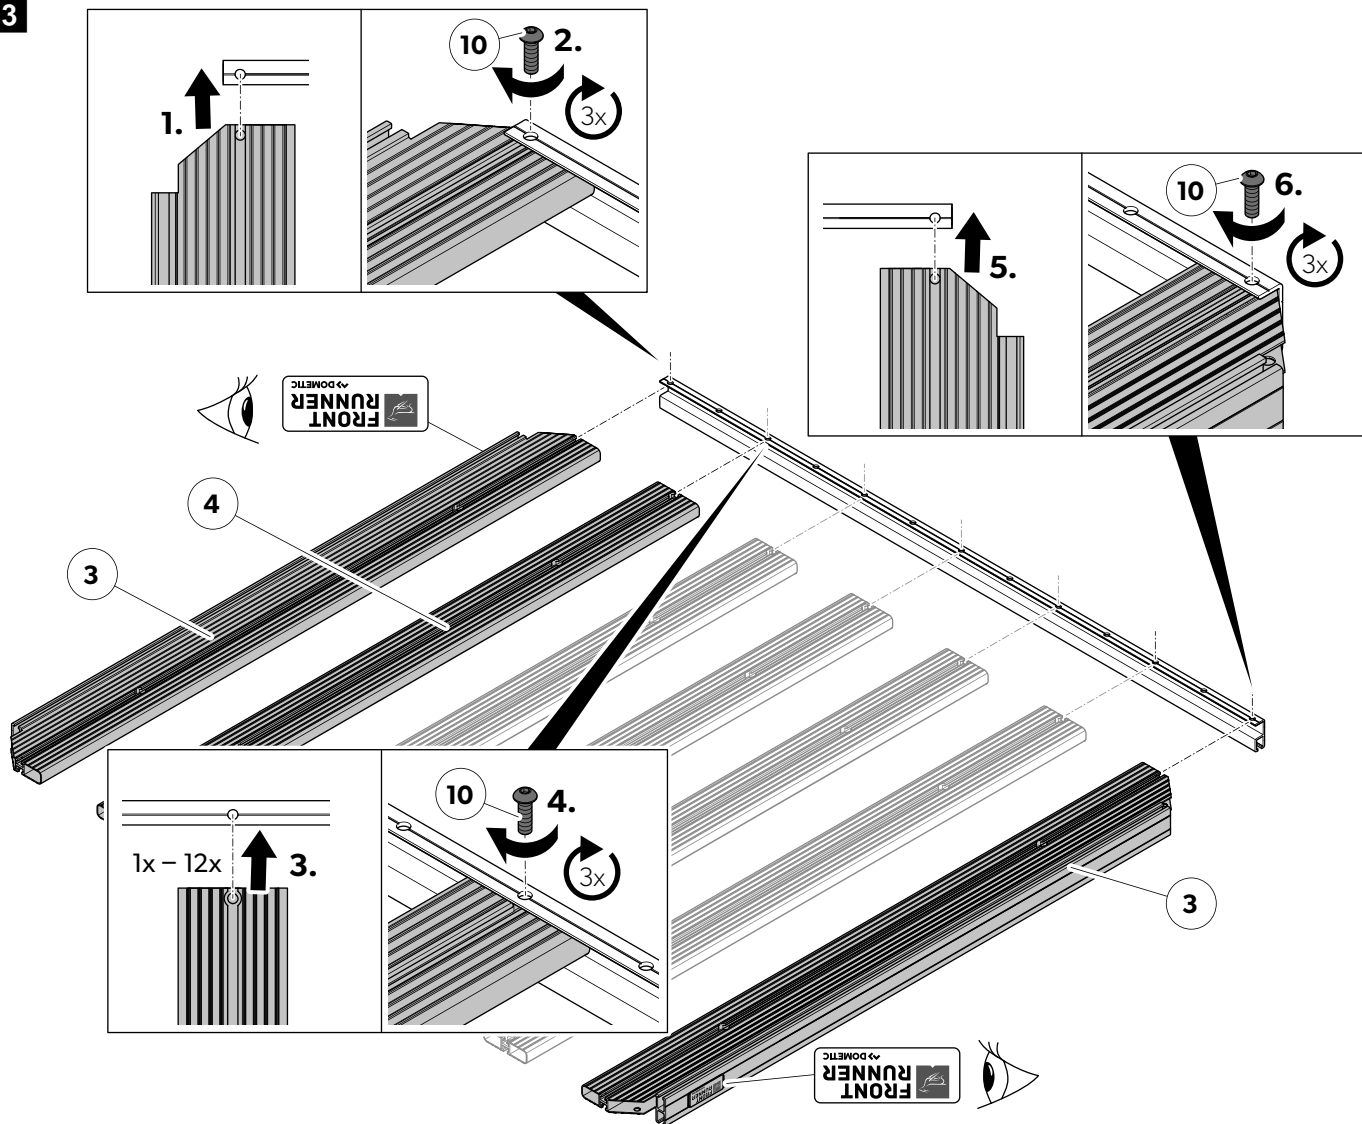


4

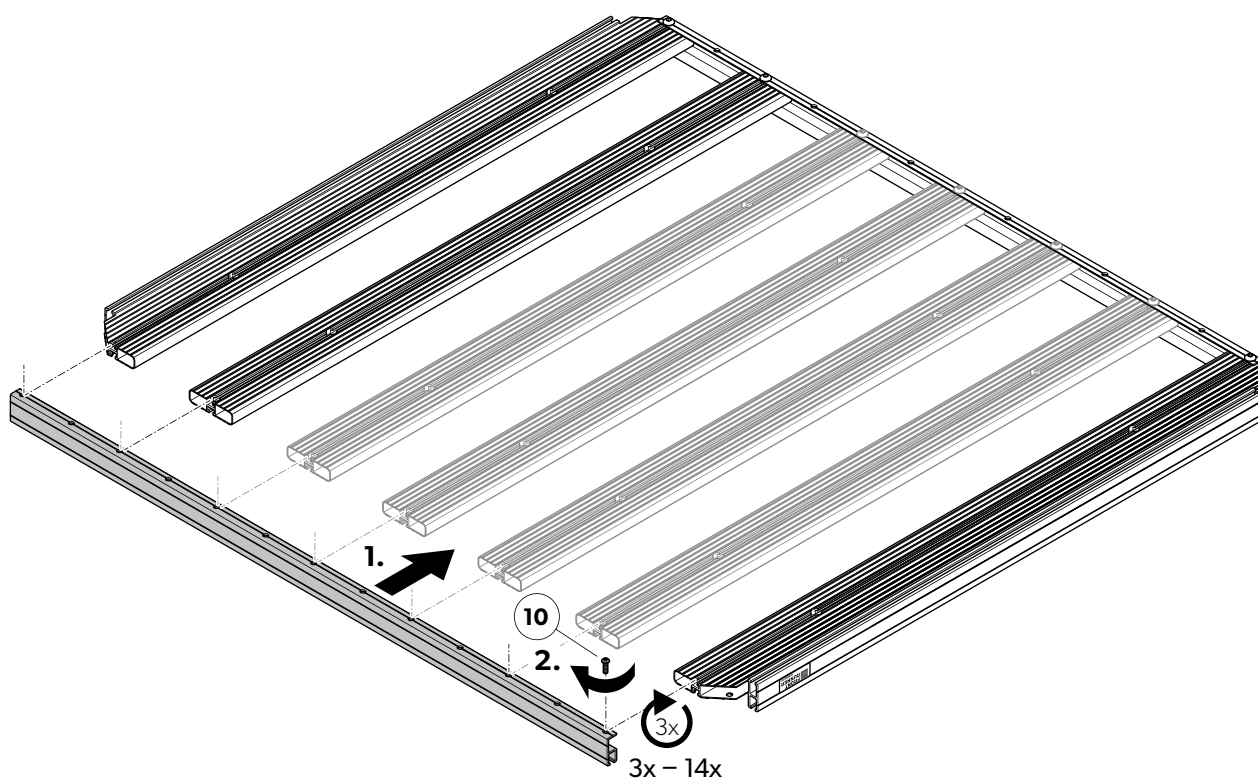

5


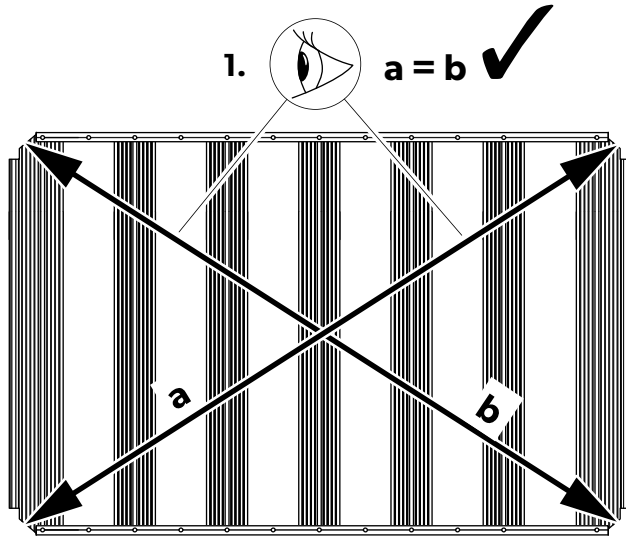


2.

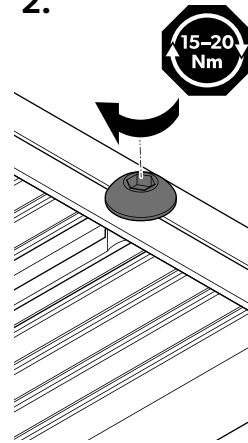


3 Slat	6x
4 Slat	8x
5 Slat	10x
6 Slat	12x
7 Slat	14x
8 Slat	16x
9 Slat	18x
10 Slat	20x
11 Slat	22x
12 Slat	24x
13 Slat	26x
14 Slat	28x


6

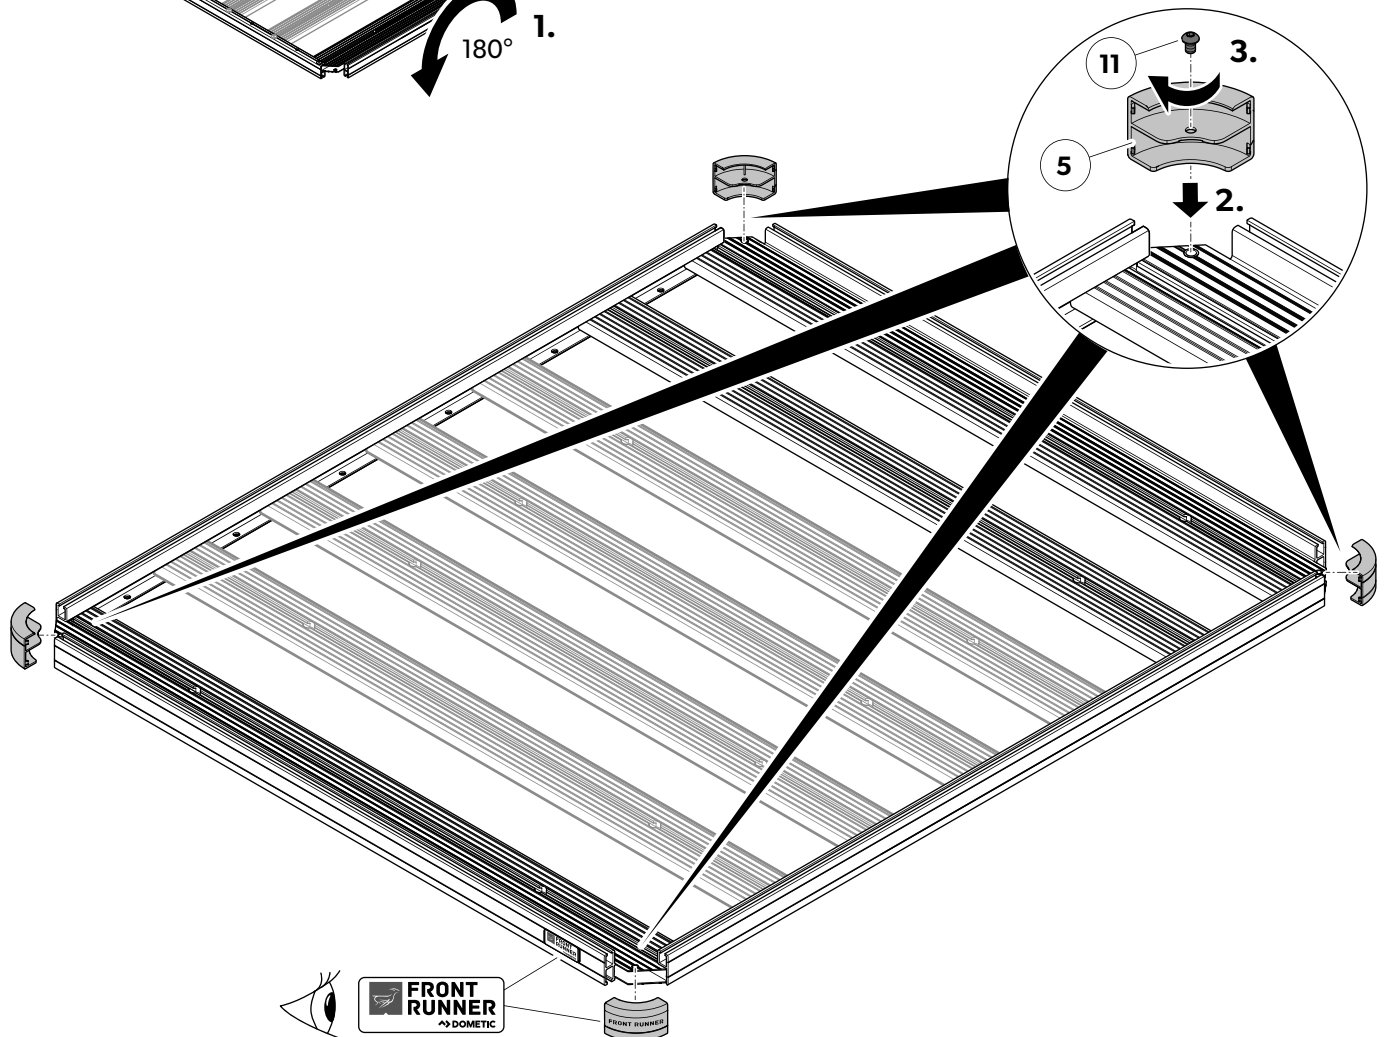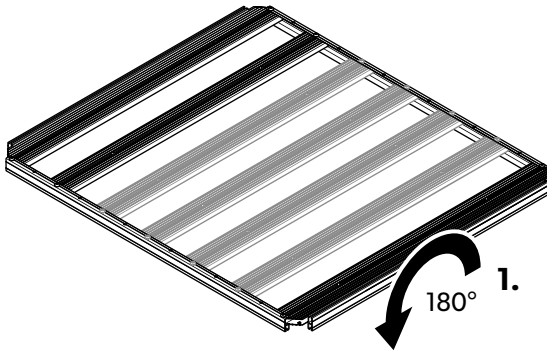





7

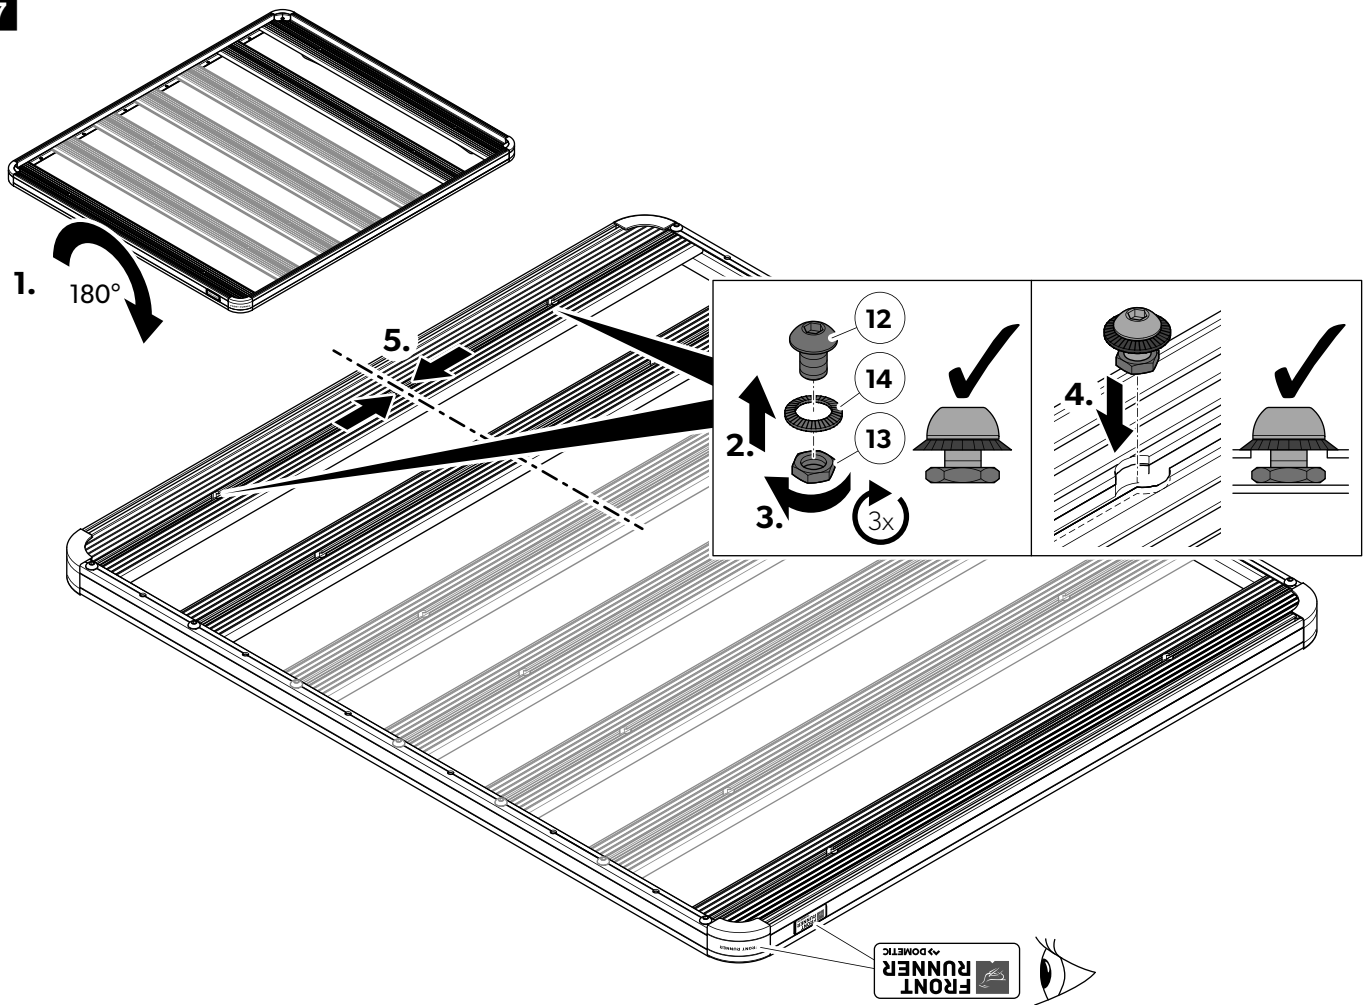

8

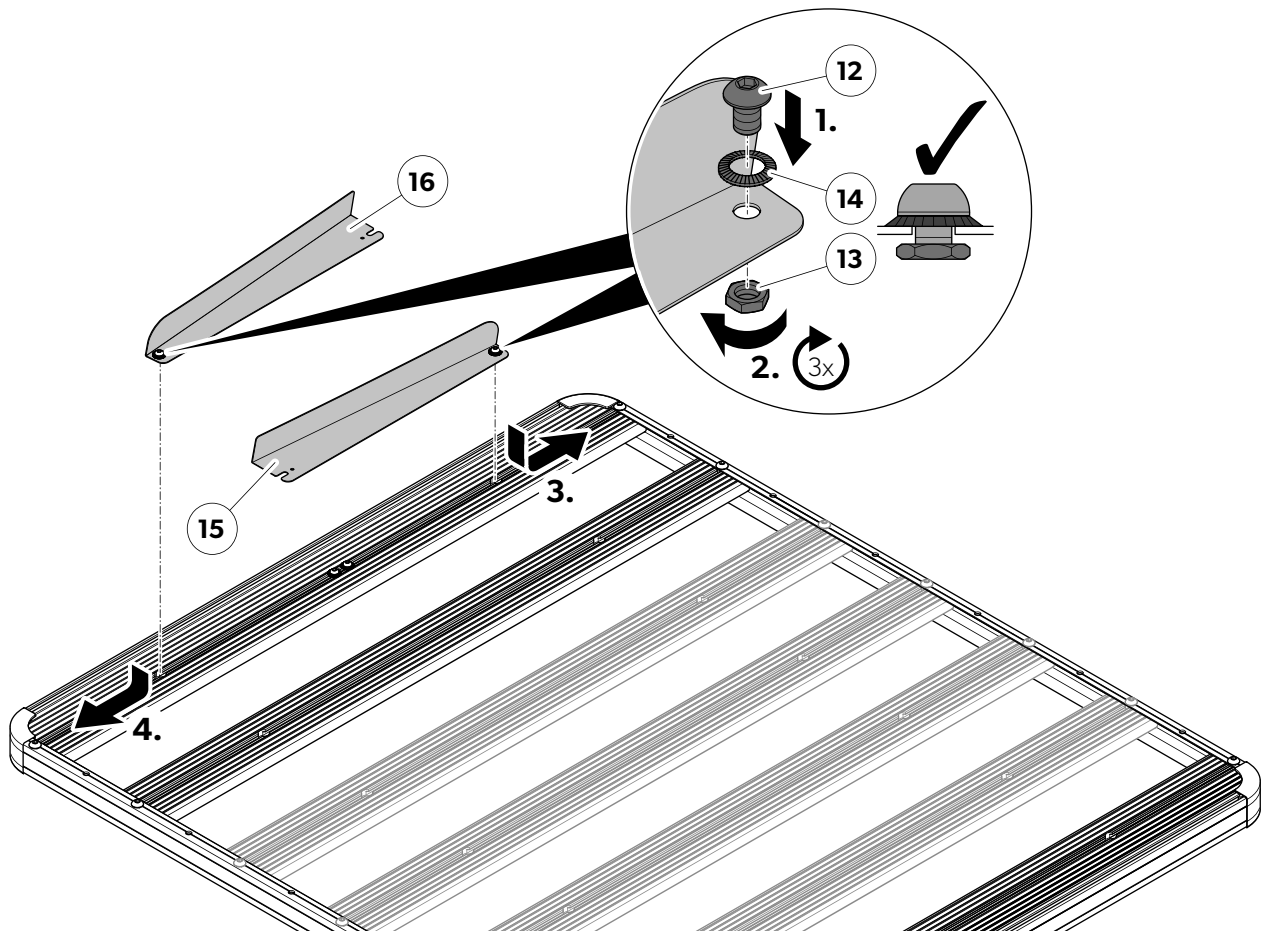

The diagram illustrates the three-step process of attaching the floor mat to the vehicle floor. Step 1 shows the mat being inserted into the floor. Step 2 shows the mat being pushed down to secure it. Step 3 shows the mat being pushed down to secure it.

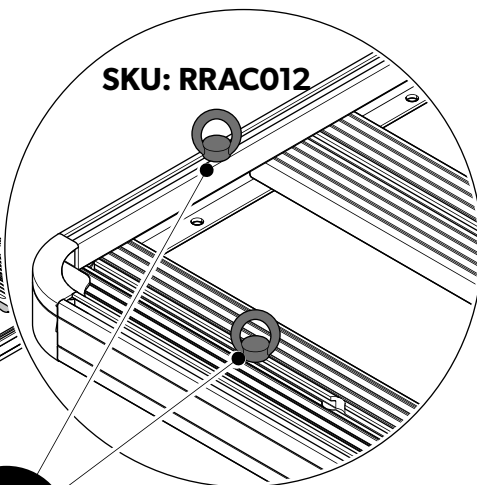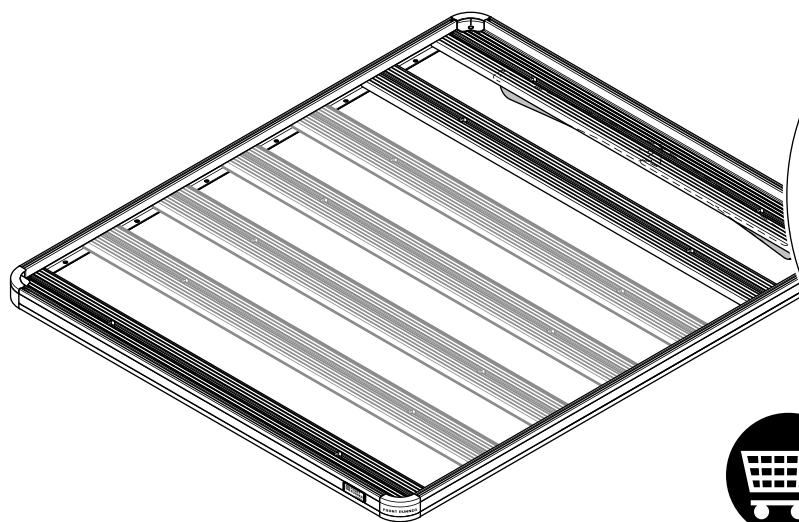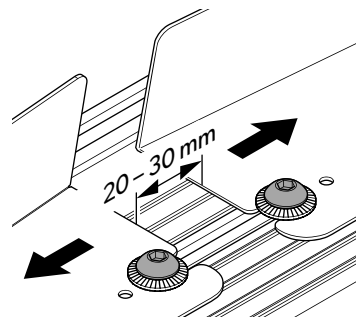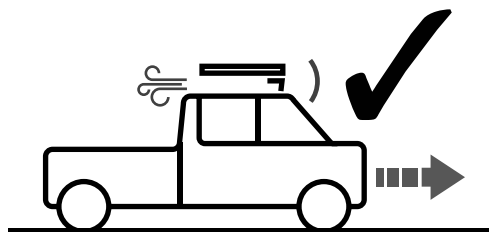

<http://qr.dometic.com/bfz9ll>



dometic.com

YOUR LOCAL DEALER

dometic.com/dealer

YOUR LOCAL SUPPORT

dometic.com/contact

YOUR LOCAL SALES OFFICE

dometic.com/sales-offices