





**FRONT  
RUNNER**  
↗ DOMETIC

## Slimline II Tray

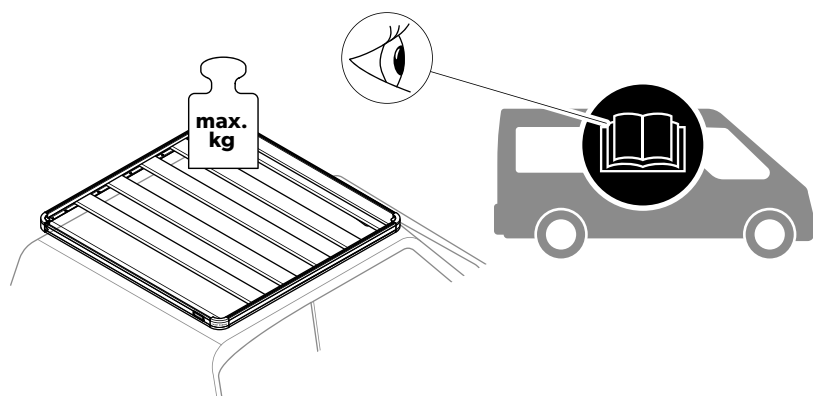





|         |      | 1  | 2  | 3 | 4  | 5  | 6  | 7  | 8  | 9  | 10 | 11 |
|---------|------|----|----|---|----|----|----|----|----|----|----|----|
|         |      |    |    |   |    |    |    |    |    |    |    |    |
| 3 Slat  | 550  | 2x | -  |   | 1  |    |    |    |    |    | 6  |    |
| 4 Slat  | 752  |    |    |   | 2  |    |    |    |    |    | 8  |    |
| 5 Slat  | 954  |    |    |   | 3  |    | -  | -  | -  | -  | 10 |    |
| 6 Slat  | 1156 |    |    |   | 4  |    |    |    |    |    | 12 |    |
| 7 Slat  | 1358 | -  |    |   | 5  |    |    |    |    |    | 14 |    |
| 8 Slat  | 1560 |    |    |   | 6  |    |    |    |    |    | 16 |    |
| 9 Slat  | 1762 | 2x |    |   | 7  | 4x |    |    |    |    | 18 |    |
| 10 Slat | 1964 |    |    |   | 8  |    |    |    |    |    | 20 |    |
| 11 Slat | 2166 | 2x |    |   | 9  |    | 2x | 2x | 4x | 4x | 22 |    |
| 12 Slat | 2366 |    |    |   | 10 |    |    |    |    |    | 24 |    |
| 13 Slat | 2570 | -  | 4x |   | 11 |    |    |    |    |    | 26 |    |
| 14 Slat | 2772 |    |    |   | 12 |    |    |    |    |    | 28 |    |

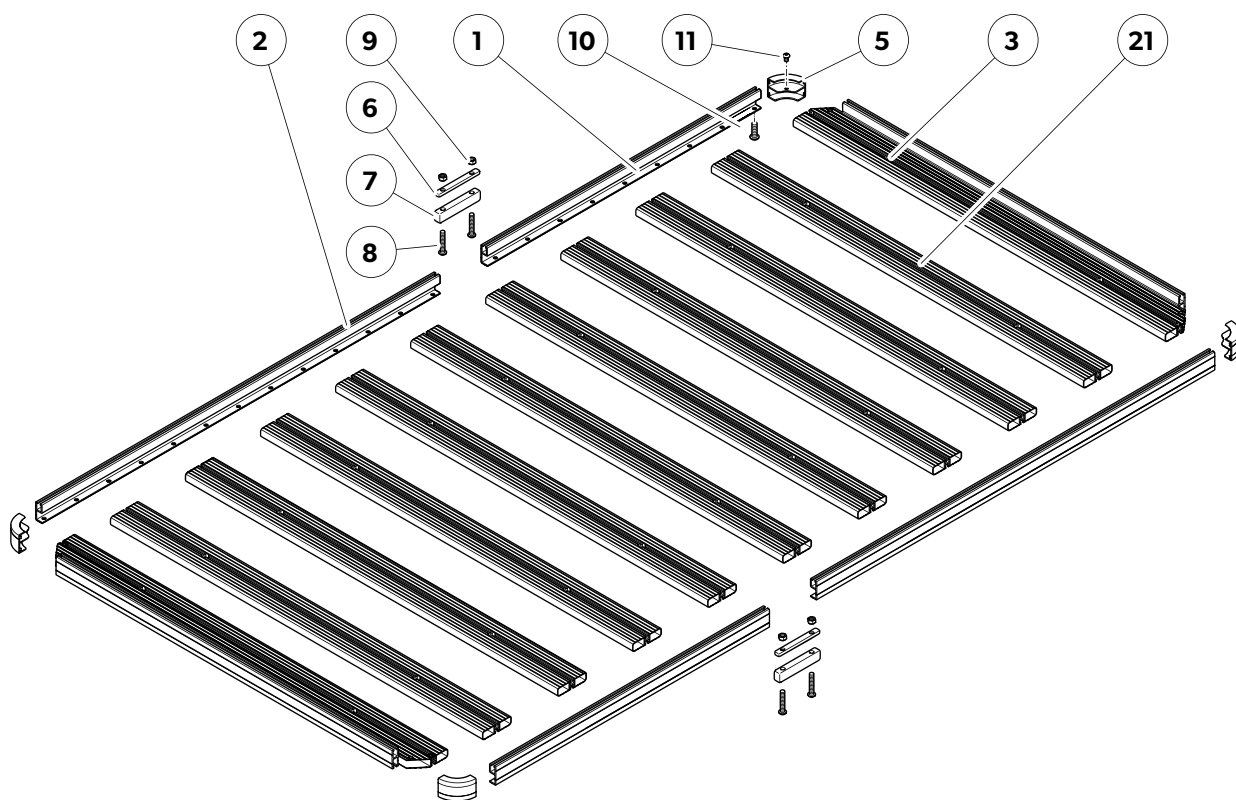


| 12      | 13 | 14 | 15 | 16 |
|---------|----|----|----|----|
| 4x      | 4x | 4x |    |    |
| M8 x 12 | M8 | M8 |    |    |
|         |    |    |    |    |

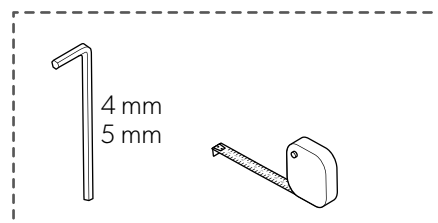


**12 Slat / 13 Slat**  
**14 Slat**

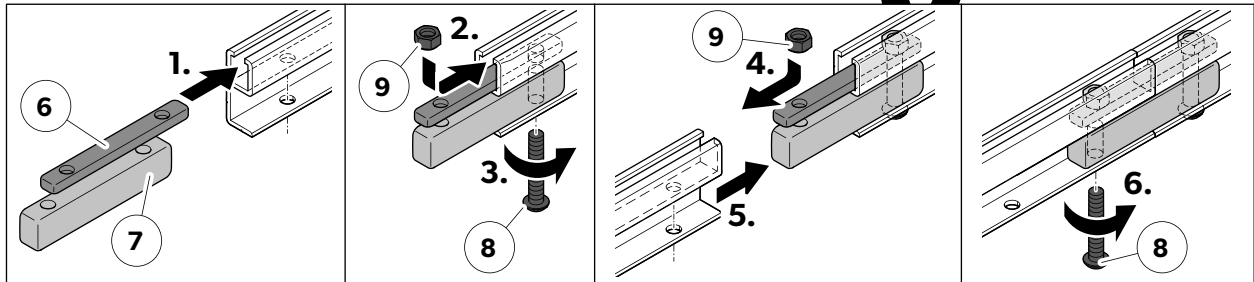


3

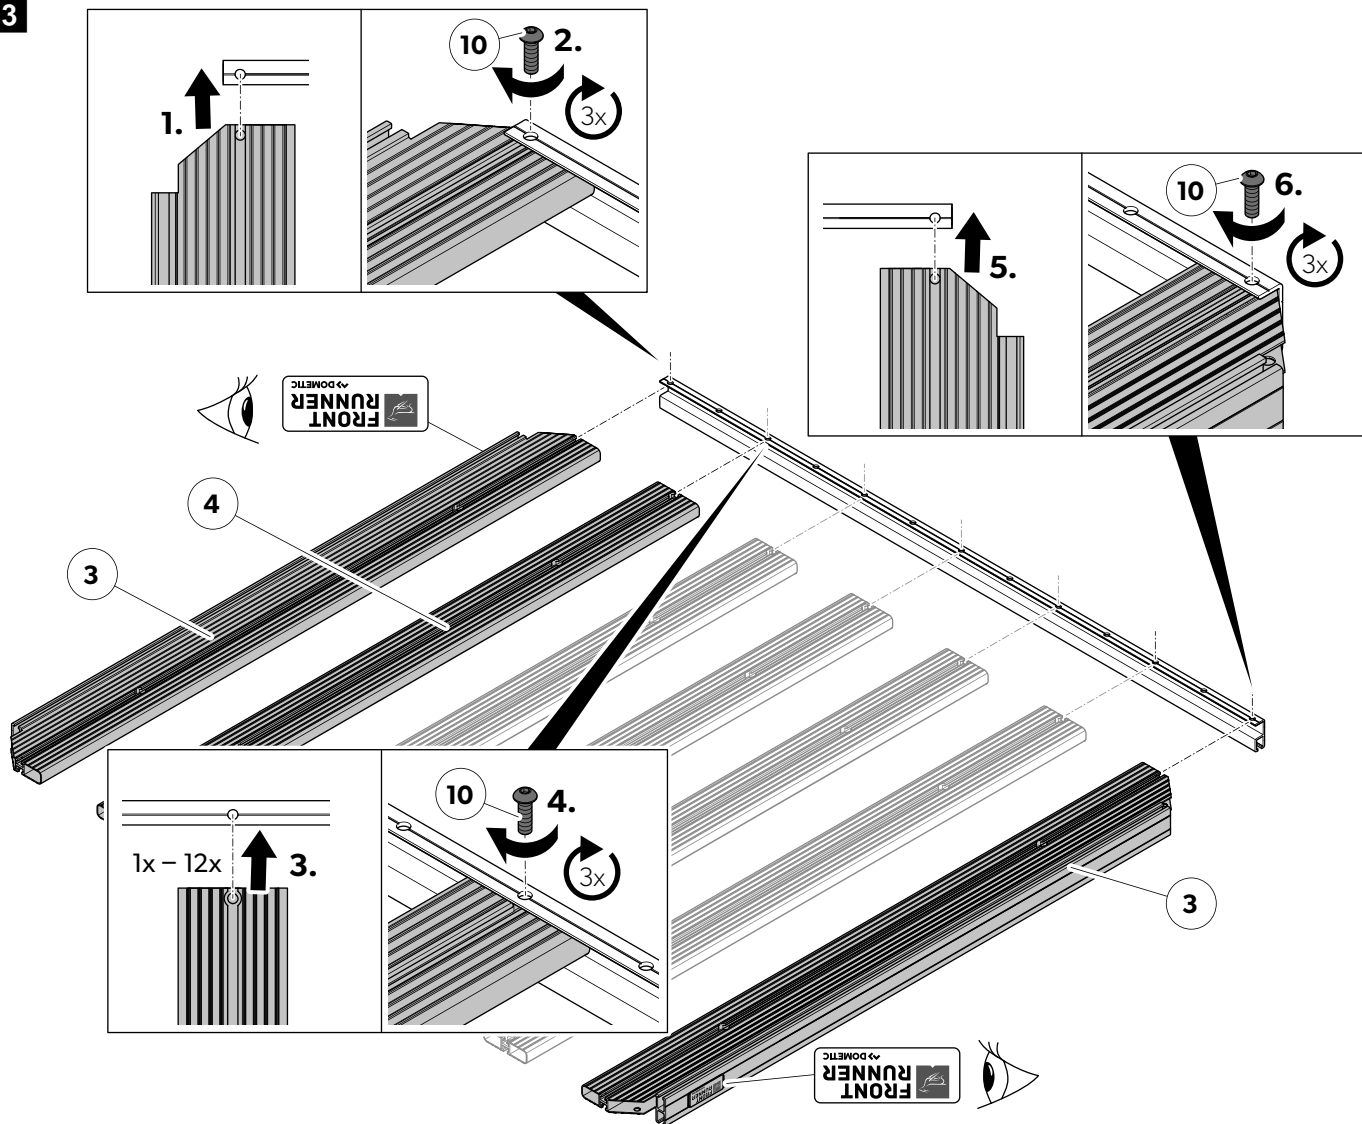


4

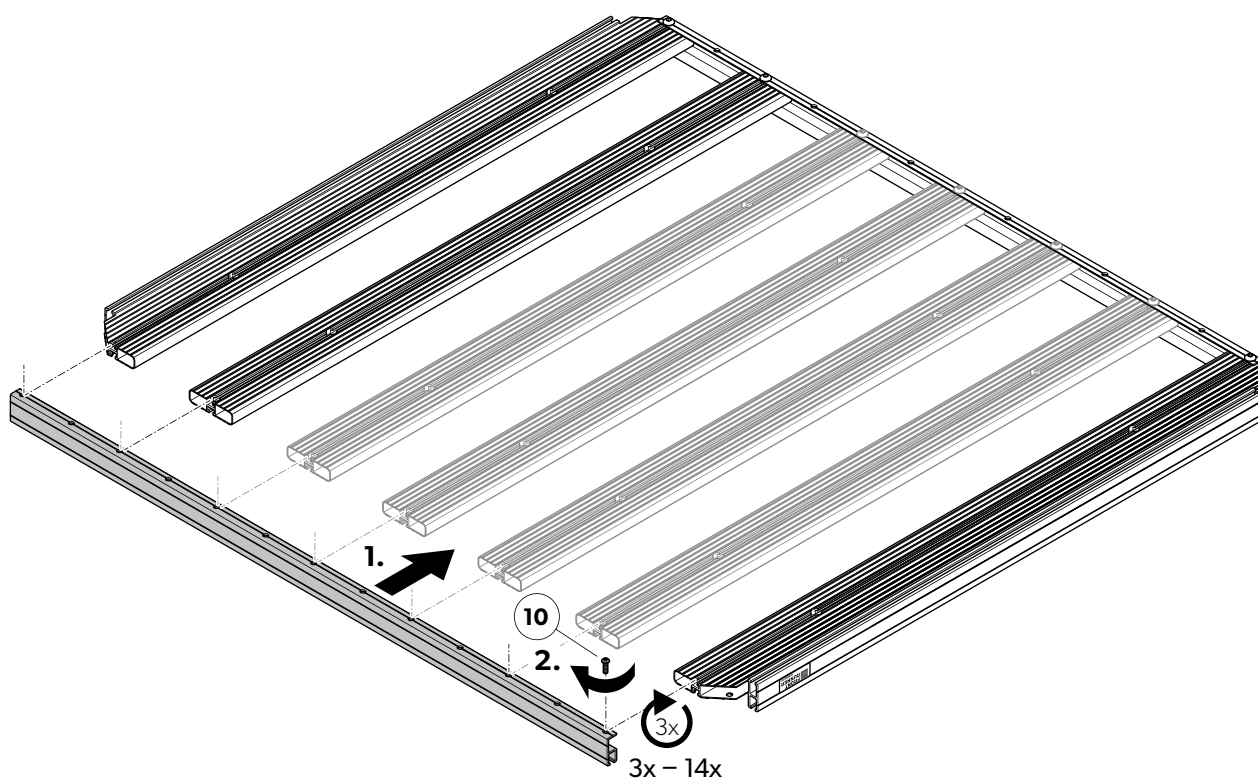

5


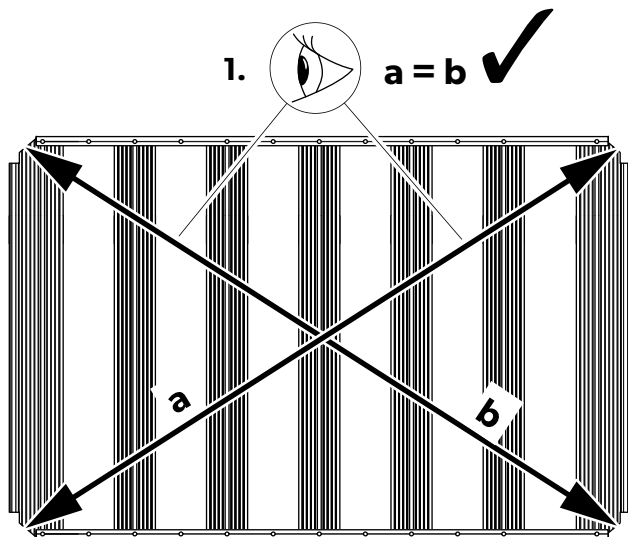


2.

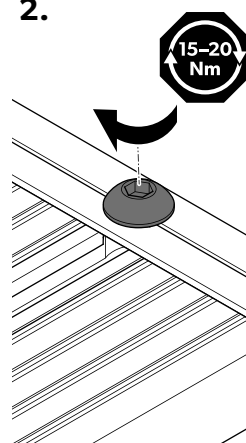


|         |     |
|---------|-----|
| 3 Slat  | 6x  |
| 4 Slat  | 8x  |
| 5 Slat  | 10x |
| 6 Slat  | 12x |
| 7 Slat  | 14x |
| 8 Slat  | 16x |
| 9 Slat  | 18x |
| 10 Slat | 20x |
| 11 Slat | 22x |
| 12 Slat | 24x |
| 13 Slat | 26x |
| 14 Slat | 28x |


6

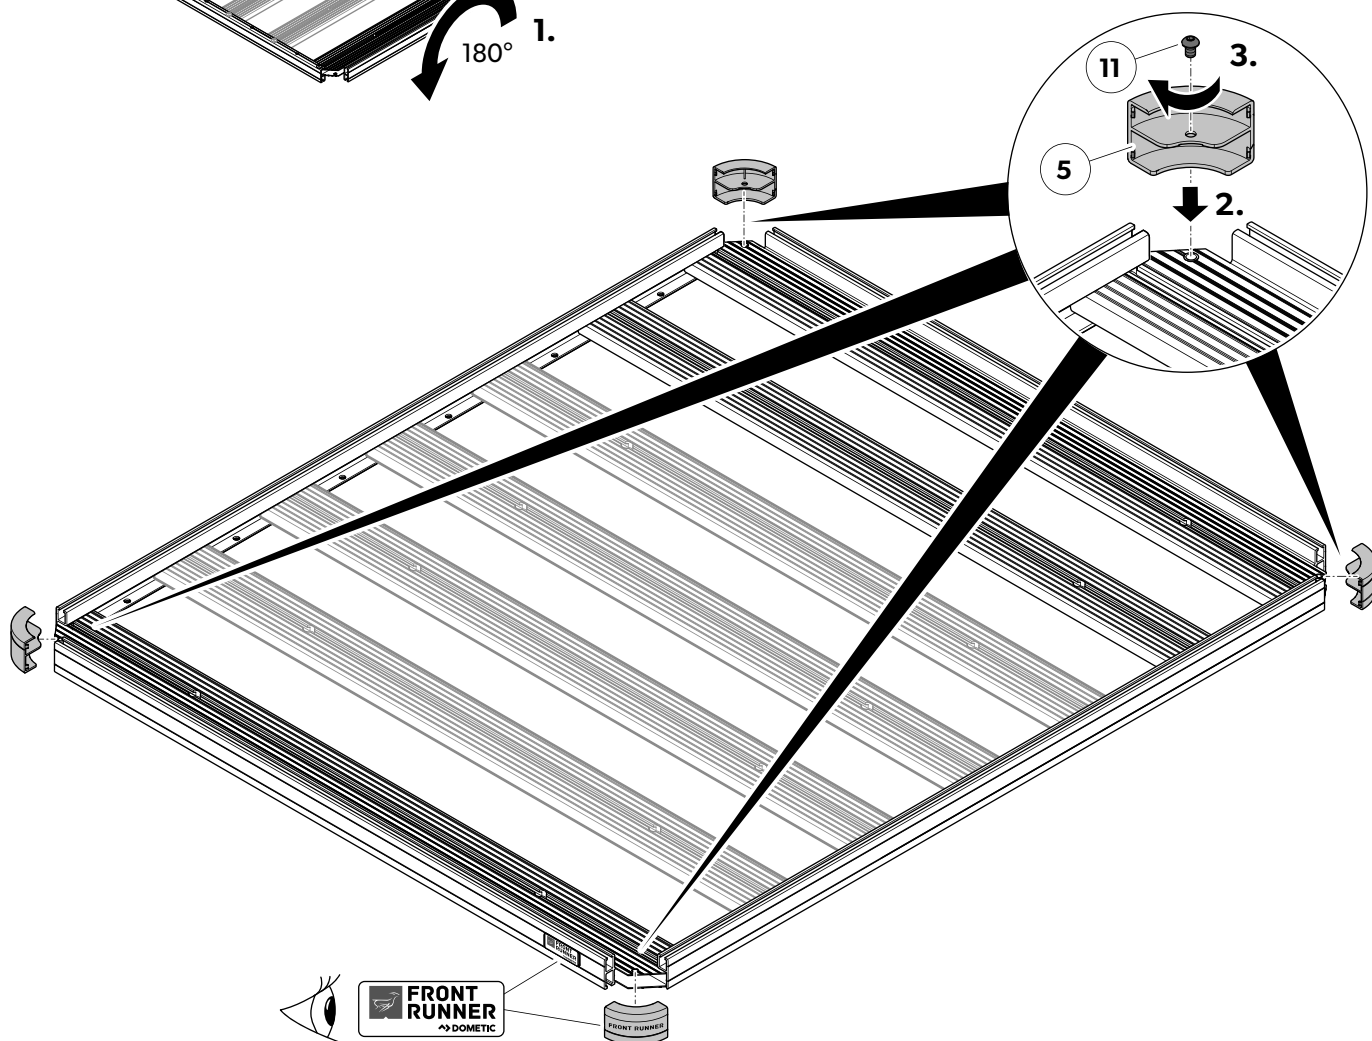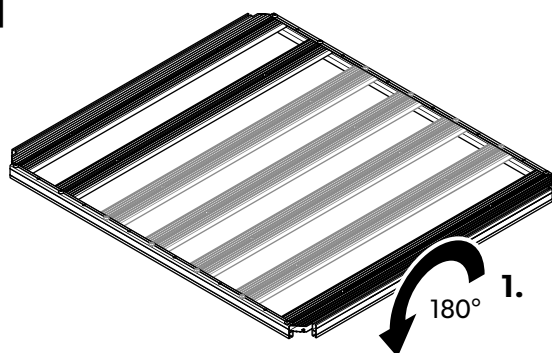

7





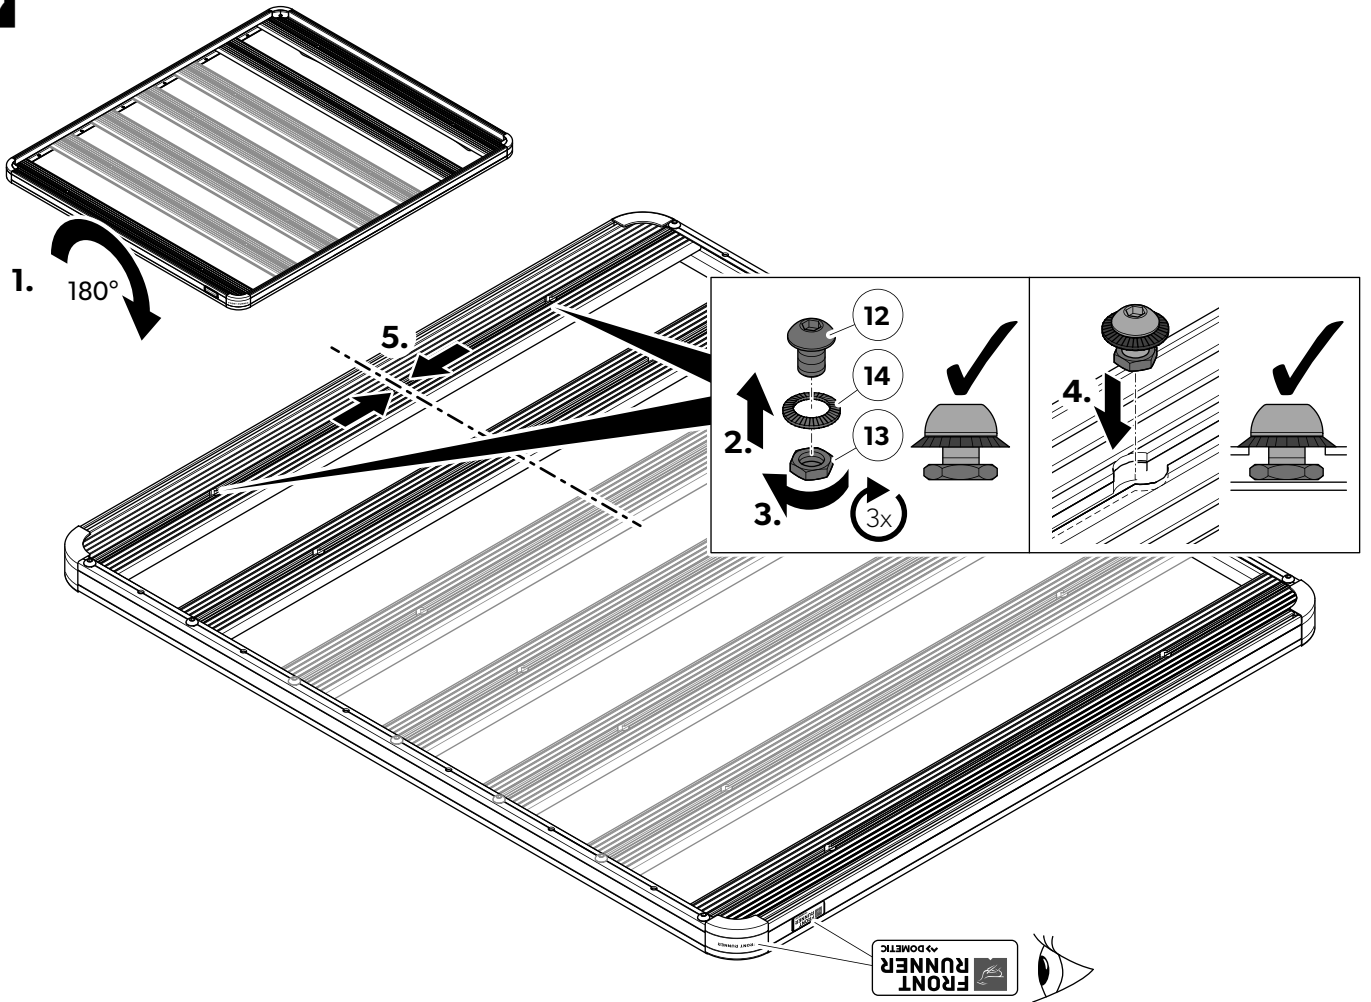


8

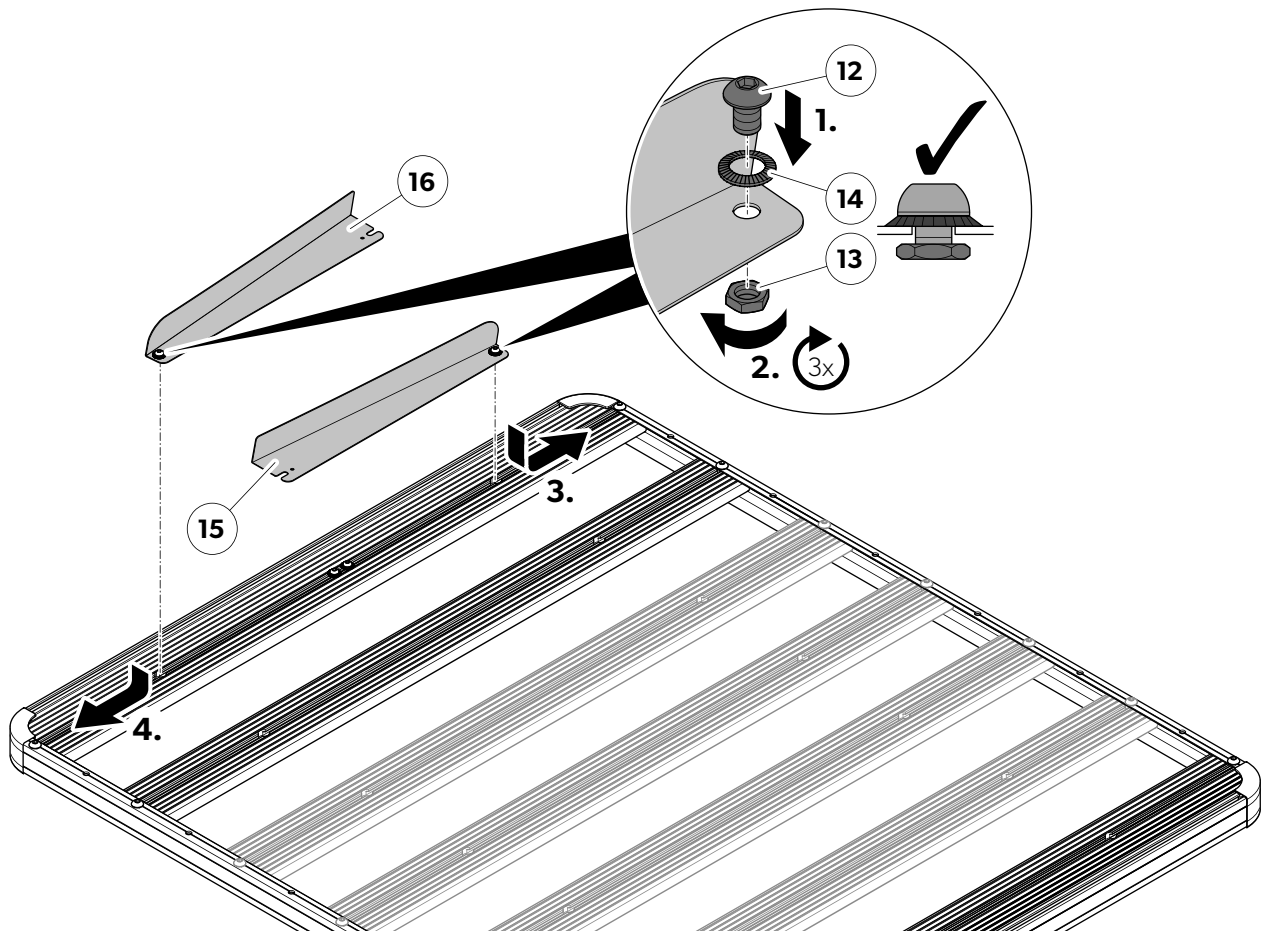

The diagram illustrates the three-step process of attaching the floorboard to the frame:

- 1.** Insert the floorboard into the frame.
- 2.** Tighten the screws.
- 3.** Tighten the screws.

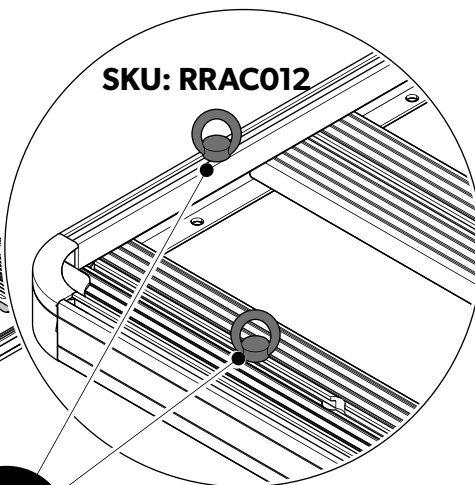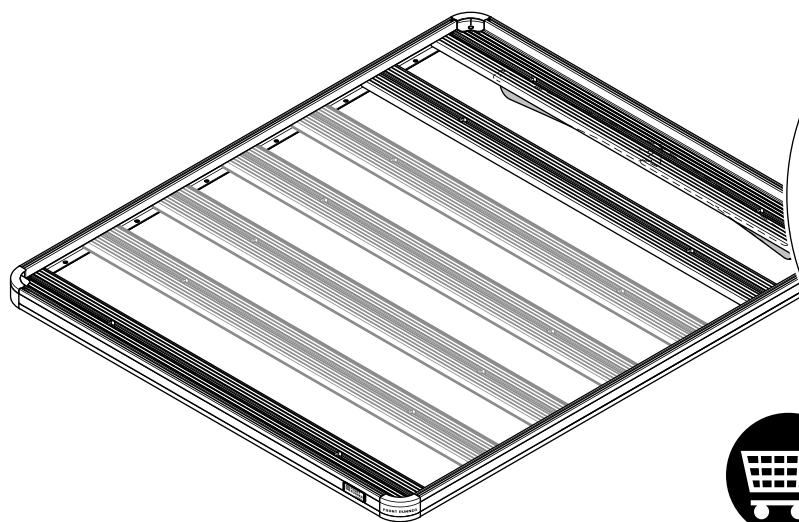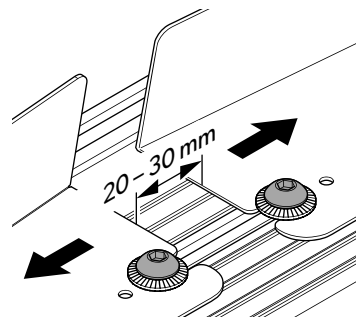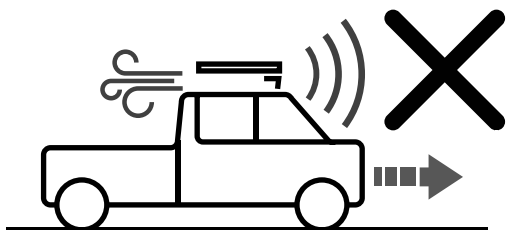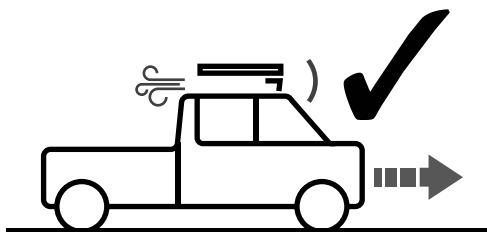

<http://qr.dometic.com/bfz9ll>





**dometic.com**

---

## **YOUR LOCAL DEALER**

**dometic.com/dealer**

## **YOUR LOCAL SUPPORT**

**dometic.com/contact**

## **YOUR LOCAL SALES OFFICE**

**dometic.com/sales-offices**