











**FRONT
RUNNER**
↗ DOMETIC



Slimline II Tray

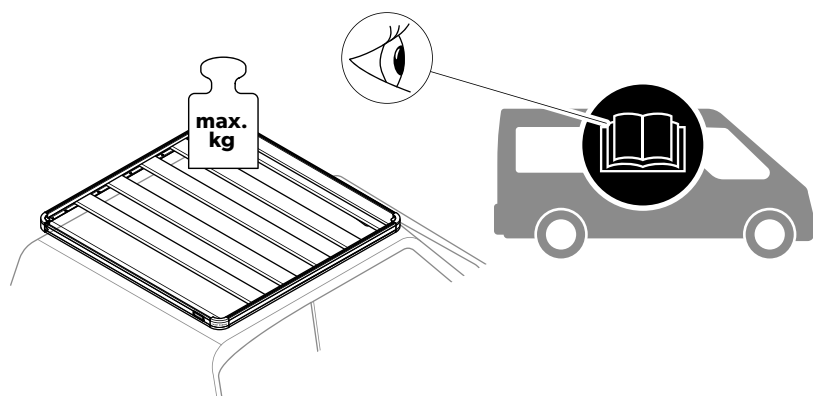


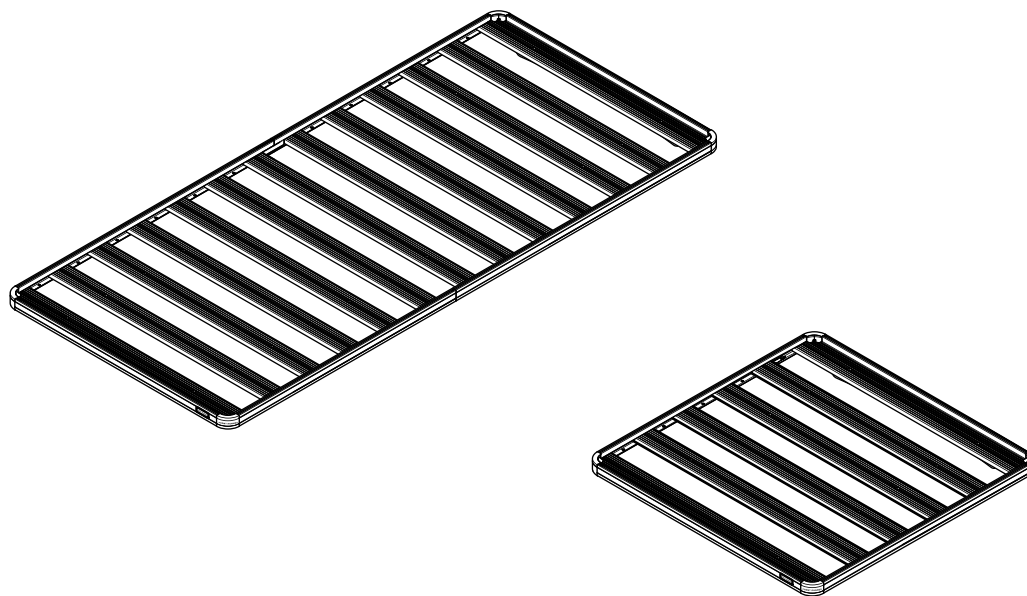

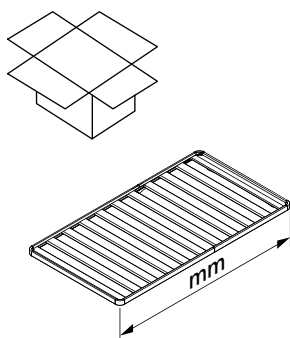
		1	2	3	4	5	6	7	8	9	10	11			
									 M8 x 45	 M8	 M8 x 25	 M6 x 10			
3 Slat	550	2x	–	2x	1	4x	–	–	–	–	6	4x			
4 Slat	752				2						8				
5 Slat	954	–	2x		3						10				
6 Slat	1156				4						12				
7 Slat	1358				5						14				
8 Slat	1560				6		2x	2x	4x	4x	16				
9 Slat	1762				7						18				
10 Slat	1964	2x			8						20				
11 Slat	2166				9						22				
12 Slat	2366	–	4x		10						24				
13 Slat	2570				11						26				
14 Slat	2772				12						28				

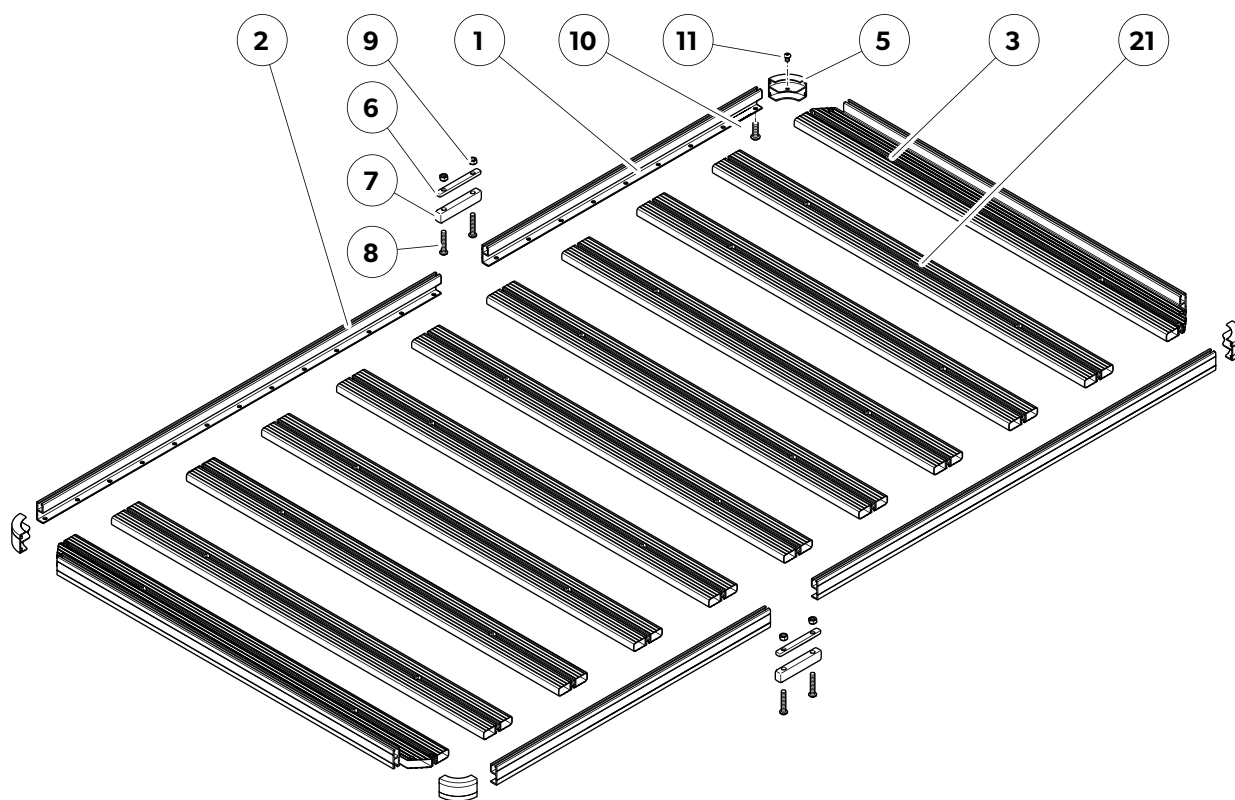


12	13	14	15	16
4x	4x	4x		
M8 x 12	M8	M8		
				

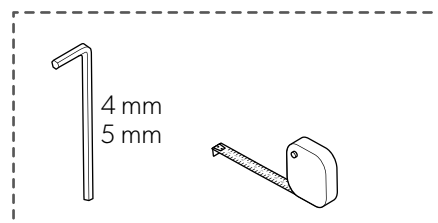


12 Slat / 13 Slat
14 Slat

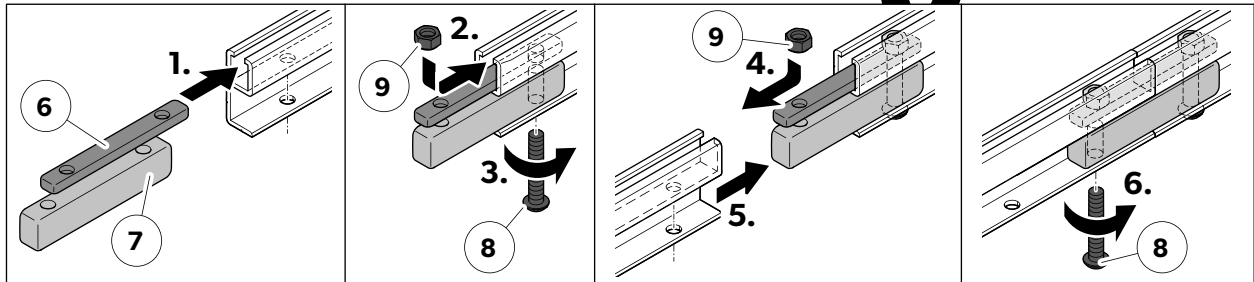


3

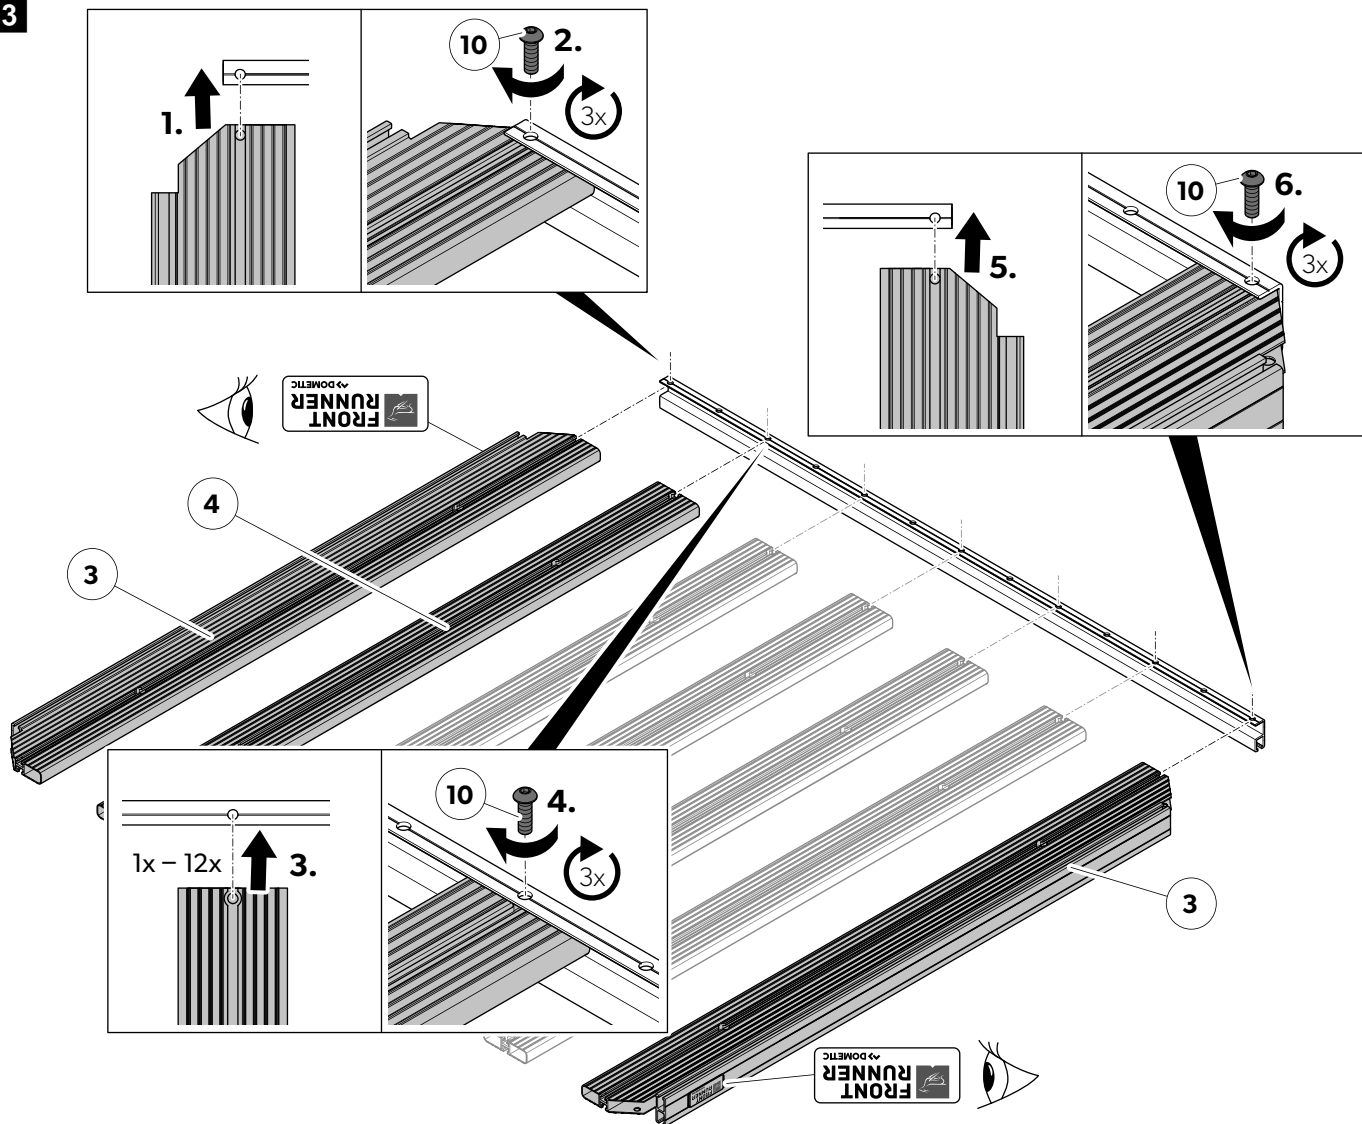


4

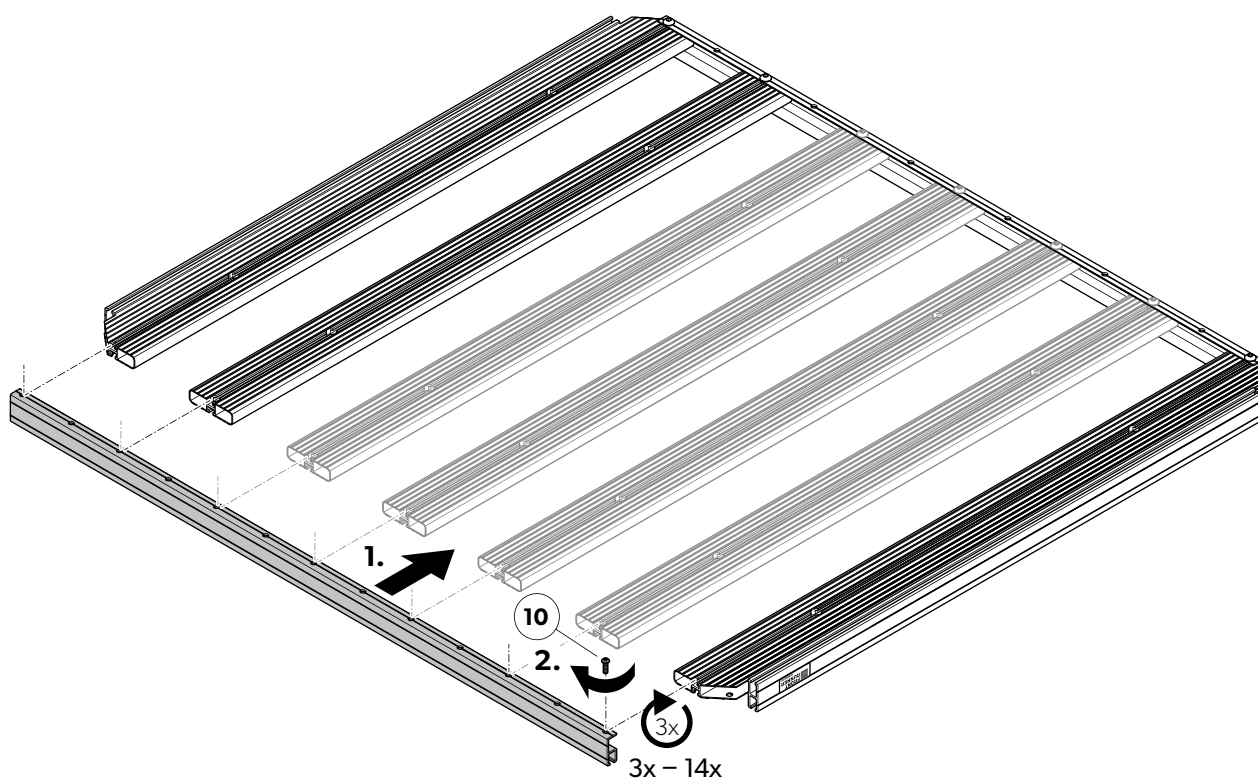

5


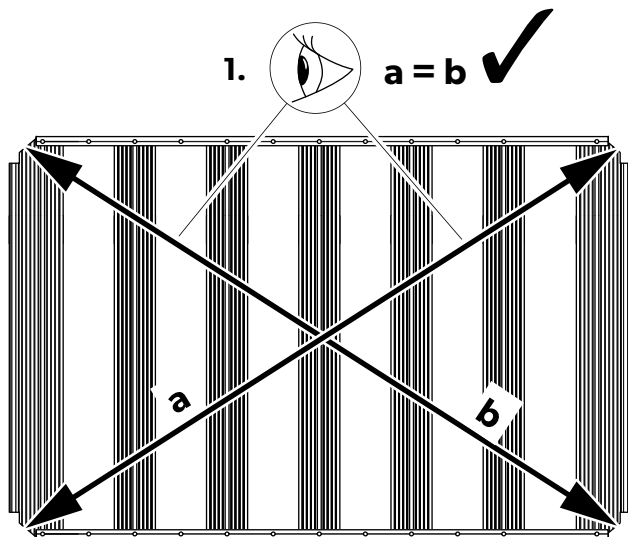


2.

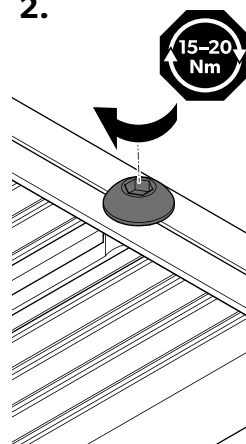

3 Slat	6x
4 Slat	8x
5 Slat	10x
6 Slat	12x
7 Slat	14x
8 Slat	16x
9 Slat	18x
10 Slat	20x
11 Slat	22x
12 Slat	24x
13 Slat	26x
14 Slat	28x

6

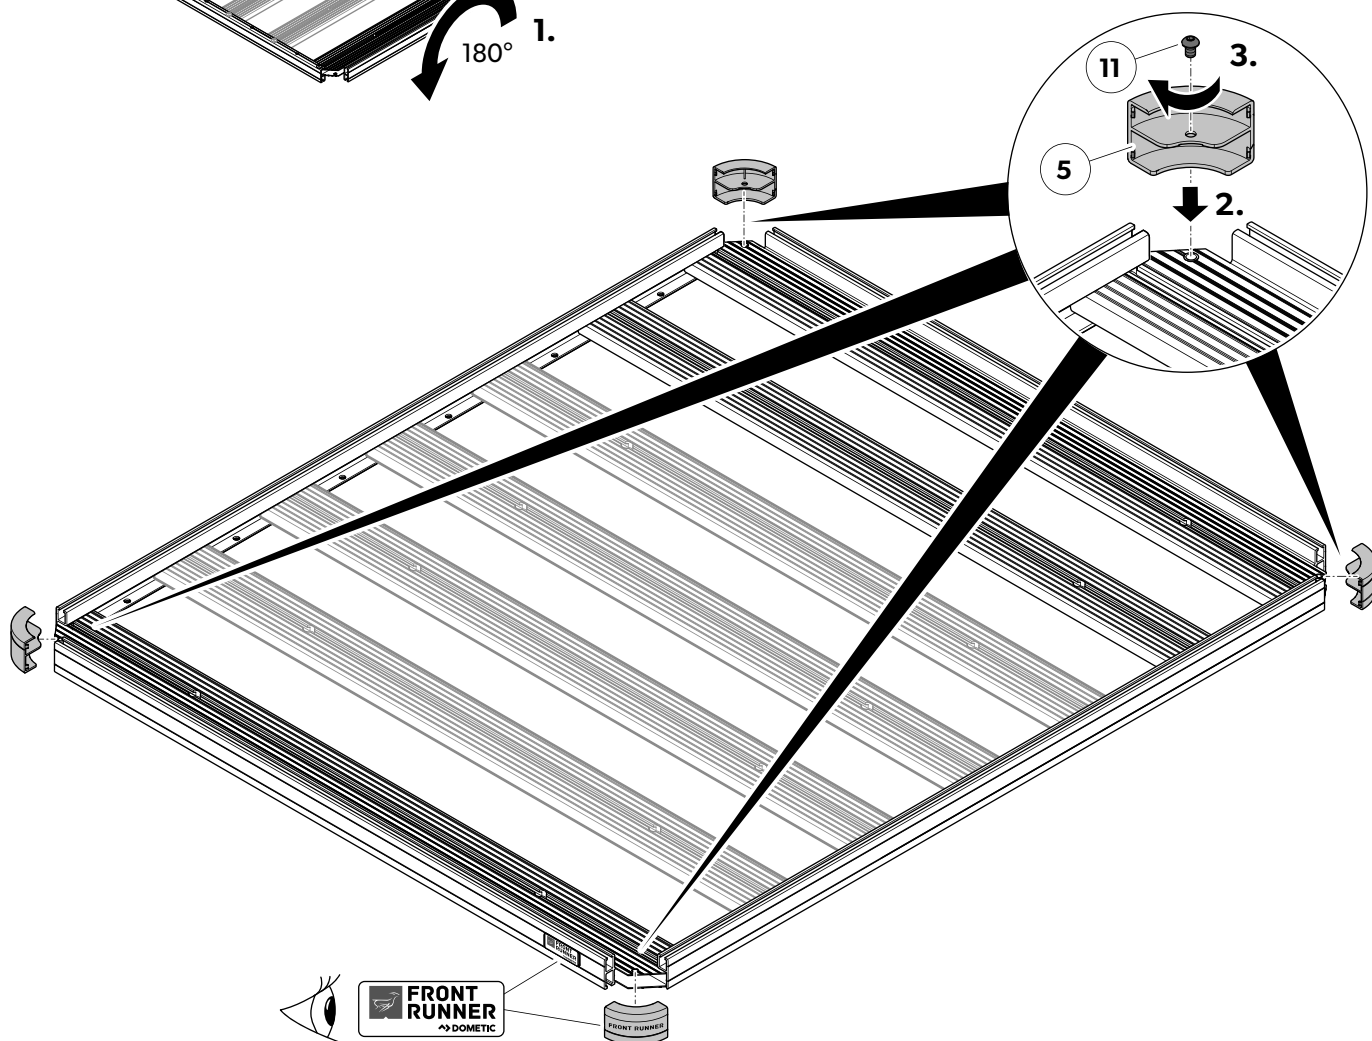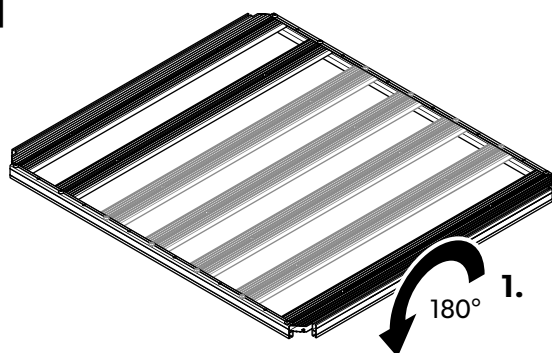

7

1. 180°

5.

2.

3.

3x

12

14

13


4.

FRONT RUNNER


8





Diagram 8 illustrates the process of attaching the front panel (15) to the frame (16). The main view shows the front panel being lowered into the frame, with arrows 3 and 4 indicating the direction of movement. An inset shows a close-up of the attachment mechanism: a screw (12) is inserted into a hole (14) in the panel, and a washer (13) is placed over it. A checkmark indicates the correct orientation. Arrows 1 and 2 show the sequence of steps, and '3x' indicates that this should be repeated three times.

9

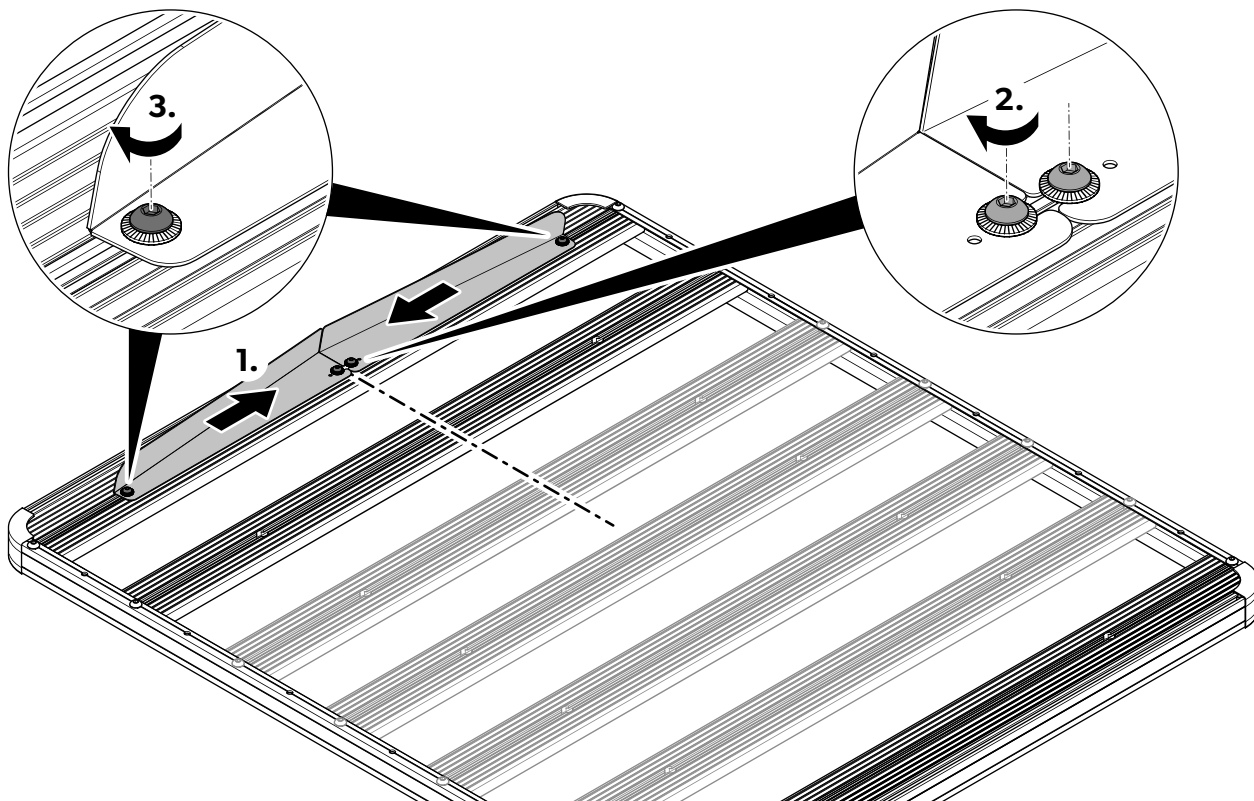

10

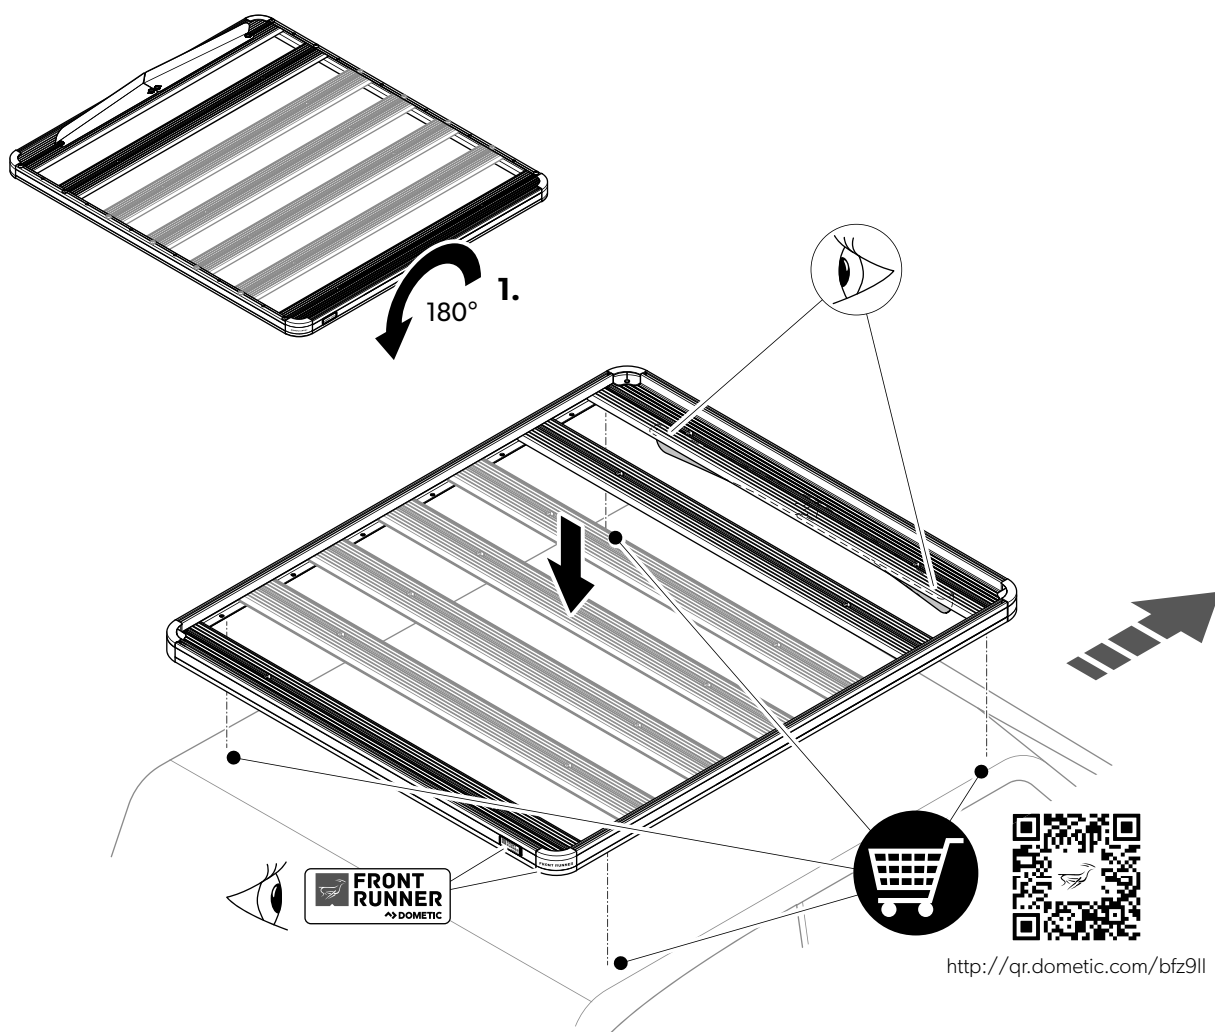

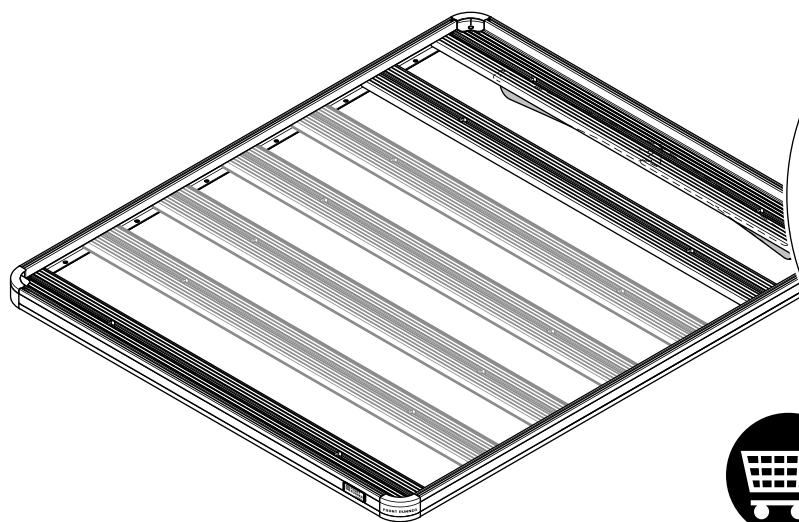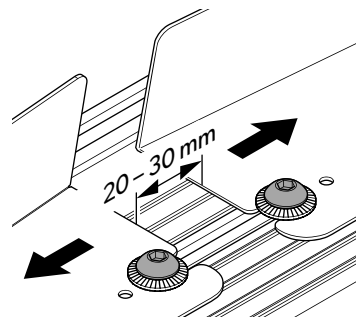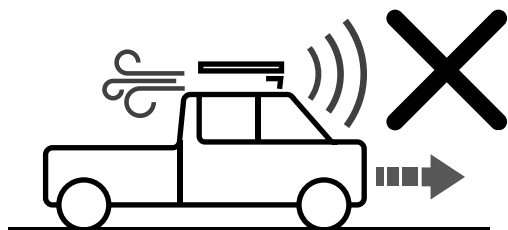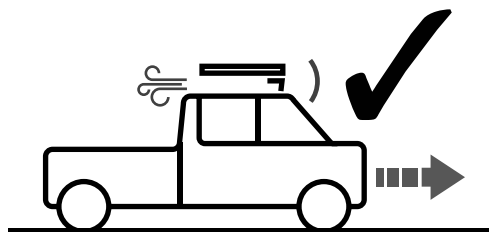

SKU: RRAC012



<http://qr.dometic.com/bfz9ll>



dometic.com

YOUR LOCAL DEALER

dometic.com/dealer

YOUR LOCAL SUPPORT

dometic.com/contact

YOUR LOCAL SALES OFFICE

dometic.com/sales-offices